




## **SID-X1NBP** (for SID-X1N) **SID-X2NBP** (for SID-X2N) **SID-X3NBP** (for SID-X3N) Black Front Panel Replacement kit

Congratulations on purchasing your Kramer **SID-X1NBP/SID-X2NBP/SID-X3NBP** Black Front Panel Replacement kit which is used to replace the gray colored front panel with a black one so it can blend into the **T10-22M** inner frame of the **TBUS-10xI** or the **T6F-03M** inner frame of the **TBUS-6xI**.

The kit includes a black **SID-X1NBP/SID-X2NBP/SID-X3NBP** front panel and an Allen L shaped key. Note that these instructions refer to the **SID-X1N** but also apply, similarly, to the **SID-X2N** and **SID-X3N** black panels.

To replace the front panel of the **SID-X1N**:

1. Remove the two front panel screws on the **SID-X1N** with the Allen L-shaped key (supplied).
2. Remove all the hexagonal spacers using a 5mm socket spanner wrench (not supplied).
3. Remove the original front panel and replace with the new **SID-X1NBP** black front panel.
4. Replace the hexagonal spacers and tighten with the socket spanner wrench.
5. Replace the two front panel screws and tighten with the Allen L shaped key.

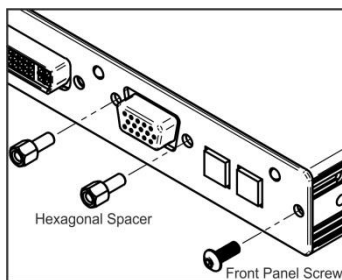

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this sheet may be found.

**We welcome your questions, comments, and feedback.**

Web site: [www.kramerelectronics.com](http://www.kramerelectronics.com)

E-mail: [info@kramerel.com](mailto:info@kramerel.com)



KRAMER ELECTRONICS LTD.

P/N: 2900-300426 REV 1



P/N: 2900-300426



Rev: 1