











USER MANUAL



**DCX-2x1-HC10
DCX-3x1-HC20
DCX-3x1-HC21**

Universal Switcher

Bookmark Page

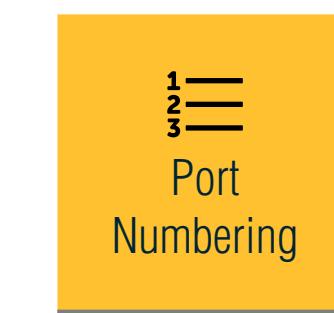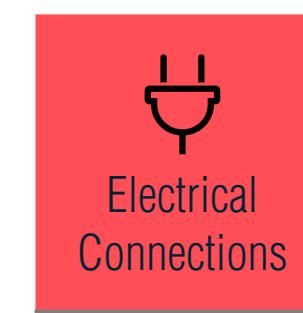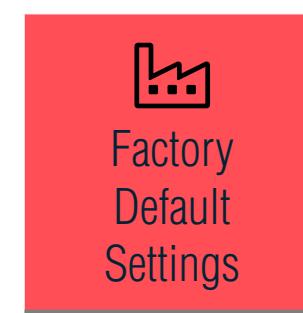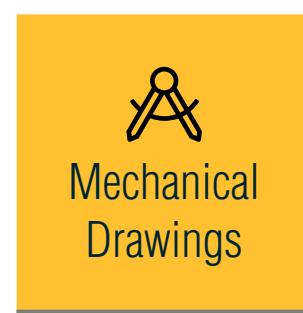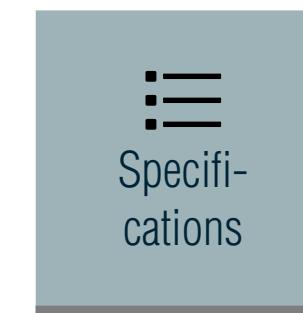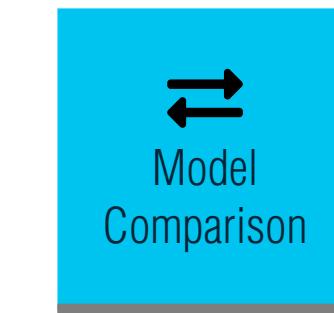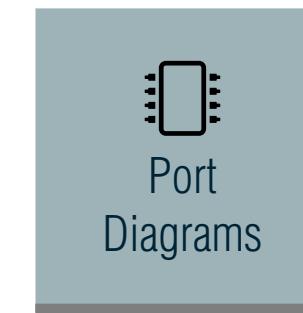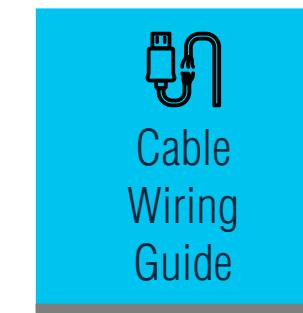

Important Safety Instructions


Class II apparatus construction.

The equipment should be operated only from the power source indicated on the product.

To disconnect the equipment safely from power, remove the power cord from the rear of the equipment, or from the power source. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

There are no user-serviceable parts inside of the unit. Removal of the cover will expose dangerous voltages. To avoid personal injury, do not remove the cover. Do not operate the unit without the cover installed.

The appliance must be safely connected to multimedia systems. Follow instructions described in this manual.

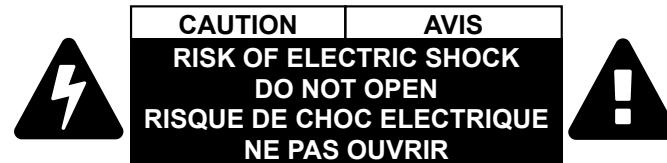

Ventilation


For the correct ventilation and to avoid overheating, ensure enough free space around the appliance. Do not cover the appliance, leave the ventilation holes free and never block or bypass the ventilators (if there are any).

WARNING

To prevent injury, the apparatus is recommended to be securely attach to the floor/wall, or mounted in accordance with the installation instructions. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus. No naked flame sources, such as lit candles, should be placed on the apparatus.

Waste Electrical & Electronic Equipment (WEEE)

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

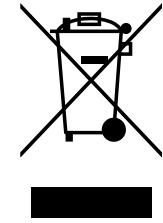

CAUTION

The device contains a BR1632A button battery, which supplies power to the clock when the device is not powered on. Danger of explosion if battery is replaced incorrectly. Replace only with the same or equivalent type.

WARNING

Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours, and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Common Safety Symbols

Symbol	Description
	Direct current
	Alternating current
	Protective conductor terminal
	Equipotential Connector
	On (Power)
	Off (Power)
	Double insulation
	Caution, possibility of electric shock
	Caution
	Laser radiation
	Warning, Rotating fan
	Caution: for indoor use only

Table of Contents

1. INTRODUCTION.....	9	4.4.1. Power Data Objects (USB-C).....	28	6.4. RUNNING THE LDC.....	50
1.1. DESCRIPTION	10	4.5. USB-C CABLE RECOMMENDATION.....	29	6.5. ESTABLISHING THE CONNECTION	50
1.2. BOX CONTENTS	11	4.6. CONNECTING STEPS.....	29	6.6. BULK DEVICE MANAGEMENT	52
1.3. FEATURES OF THE DEVICE.....	12	5. DEVICE CONCEPT	30	6.6.1. Network Settings.....	52
1.4. MODEL COMPARISON.....	13	5.1. UNIVERSAL SWITCHER CONCEPT.....	31	6.6.2. Device Configuration.....	53
2. PRODUCT OVERVIEW.....	14	5.2. USB INTERFACE	31	6.7. VIDEO & AUDIO CROSSPOINT	54
2.1. DCX-2x1-HC10	15	5.2.1. USB-C Interface	31	6.7.1. Port Tiles.....	55
2.1.1. Front View	15	5.2.2. USB Service Ports - USB 2.0 Interface	32	6.8. PORT PROPERTIES WINDOW	55
2.1.2. Rear View	15	5.3. VIDEO INTERFACE	32	6.8.1. USB-C Inputs.....	56
2.2. DCX-3x1-HC20	16	5.3.1. Video Port Diagrams	32	6.8.2. HDMI Video Input	57
2.2.1. Front View	16	5.3.2. DisplayPort Alternate Mode.....	33	6.8.3. HDMI Video Output	58
2.2.2. Rear View	16	5.3.3. DisplayPort Alternate Mode and USB 3.x Mixed	34	6.8.4. Embedded Audio Input.....	60
2.3. DCX-3x1-HC21	17	5.4. THE AUTOSELECT FEATURE	34	6.8.5. Analog Audio Output	60
2.3.1. Front View	17	5.5. AUDIO INTERFACE.....	35	6.8.6. Frame Detector	61
2.3.2. Rear View	17	5.5.1. Analog Audio Interface	36	6.9. CEC TOOL.....	61
3. FRONT PANEL CONTROL.....	18	5.6. ETHERNET INTERFACE.....	36	6.10. EDID MENU.....	62
3.1. BUTTON FUNCTIONALITY.....	19	5.7. LIGHTWARE ADVANCED ROOM AUTOMATION (LARA)	37	6.10.1. EDID Operations	63
3.1.1. Video Source Selection	19	5.7.1. Opening the LARA interface	37	6.10.2. EDID Summary Window	63
3.1.2. Enabling DHCP IP Address	19	5.7.2. Running LARA.....	37	6.10.3. Editing an EDID	64
3.1.3. Reset to Factory Default Settings.....	20	5.7.3. Downloading/Uploading a Configuration	38	6.10.4. Creating an EDID - Easy EDID Creator	64
3.1.4. Control Lock.....	20	5.7.4. Status Board	38	6.11. CONTROL MENU	65
3.2. STATUS LEDs	20	5.7.5. Touch Panel Support.....	38	6.11.1. Ethernet.....	65
3.2.1. Front Panel LEDs	20	5.8. BASIC NETWORK SECURITY	39	6.11.2. GPIO	65
3.2.2. Rear Panel LEDs	21	5.8.1. HTTP/HTTPS	39	6.11.3. OCS - Occupancy Sensor	66
3.2.3. Ethernet Status LEDs (DCX-2x1-HC10 and DCX-3x1-HC20).....	21	5.8.2. Encryption (HTTPS, WSS)	40	6.11.4. RS-232.....	66
3.2.4. Ethernet Status LEDs (DCX-3x1-HC21).....	21	5.9. 802.1X AUTHENTICATION.....	41	6.12. SETTINGS MENU	67
4. INSTALLATION.....	22	5.10. ADVANCED ETHERNET SECURITY	42	6.12.1. Status	67
4.1. MOUNTING OPTIONS	23	5.10.1. Room LAN.....	42	6.12.2. Network	68
4.1.1. 1U High Rack Shelf	23	5.11. BULK DEVICE MANAGEMENT	43	6.12.3. Services	70
4.1.2. Mounting Plate F100 (and PSU F100/F110)	23	5.11.1. Network Settings	43	6.12.4. System	72
4.1.3. C-Lock	24	5.11.2. Device Configuration.....	43		
4.2. ELECTRICAL CONNECTIONS.....	25	5.12. SERIAL INTERFACE.....	44		
4.2.1. HDMI Input and Output Ports	25	5.12.1. Serial Port Diagram	44		
4.2.2. USB Connectors	25	5.13. GPIO INTERFACE	45		
4.2.3. Analog Stereo Audio	25	5.14. OCS INTERFACE	45		
4.2.4. Secure Control LAN, Utility AV LAN, Configurable Ethernet Port	25	5.15. FURTHER BUILT-IN FEATURES	45		
4.2.5. OCS Connector	26	5.15.1. Device Cloning – Configuration Backup and Restore	45		
4.2.6. GPIO - General Purpose Input/Output Ports	26	5.15.2. Remote System Logging.....	46		
4.2.7. RS-232 Connector	27	6. SOFTWARE CONTROL OPTIONS	47		
4.3. POWERING OPTIONS	27	6.1. SOFTWARE CONTROL MODES	48		
4.4. POWER DELIVERY OVER TYPE-C	28	6.2. USING THE BUILT-IN WEB	49		
		6.3. INSTALL AND UPDATE THE LDC.....	49	7. LIGHTWARE REST API REFERENCE	74
				7.1. OVERVIEW	75
				7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	75
				7.2.1. Web Browser Plugins	75
				7.2.2. Third-party API Platform	76
				7.2.3. Terminal Application	76
				7.3. PROTOCOL RULES	78
				7.3.1. Command Structure Example	78
				7.3.2. General Rules	78
				7.3.3. Legend for the Control Commands	78
				7.3.4. Lightware REST API vs. LW3 Protocol	78
				7.3.5. Method Types	79

7.3.6. Supported Commands.....	79	7.9.3. Setting the Autoselect Operation Mode.....	89	7.14.4. Setting the Gateway for Static IP on the Room LAN.....	101
7.3.7. Not Supported Commands.....	79	7.9.4. Locking the Audio Port.....	89	7.15. SERIAL PORT CONFIGURATION	102
7.3.8. Status Codes, Error Messages	79	7.9.5. Muting the Audio Port 1.....	90	7.15.1. BAUD Rate Setting.....	102
7.3.9. Polling	80	7.9.6. Muting the Audio Port 2.....	90	7.15.2. Stop Bits Setting.....	102
7.4. REST API SECURITY	80	7.9.7. Querying the Audio Signal Presence.....	90	7.15.3. Querying the Data Bits	102
7.4.1. Authentication	80	7.9.8. Analog Audio Output Volume (dB) Setting	91	7.15.4. Parity Setting	102
7.4.2. Encryption (HTTPS).....	80	7.9.9. Analog Audio Output Volume Percent Setting	91	7.15.5. Querying the Serial over IP Port Number.....	103
7.5. SYSTEM COMMANDS	80	7.9.10. Setting the Balance	91	7.15.6. Enabling the Serial over IP Port	103
7.5.1. Setting the Device Label	80	7.9.11. Analog Audio Output Level Setting by Steps (dB)	91	7.16. SERIAL PORT MESSAGING	103
7.5.2. Resetting the Device.....	80	7.9.12. Analog Audio Output Level Setting by Steps in Percent	92	7.16.1. Sending a Message via RS-232	103
7.5.3. Restoring the Factory Default Settings	80	7.9.13. Analog Audio Output Balance Setting by Steps	92	7.17. GPIO PORT CONFIGURATION	104
7.5.4. Querying the Firmware Package Version.....	81	7.10. USB PORT SETTINGS - USB-C RELATED COMMANDS	92	7.17.1. Setting the Direction of a GPIO Pin	104
7.5.5. Control Lock.....	81	7.10.1. Setting the Displayport Alternate Mode Policy.....	92	7.17.2. Setting the Output Level of a GPIO Pin	104
7.5.6. Setting the Current Time.....	81	7.10.2. Querying the Host Alternate Mode Support	93	7.17.3. Setting the Output Level for a Specified Time.....	104
7.5.7. Identifying the Device.....	81	7.10.3. Querying the Status of the Alternate Mode	93	7.17.4. Toggling the Level of a GPIO Pin	104
7.5.8. Toggling the Dark Mode Setting.....	81	7.10.4. Querying the Port Data Role	93	7.18. OCS PORT CONFIGURATION	105
7.5.9. Setting the Delay of the Dark Mode.....	82	7.10.5. Querying the Port Power Role	93	7.18.1. Querying the Input Level of an OCS Pin	105
7.5.10. Enabling Remote System Logging	82	7.10.6. Setting the Port Power Role.....	94	7.18.2. Setting the Sensor Type	105
7.5.11. Setting the Remote Server Address	82	7.11. EDID MANAGEMENT	94	7.18.3. Querying the Reported OCS State	105
7.5.12. Setting the Protocol for the Remote System Logging	83	7.11.1. Querying the Emulated EDIDs.....	94	7.19. UPDATING THE DEVICE VIA REST API	106
7.5.13. Setting the Format of the Remote System Logging.....	83	7.11.2. Querying the Validity of a Dynamic EDID	94	7.19.1. Querying the Update REST API Version	106
7.5.14. Setting the Port for Remote System Logging.....	83	7.11.3. Querying the Preferred Resolution of a User EDID.....	94	7.19.2. The Updating Process	106
7.6. VIDEO PORT SETTINGS - GENERAL	84	7.11.4. Emulating an EDID to an Input Port.....	95	7.19.3. Uploading the Package	107
7.6.1. Switching the Video Input.....	84	7.11.5. Emulating an EDID to All Input Ports	95	7.19.4. Configuration Parameters – Keep the Current Settings	107
7.6.2. Switching an Input to All Outputs.....	84	7.11.6. Copying an EDID to User Memory	95	7.19.5. Executing the Update	108
7.6.3. Locking the Video Port.....	84	7.11.7. Deleting an EDID from User Memory	95	7.19.6. Querying the State of the Updating Process	108
7.6.4. Muting the Video Port	84	7.11.8. Resetting the Emulated EDIDs.....	96	7.20. LIGHTWARE REST API QUICK SUMMARY	109
7.6.5. Setting the Autoselect Policy.....	85	7.12. ETHERNET PORT CONFIGURATION	96		
7.6.6. Changing the Autoselect-Included Input Ports.....	85	7.12.1. Setting the DHCP State.....	96		
7.6.7. Changing the Input Port Priority	85	7.12.2. Changing the IP Address (Static)	97		
7.6.8. Querying the Connected Source.....	85	7.12.3. Changing the Subnet Mask (Static)	97		
7.6.9. Query the Video Signal Presence	86	7.12.4. Changing the Gateway Address (Static)	97		
7.6.10. HDCP Setting (Input Port).....	86	7.12.5. Applying the Network Settings	98		
7.6.11. HdcpMode	86	7.12.6. Setting the Hostname	98		
7.6.12. Querying the Embedded Audio Presence	86	7.13. NETWORK SECURITY	98		
7.6.13. Muting the Embedded Audio	87	7.13.1. Enabling/Disabling the Ethernet Port	98		
7.6.14. Setting the Output Signal Type	87	7.13.2. Querying the Network Service Port Number	98		
7.6.15. Turning on Output 5V	87	7.13.3. Enabling/Disabling the Network Service Port	99		
7.7. VIDEO PORT SETTINGS - USB-C RELATED COMMANDS	87	7.13.4. Querying the Username for Authentication	99		
7.7.1. Restarting the Link Training	87	7.13.5. Setting a Password for Authentication	99		
7.8. CEC COMMAND SENDING	88	7.13.6. Enabling the Authentication	100		
7.8.1. Simple CEC Code Sending	88	7.14. ADVANCED ETHERNET SECURITY	100		
7.8.2. Remote Control Code Sending	88	7.14.1. Setting the VLAN Membership	100		
7.9. AUDIO PORT SETTINGS	89	7.14.2. Setting the VLAN ID	101		
7.9.1. Switching the Audio Input.....	89	7.14.3. Setting the Static IP Address for the Room LAN.....	101		
7.9.2. Querying the Connected Source.....	89	8.5. SYSTEM COMMANDS	119		
		8.5.1. Setting the Device Label	119		
		8.5.2. Resetting the Device	119		

8.5.3. Restoring the Factory Default Settings	119	8.9.12. Analog Audio Output Level Setting by Steps (dB)	130	8.17.1. Querying the Direction of a GPIO Pin	139
8.5.4. Querying the Firmware Package Version.....	119	8.9.13. Analog Audio Output Level Setting by Steps in Percent	130	8.17.2. Setting the Direction of a GPIO Pin	139
8.5.5. Control Lock.....	119	8.9.14. Analog Audio Output Balance Setting by Steps	130	8.17.3. Querying the Output Level of a GPIO Pin	139
8.5.6. Setting the Current Time.....	119	8.10. USB PORT SETTINGS - USB-C RELATED COMMANDS	131	8.17.4. Setting the Output Level of a GPIO Pin	140
8.5.7. Identifying the Device.....	120	8.10.1. Setting the Displayport Alternate Mode Policy.....	131	8.17.5. Setting the Output Level for a Specified Time.....	140
8.5.8. Toggling the Dark Mode Setting.....	120	8.10.2. Querying the Host Alternate Mode Support	131	8.17.6. Toggling the Level of a GPIO Pin.....	140
8.5.9. Setting the Delay of the Dark Mode Setting.....	120	8.10.3. Querying the Status of the Alternate Mode	131	8.18. OCS PORT CONFIGURATION.....	140
8.5.10. Enabling Remote System Logging	120	8.10.4. Querying the Port Data Role	131	8.18.1. Querying the Input Level of an OCS Pin	140
8.5.11. Setting the Remote Server Address	120	8.10.5. Querying the Port Power Role	132	8.18.2. Setting the Sensor Type	140
8.5.12. Setting the Protocol for the Remote System Logging	121	8.10.6. Setting the Port Power Role.....	132	8.18.3. Querying the Reported OCS State	141
8.5.13. Setting the Format of the Remote System Logging.....	121	8.11. EDID MANAGEMENT	132	8.19. LW3 COMMANDS - QUICK SUMMARY	142
8.5.14. Setting the Port for Remote System Logging.....	121	8.11.1. Querying the Emulated EDIDs.....	132	9. FIRMWARE UPDATE	146
8.6. VIDEO PORT SETTINGS - GENERAL.....	122	8.11.2. Querying the Validity of a Dynamic EDID	132	9.1. INTRODUCTION	147
8.6.1. Switching Video Input	122	8.11.3. Querying the Preferred Resolution of a User EDID	132	9.2. PREPARATION	147
8.6.2. Locking the Video Port.....	122	8.11.4. Emulating an EDID to an Input Port.....	133	9.2.1. About the Firmware Package (LFP2 File)	147
8.6.3. Muting the Video Port	122	8.11.5. Emulating an EDID to All Input Ports	133	9.2.2. LDU2 Installation	147
8.6.4. Setting the Autoselect Policy.....	122	8.11.6. Copying an EDID to User Memory	133	9.3. RUNNING THE SOFTWARE	148
8.6.5. Changing the Autoselect Included Input Ports	122	8.11.7. Deleting an EDID from User Memory	133	9.4. UPDATING VIA GUI	149
8.6.6. Changing the Input Port Priority	123	8.11.8. Resetting the Emulated EDIDs.....	134	9.5. COMMAND LINE INTERFACE (CLI)	151
8.6.7. Querying the Connected Source.....	123	8.12. ETHERNET PORT CONFIGURATION	134	9.5.1. How to Run	151
8.6.8. Querying the Video Signal Presence	123	8.12.1. Setting the DHCP State.....	134	9.5.2. How to Use.....	151
8.6.9. HDCP Setting (Input Port).....	123	8.12.2. Changing the IP Address (Static)	134	9.6. CLI COMMANDS	151
8.6.10. HdcpMode	123	8.12.3. Changing the Subnet Mask (Static)	135	9.6.1. Help	151
8.6.11. OutputSignalType	124	8.12.4. Changing the Gateway Address (Static).....	135	9.6.2. LDU2 Version	152
8.6.12. EmbeddedAudioPresent	124	8.12.5. Applying the Network Settings	135	9.6.3. Check For New LDU2 Version	152
8.6.13. EmbeddedAudioMute	124	8.12.6. Setting the Host Name.....	135	9.6.4. Device Info	153
8.6.14. Output5VMode	124	8.13. NETWORK SECURITY	136	9.6.5. Update	153
8.6.15. HDCP Capability (Output Port)	124	8.13.1. Enabling/Disabling the Ethernet Port	136	9.6.6. Package Options	154
8.6.16. HDCP Setting (Output Port)	125	8.13.2. Querying the Service Port Number	136	9.6.7. Complex Example	154
8.7. VIDEO PORT SETTINGS - USB-C RELATED COMMANDS	125	8.13.3. Enabling/Disabling the Service Port	136	9.6.8. Exit Codes	154
8.7.1. Restarting the Link Training	125	8.13.4. Querying the Username for Authentication	136	9.7. UPDATING VIA REST API	155
8.8. CEC COMMAND SENDING	126	8.13.5. Setting a Password for Authentication	136	9.8. IF THE UPDATE IS NOT SUCCESSFUL	155
8.8.1. Simple CEC Code Sending	126	8.13.6. Enabling the Authentication	137	10. TROUBLESHOOTING	156
8.8.2. Remote Control Code Sending	126	8.13.7. Restarting the Network Services	137	10.2. USE CASE STUDIES	157
8.9. AUDIO PORT SETTINGS.....	128	8.14. ADVANCED ETHERNET SECURITY	137	10.3. HOW TO SPEED UP THE TROUBLESHOOTING PROCESS?	158
8.9.1. Switching the Audio Input.....	128	8.14.1. Setting the VLAN Membership	137	11. TECHNOLOGIES	159
8.9.2. Querying the Connected Source.....	128	8.14.2. Setting the VLAN ID	137	11.1. EDID MANAGEMENT	160
8.9.3. Querying the Connected Destinations	128	8.14.3. Setting the Static IP Address for the Room LAN	138	11.1.1. Understanding the EDID	160
8.9.4. Setting the Autoselect Operation Mode.....	128	8.14.4. Setting the Gateway for Static IP on the Room LAN	138	11.1.2. Advanced EDID Management	160
8.9.5. Setting the Followed Video Port to Autoselect.....	128	8.15. SERIAL PORT CONFIGURATION	138	11.2. HDCP MANAGEMENT	161
8.9.6. Muting the Audio Port 1	129	8.15.1. BAUD Rate Setting	138	11.2.1. Protected and Unprotected Content	161
8.9.7. Muting the Audio Port 2	129	8.15.2. Stop Bits Setting	138	11.2.2. Disable Unnecessary Encryption	161
8.9.8. Querying the Audio Signal Presence	129	8.15.3. Querying the Data Bits	139	11.2.3. HDCP 2.2	162
8.9.9. Analog Audio Output Volume (dB) Setting	129	8.15.4. Parity Setting	139	11.3. PIXEL ACCURATE RECLKING	163
8.9.10. Analog Audio Output Volume Percent Setting	129	8.16. SENDING A MESSAGE VIA RS-232	139		
8.9.11. Setting the Balance	130	8.17. GPIO PORT CONFIGURATION	139		

12. APPENDIX	164
12.1. SPECIFICATIONS	165
12.2. PORT NUMBERING	167
12.3. APPLIED PORTS (NETWORK SETTINGS)	167
12.4. FACTORY EDID LIST	168
12.5. CABLE WIRING GUIDE	170
12.5.1. Serial Ports	170
12.5.2. Audio Ports	170
12.5.3. OCS Sensor	170
12.6. MECHANICAL DRAWINGS	171
12.7. CONTENT OF THE BACKUP FILE	172
12.8. FACTORY DEFAULT SETTINGS	173
12.9. FIRMWARE RELEASE NOTES	174
12.10. KNOWN ISSUES	176
12.11. HASHTAG KEYWORD LIST	177
12.12. FURTHER DOCUMENT INFORMATION	178
12.13. LIMITED WARRANTY STATEMENT	178

Applied SW/FW/HW Environment

All presented functions refer to the indicated products. The descriptions have been made while testing these functions in accordance with the indicated Hardware/Firmware/Software environment:

Item	Version
FW package	v2.21.0
Lightware Device Controller (LDC) version	v2.20.0b3
Lightware Device Updater V2 (LDU2) version	v2.35.0b6

Document Revision History

Rev.	Release date	Changes	Editor
1.0	2025-06-20	Initial release, separated from Taurus UCX User Manual	Nikolett Keindl
1.2	2025-09-24	5K capability added, Room LAN functionality added, HDMI 5V power output parameters added, minor corrections	Nikolett Keindl
v2	2025-11-13	DCX-3x1-HC21 model added, Factory default password information added, New document template introduced, minor corrections	Nikolett Keindl

Contact Us

sales@lightware.com

+36 1 255 3800

support@lightware.com

+36 1 255 3810

Lightware Visual Engineering PLC.

Gizella 51-57, Budapest H-1143, Hungary

www.lightware.com

©2025 Lightware Visual Engineering. All rights reserved.

All trademarks mentioned are the property of their respective owners.

Specifications are subject to change without notice.

1

Introduction

Thank you for choosing Lightware's Taurus DCX-series devices. In the first chapter we would like to introduce the device, highlighting the most important features in the sections listed below:

- ▶ Description
- ▶ Box Contents
- ▶ Features of the Device
- ▶ Model Comparison

10
11
12
13

1.1. Description


Lightware's universal switcher enhances and extends the possibilities of a meeting room and allows meeting participants to easily use their own devices such as laptops and preferred video conference platforms, while also utilizing the available assets of the meeting space, for example HDMI displays, room cameras and other USB peripherals.

The device utilizes the USB-C connectivity for a simplified transmission of 4K video, audio, control signals and power, and allows data speeds of up to 5 Gbps under the USB 3.1 Gen1 and allowing video resolution capabilities up to 4K@60Hz at 4:4:4.

The device is designed to be a centerpiece of any collaboration space, and can be connected to USB peripherals via USB-A type connectors. The series allows the hosts to be connected to the system and also ensures quick and easy switching between these hosts, making this universal switcher a perfect fit for smaller meeting areas, involving 6-12 people.



Model Denomination

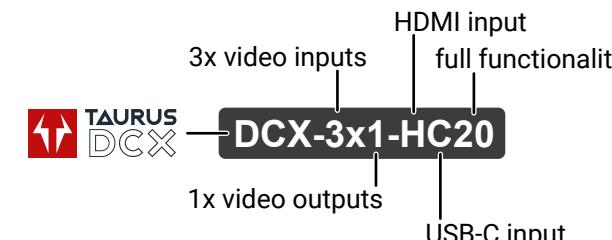

About the Serial Number

Lightware devices contain a label indicating the unique serial number of the product. The structure is the following:

7A000941 6-digit running sequence number

1: Jan	4: Apr	7: Jul	A: Oct
2: Feb	5: May	8: Aug	B: Nov
3: Mar	6: Jun	9: Sep	C: Dec

Year of the manufacturing:	A=2020	D=2023
(A-Y)	B=2021	E=2024
	C=2022	

From 1st of October 2024, serial number format of Lightware devices is the following: the first two digits are of the year of manufacture, while the remaining digits make up the running sequence number.


24200001

Year of the manufacturing	6-digit running sequence number
---------------------------	---------------------------------

On any DCX series device manufactured after 1st of July 2025, you will find a sticker on the device with a QR code that contains all MAC addresses of the device, as well as the serial number.

For devices manufactured before this date, or any further information on expansion of the MAC Address list, please see the [MAC Addresses](#) section.

1.2. Box Contents

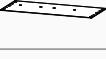		DCX-2x1-HC10	DCX-3x1-HC20	DCX-3x1-HC21
Supplied accessories	 Switcher unit	✓	✓	✓
	 24V Power Supply Unit with IEC power cable	✓	✓	✓
	 Phoenix combicon® 3-pole flat connector	✗	2x	2x
	 Phoenix combicon® 3-pole male connector	✗	✓	✓
	 Phoenix combicon® 5-pole connector	✓	✗	✗
	 Phoenix combicon® 8-pole connector	✗	✓	✓
	 USB 3.1 Type C (USB-C) to Type C (USB-C) Cable, 1m	✓	✓	✓
	 Safety & warranty info, Quick Start Guide	✓	✓	✓
	 2 pcs. of M3x4 flat head screw	✓	✓	✓
Optional accessories	 Button panels: RAP-B511 and TBP6	✓	✓	✓
	 Rack Shelf	✓	✓	✓
	 UD mounting plate F100	✓	✓	✓
	 UD Mounting PSU F100/F110	✓	✓	✓
	 C-Lock	✓	✓	✓

1.3. Features of the Device

Common Features



4K and 5K Video Support***

HDMI 2.0 signal switching supporting 5K 21:9 ultrawide displays (5120x2160@30Hz, RGB 4:4:4, 12 bits) as well as 4K@60Hz, RGB 4:4:4, 18Gbit/sec bandwidth.



Pixel Accurate Reclocking

Each output has a clean, jitter free signal, eliminating signal instability and distortion caused by long cables or connector reflections.



Frame Detector and Signal Analysis

The exact video and audio signal format can be determined such as timing, frequencies, scan mode, HDCP encryption, color range, color space and audio sample rate.



Autoselect Function for Video and USB Inputs

The Autoselect feature can sense the port status on the video input and USB Host ports and select them automatically. Priority number can be set for each input port, and the feature allows to set various modes for the automatic input selection (First detect, Last detect).



De-embedder Function

The analog audio can be de-embedded from HDMI inputs and it can be routed to the analog audio output.



HDCP-compliant

The switcher fulfills the HDCP standard. HDCP capability on the digital video inputs can be disabled when non-protected content is used.



Dark Mode

All illuminating elements of the front/rear panel can be switched on and off. This feature is useful in live-stage shows or other environments where flashing LEDs would be distracting.



Ethernet Control

Multiple simultaneous TCP/IP connections are available with a simple ASCII-based protocol for controlling or configuring the product, or to perform a firmware update.



These entry-level network security improvements help prevent unauthorized access to the Lightware device; HTTPS/WSS support, basic network authentication.



Bi-directional RS-232**

AV systems can also contain serial port controllers and controlled devices. Serial transmission supports any unit that works with standard RS-232.



GPIO Control Port

Six GPIO pins operating at TTL digital signal levels that can be controlled with LW3 commands. 5V is supplied over the 7th pin constantly, up to 500 mA.



Occupancy Sensor Connector

Occupancy sensor connection (with 24V power supply).



Lightware Rest API

The DCX switcher can be controlled through standard HTTP(S) requests to ensure the control functions from REST clients or terminal program.



Powered by LARA*

Future-proof room automation platform for system integrators so they can seamlessly and invisibly support people's collaboration to make the most out of their virtual or in-person meetings.



USB Type C Source Connection

USB Type C port ensures USB-C connectivity to the source device with USB 3.1 data and Displayport Alternate mode for video. It provides power delivery of up to 100 W for the connected device (e.g. BYOD laptop or smartphone).

* From FW version v2.11.0.

** Only in DCX-3x1-HC20 and DCX-3x1-HC21 models.

*** 5K support is only available from FW version v2.20.0.

1.4. Model Comparison

	AV Interface				Ethernet Interface			Serial Interface	GPIO Interface	OCS Interface
	Inputs		Outputs		Ethernet 1	Ethernet 2	Ethernet 3			
	USB-C 3.1 Gen1 (5 Gbps)	HDMI	HDMI	Analog audio de-embedding				RS-232	General Purpose In Out (GPIO)	Occupancy Sensor (OCS)
DCX-2x1-HC10	1x	1x	1x	✓	✓	-	-	-	-	-
DCX-3x1-HC20	1x	2x	1x	✓	✓	✓	✓	✓	✓	✓
DCX-3x1-HC21	1x	2x	1x	✓	✓	✓	✓	✓	✓	✓

2

Product Overview

The following sections are about the physical structure of the device, input/output ports and connectors:

- ▶ DCX-2x1-HC10
- ▶ DCX-3x1-HC20
- ▶ DCX-3x1-HC21

15
16
17


2.1. DCX-2x1-HC10

2.1.1. Front View



- ① **USB mini-B Port** The SERVICE-labelled USB mini-B port is designed for service functions.
- ② **LIVE LED** See the details in the [Front Panel LEDs](#) section.
- ③ **USB-C Ports** AV signal can be transferred up to a resolution of 4K@60Hz 4:4:4 and data speeds up to 5 Gbps with remote charging. Use cables certified for USB 3.1 Gen1 (5Gbps) and Displayport Alternate mode HBR2 (4x5.4Gbps) applications.
- ④ **Video Input Status LEDs** See the details in the [Front Panel LEDs](#) section.
- ⑤ **Video Input Status LEDs** See the details in the [Front Panel LEDs](#) section.
- ⑥ **HDMI Input Ports** HDMI input ports for sources. The applied cable shall not be longer than 5m. Use cables certified for HDMI 2.0 (3x6Gbps) applications.
- ⑦ **Input Select Buttons** For more details, see the [Button Functionality](#) section. When LEDs blink green three times after pressing the button, they show that the front panel lock is enabled.


2.1.2. Rear View

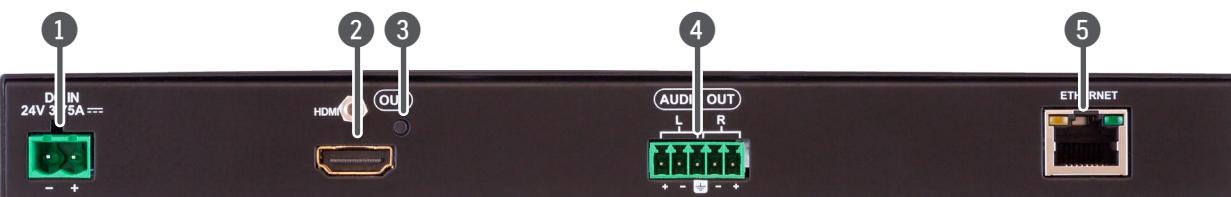

- ① **DC Input** The device can be powered by an external 120W power supply. Connect the output to the 2-pole Phoenix® connector. For more info about the powering, see the [Powering Options](#) section.
- ② **HDMI Output Port** HDMI output port for connecting sink devices (e.g. displays).
- ③ **Video Output Status LEDs** See the details in the [Rear Panel LEDs](#) section.
- ④ **Analog Audio Port** 5-pole Phoenix® connector for balanced analog audio output signal. The signal is de-embedded from the selected video signal.
- ⑤ **Configurable Ethernet Port** RJ45 connector for configurable 100Base-T Ethernet communication.

2.2. DCX-3x1-HC20

2.2.1. Front View

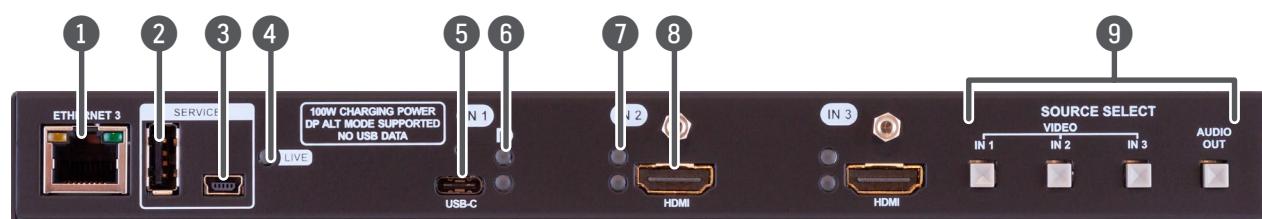

1 **Configurable Ethernet Port** RJ45 connector for configurable 100Base-T Ethernet communication.

2 **USB-A Port** The SERVICE-labelled USB-A connector is designed for service funtions.

3 **USB mini-B Port** The SERVICE-labelled USB mini-B port is designed for service functions.

4 **LIVE LED** See the details in the [Front Panel LEDs](#) section.

5 **USB-C Ports** AV signal can be transferred up to a resolution of 4K@60Hz 4:4:4 and data speeds up to 5 Gbps with remote charging. Use cables certified for USB 3.1 Gen1 (5Gbps) and Displayport Alternate mode HBR2 (4x5.4Gbps) applications.


6 **Video Input Status LEDs** See the details in the [Front Panel LEDs](#) section.

7 **Video Input Status LEDs** See the details in the [Front Panel LEDs](#) section.

8 **HDMI Input Ports** HDMI input ports for sources. The applied cable shall not be longer than 5m. Use cables certified for HDMI 2.0 (3x6Gbps) applications.

9 **Input Select Buttons** For more details, see the [Button Functionality](#) section. When LEDs blink green three times after pressing the button, they show that the front panel lock is enabled.

2.2.2. Rear View

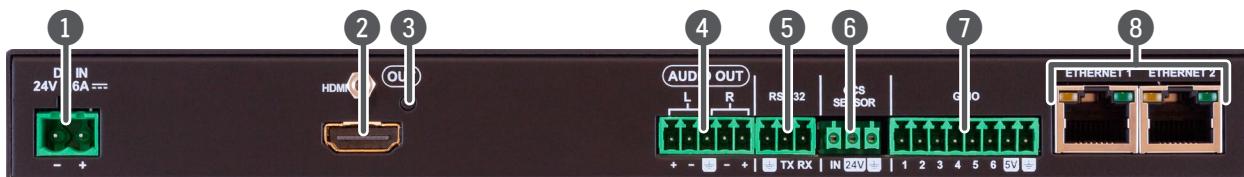

1 **DC Input** The device can be powered by an external 120W power supply. Connect the output to the 2-pole Phoenix® connector. For more info about the powering, see the [Powering Options](#) section.

2 **HDMI Output Port** HDMI output port for connecting sink devices (e.g. displays).

3 **Video Output Status LEDs** See the details in the [Rear Panel LEDs](#) section.

4 **Analog Audio Port** 5-pole Phoenix® connector for balanced analog audio output signal. The signal is de-embedded from the selected video signal.

5 **RS-232 Port** 3-pole Phoenix® connector for bi-directional RS-232 communication.


6 **OCS Sensor Connector** 3-pole Phoenix® connector (male) for connecting an occupancy sensor. The port provides 24V output voltage (50mA), see the details in the [OCS Connector](#) section.

7 **GPIO** 8-pole Phoenix® connector for configurable general purpose. Max. input/output voltage is 5V, see the details in the [GPIO - General Purpose Input/Output Ports](#) section.

8 **Configurable Ethernet Port(s)** RJ45 connector(s) for configurable 100Base-T Ethernet communication.


2.3. DCX-3x1-HC21

2.3.1. Front View

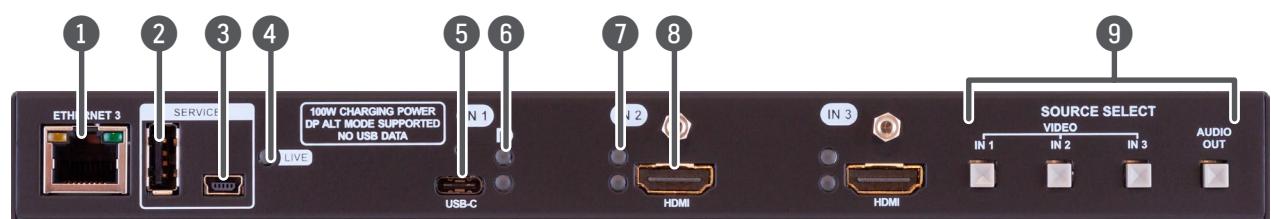

- 1** **Configurable Ethernet Port**: RJ45 connector for configurable Gigabit Ethernet communication.
- 2** **USB-A Port**: The SERVICE-labelled USB-A connector is designed for service funtions.
- 3** **USB mini-B Port**: The SERVICE-labelled USB mini-B port is designed for service functions.
- 4** **LIVE LED**: See the details in the [Front Panel LEDs](#) section.
- 5** **USB-C Ports**: AV signal can be transferred up to a resolution of 4K@60Hz 4:4:4 and data speeds up to 5 Gbps with remote charging. Use cables certified for USB 3.1 Gen1 (5Gbps) and Displayport Alternate mode HBR2 (4x5.4Gbps) applications.
- 6** **Video Input Status LEDs**: See the details in the [Front Panel LEDs](#) section.
- 7** **Video Input Status LEDs**: See the details in the [Front Panel LEDs](#) section.
- 8** **HDMI Input Ports**: HDMI input ports for sources. The applied cable shall not be longer than 5m. Use cables certified for HDMI 2.0 (3x6Gbps) applications.
- 9** **Input Select Buttons**: For more details, see the [Button Functionality](#) section. When LEDs blink green three times after pressing the button, they show that the front panel lock is enabled.

2.3.2. Rear View

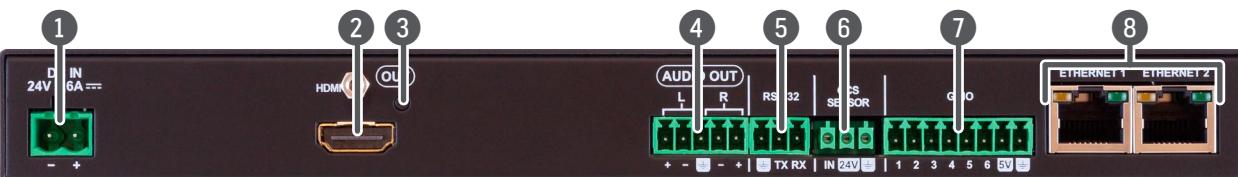

- 1** **DC Input**: The device can be powered by an external 120W power supply. Connect the output to the 2-pole Phoenix® connector. For more info about the powering, see the [Powering Options](#) section.
- 2** **HDMI Output Port**: HDMI output port for connecting sink devices (e.g. displays).
- 3** **Video Output Status LEDs**: See the details in the [Rear Panel LEDs](#) section.
- 4** **Analog Audio Port**: 5-pole Phoenix® connector for balanced analog audio output signal. The signal is de-embedded from the selected video signal.
- 5** **RS-232 Port**: 3-pole Phoenix® connector for bi-directional RS-232 communication.
- 6** **OCS Sensor Connector**: 3-pole Phoenix® connector (male) for connecting an occupancy sensor. The port provides 24V output voltage (50mA), see the details in the [OCS Connector](#) section.
- 7** **GPIO**: 8-pole Phoenix® connector for configurable general purpose. Max. input/output voltage is 5V, see the details in the [GPIO - General Purpose Input/Output Ports](#) section.
- 8** **Configurable Ethernet Port(s)**: RJ45 connector(s) for configurable Gigabit Ethernet communication.

3

Front Panel Control

The following sections are about front panel operation of the device and the status LEDs:

- ▶ Button Functionality
- ▶ Status LEDs

19
20

3.1. Button Functionality

INFO: If the control lock is enabled and a button is pressed, front panel LEDs blink 3 times quickly.


3.1.1. Video Source Selection

DCX-2x1-HC10

Use the **IN1** and **IN2** buttons to select the video source. **IN1** button switches the USB-C IN1 to the output, the **IN2** button switches the HDMI IN2 to the output.

Use the **AUDIO OUT** button to set the audio source of the analog audio output.

The sequence is the following (for the audio switching):

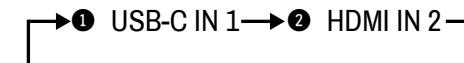

DCX-3x1-HC20

Use the **IN1**, **IN2** and **IN3** buttons to select the video source. **IN1** button switches the USB-C IN1 to the output, the **IN2** button switches the HDMI IN2 to the output, and the **IN3** button switches the HDMI IN3 to the output.

Use the **AUDIO OUT** button to set the audio source of the analog audio output.

The sequence is the following (for the audio switching):



DCX-3x1-HC21

Use the **IN1**, **IN2** and **IN3** buttons to select the video source. **IN1** button switches the USB-C IN1 to the output, the **IN2** button switches the HDMI IN2 to the output, and the **IN3** button switches the HDMI IN3 to the output.

Use the **AUDIO OUT** button to set the audio source of the analog audio output.

The sequence is the following (for the audio switching):




3.1.2. Enabling DHCP IP Address


The device has a dynamic IP address as a factory default setting. If it is set to static IP address during install or usage, dynamic IP address can be enabled from the front panel:

Step 1. Make sure the device is powered on and operational.

Step 2. Press and keep pressing the **AUDIO OUT** button for 5 seconds.

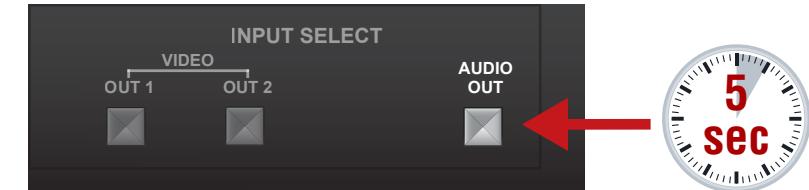

Step 3. After 5 seconds the front panel LEDs start blinking; release the button and press it 3 times again quickly (within 3 seconds).

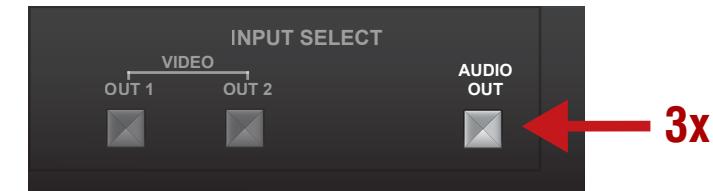

Step 4. The LEDs get dark, DHCP gets enabled. `#dhcp`


3.1.3. Reset to Factory Default Settings

To restore factory default values, do the following steps: [#factory](#)


Step 1. Make sure the device is powered on and operational.

Step 2. Press and keep pressing the **AUDIO OUT** button for 10 seconds.

Step 3. After 5 seconds the front panel LEDs start blinking, but keep on pressing the button.

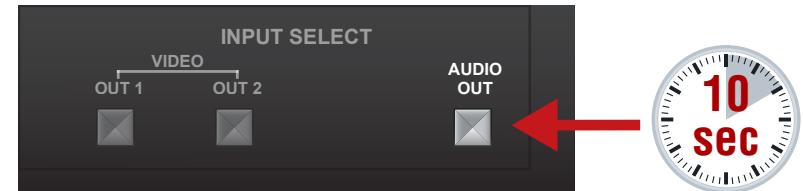

Step 4. After 10 seconds the LEDs start blinking faster; release the button and press it 3 times again quickly (within 3 seconds).

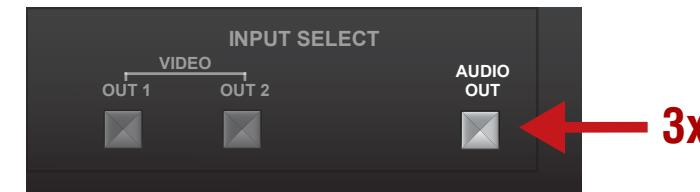

Step 5. The LEDs get dark, the device restores the factory default settings and reboots.

Factory default settings are listed in the [Factory Default Settings](#) section.

3.1.4. Control Lock

Press the **VIDEO IN1** and **AUDIO OUT** buttons **together** (within 100 ms) to disable/enable front panel buttons; front panel LEDs blink 4 times when locking/unlocking. If the control lock is enabled and a button is pressed, front panel LEDs blink 3 times quickly.



3.2. Status LEDs


INFO: When Dark mode is enabled, no LEDs are lit, even though the device is fully functional. For more details about the dark mode, see the [Status](#) section.

3.2.1. Front Panel LEDs

Live LED

LIVE LED		
	blinking	The device is powered on and operational.
	off	The device is not powered or out of operation.

Arrangement of the status LEDs [#status](#)

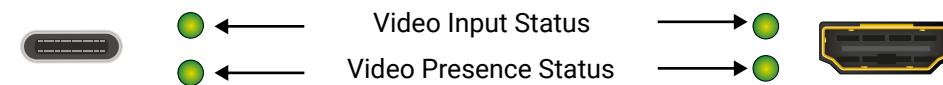


Video Input Status LED (the upper one)		
	off	There is no valid video signal on this port.
	on	There is a valid video signal on this port.

Video Presence Status LED (the lower one)		
	off	Video not present on the input.
	on	Video present on the input.

3.2.2. Rear Panel LEDs

Video Output Status		
	off	The signal is not present or muted.
	on	The video signal is present.

3.2.3. Ethernet Status LEDs (DCX-2x1-HC10 and DCX-3x1-HC20)

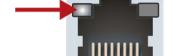LED state	Left LED	Function
	Off	Not linked
	On (Solid)	No activity
	Blinking	Activity
LED state	Right LED	Function
	Off	0 Mbit/s
	On (Solid)	100 Mbit/s

3.2.4. Ethernet Status LEDs (DCX-3x1-HC21)

LED state	Left LED	Function
	Off	0 Mbit/s
	On (Solid)	1 Gbit/s
	Blinking	Activity
LED state	Right LED	Function
	Off	Not linked
	On (Solid)	No activity
	Blinking	Activity

4

Installation

This chapter is about the installation of the device and connecting to other appliances, presenting also the mounting options and further assembly steps.

▶ Mounting Options	23
▶ Electrical Connections	25
▶ Powering Options	27
▶ Power Delivery over Type-C	28
▶ USB-C Cable Recommendation	29
▶ Connecting Steps	29

4.1. Mounting Options


To mount the switcher, Lightware supplies optional accessories for different usage. There are two kinds of mounting kits with a similar fixing method. The switcher has two mounting holes with inner thread on the bottom side; see the bottom view in the [Mechanical Drawings](#) section. To order mounting accessories, please contact sales@lightware.com. Fasten the device with the screws enclosed to the accessory.

For further information about mounting, please see our [Mounting Assembly Guide](#).

WARNING! Always use the supplied screws. Using different (e.g. longer) ones may cause damage to the device.

Ventilation

WARNING! Never block the ventilation holes on any side of the switcher! Ensure proper ventilation by letting the air flow freely.

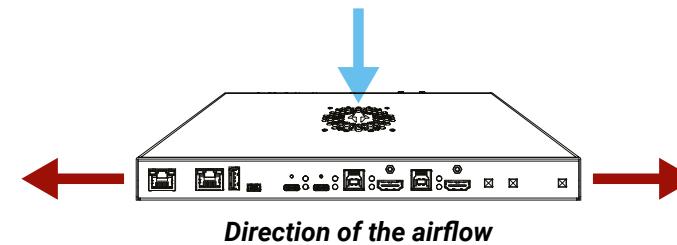


4.1.1. 1U High Rack Shelf

Allows rack mounting for half-rack, quarter-rack and pocket sized units.



1U high rack shelf provides mounting holes for fastening two half-rack or four quarter-rack sized units. Pocket-sized devices can also be fastened to the shelf.

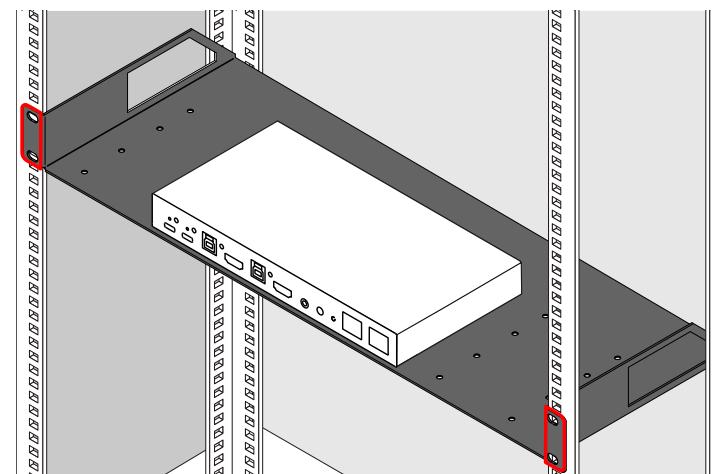

4.1.2. Mounting Plate F100 (and PSU F100/F110)


DIFFERENCE: The following accessories can be purchased optionally, please contact sales@lightware.com.




Mounting Plate F100 and PSU F100

The examples demonstrate the applications of the UD Kit accessories:


Step 1. Turn the switcher and the power adaptor upside down.

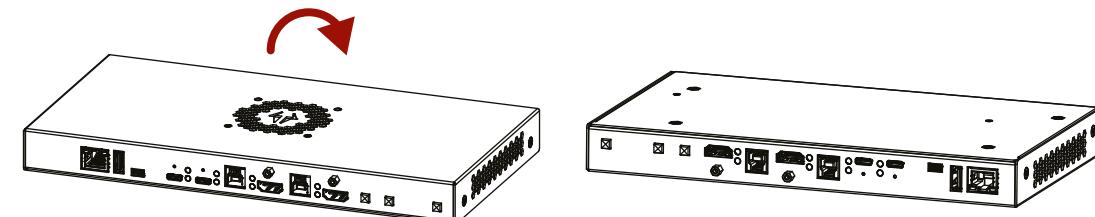


Step 2. Fix the **UD Mounting plate F100** to the switcher by fastening the screws (2 pcs screws are supplied with the switcher).

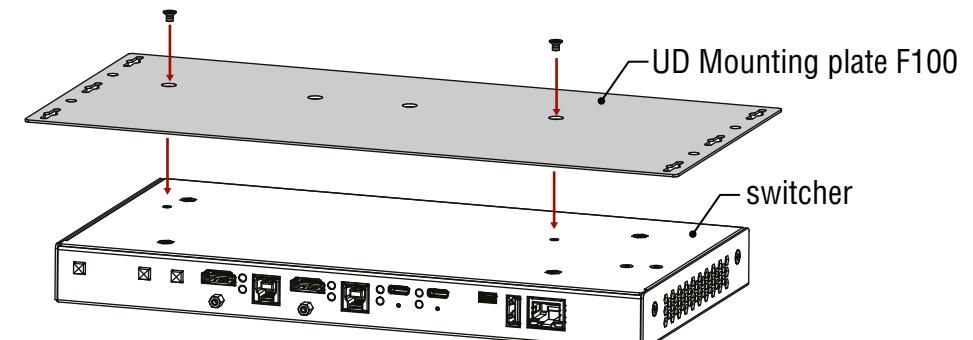

Step 3. Insert the power supply into the **UD Mounting PSU F100**.

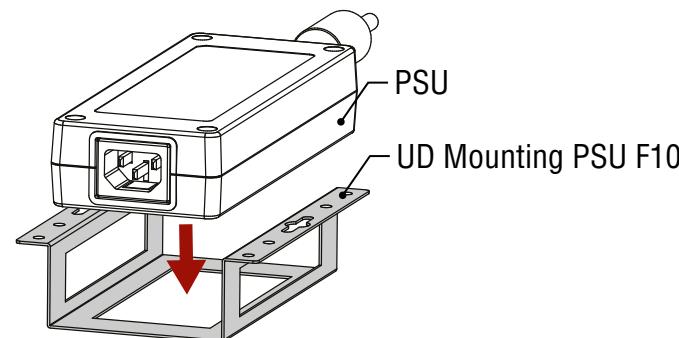

Step 4. Fix the **UD Mounting plate F100** and **UD Mounting PSU F100/F110** under the desk by fastening the screws.

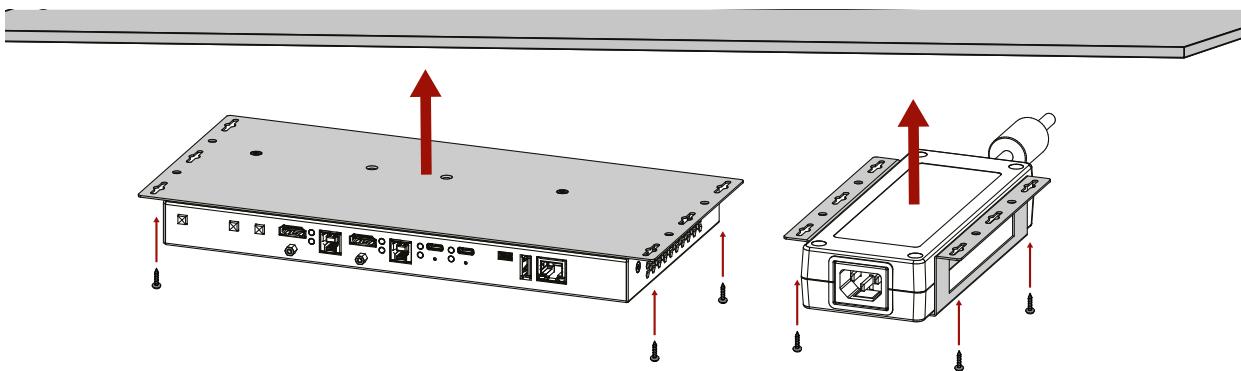

INFO: UD Mounting plate F100 and UD Mounting PSU F100/F110 do not contain the fixing screws; they can be purchased from the local hardware store. 2x4pcs M3-M5 metric or wood screws are needed, M3 size is recommended.

The **UD Mounting PSU F100** is made for mounting a **160W PSU**; for mounting a **120W PSU**, you will need the **UD Mounting PSU F110**.

ATTENTION: To ensure the correct ventilation and avoid overheating, insert the switcher face down to the **UD Mounting plate F100** to keep the ventilation holes free.

DIFFERENCE: The fan rotates only when the device is warm, otherwise not.

4.1.3. C-Lock

The USB-C Cable Lock is a product designed to enhance the security and reliability of a physical connection by providing a 2-point securing option for connected USB-C cables.

Step 1. Plug the USB-C cable in.

Step 2. Fix the C-Lock with the M2 screw.

Step 3. Use the provided zip ties to fasten the flange to the USB-C connector.



4.2. Electrical Connections

4.2.1. HDMI Input and Output Ports

The DCX series switchers are assembled with standard 19-pole HDMI connectors with screw lock for inputs and outputs. Always use high quality HDMI cables for connecting sources and displays.





4.2.2. USB Connectors

USB Type-C

ATTENTION: The USB-C ports of Taurus are developed to connect native USB-C sources. HDMI-USB-C or DP-USB-C adapters are not supported and not recommended to apply.



The switchers are supplied with USB 3.1 Gen1 (max. 5 Gbps data speed) USB C-type port for video transmission. It provides power delivery for a device up to 100W. Supported power profiles: 5V/3A, 9V/3A, 12V/3A, 15V/2A, 15V/3A, 20V/1,5A, 20V/3A. USB-C connector has symmetrical plug and pin layout.

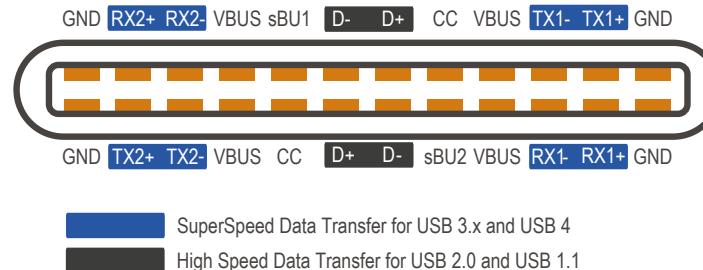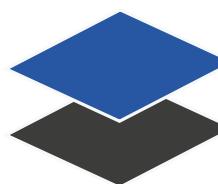

The pinout of the USB-C connector

DIFFERENCE: The USB-C connector does not transmit USB data and Ethernet.

ATTENTION: USB-C functionality and speed depend on the cable and the device. Mandatory features of the USB-C - USB-C cables are: USB 2.0 (480 Mbps), min. 3A current, min. 60W power.

4.2.3. Analog Stereo Audio

A 5-pole Phoenix® connector is used for balanced analog audio output. Unbalanced audio devices can be connected as well. See more details about the balanced and unbalanced output port wiring in the [Cable Wiring Guide](#) section.



Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+



Analog audio connector and plug pin assignments

Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 5-pole), type: MC 1.5/5-ST-3.5.

4.2.4. Secure Control LAN, Utility AV LAN, Configurable Ethernet Port



The switcher contains an RJ45 connector for a Gigabit Ethernet/LAN connection for local control functions.

The Ethernet ports can be connected to a LAN hub, switch or router by a CATx cable. Even though both cable types (straight or cross) are supported and handled by the device, the pin assignment below is recommended.

Wiring of LAN Cables

Lightware recommends the termination of LAN cables on the basis of TIA/EIA T 568 A or TIA/EIA T 568 B standards.

Pin	TIA/EIA T568A	TIA/EIA T568B
1	white/green	white/orange
2	green	orange
3	white/orange	white/green
4	blue	blue
5	white/blue	white/blue
6	orange	green
7	white/brown	white/brown
8	brown	brown

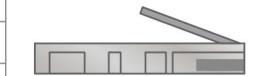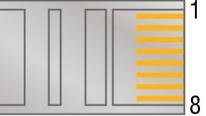

4.2.5. OCS Connector

DIFFERENCE: The DCX-2x1-HC10 switcher does not have an OCS connector.

The switcher is supplied with a 3.81mm 3-pole 90° Reversed Gender Plug Phoenix® connector, which is used for connecting an occupancy sensor. The first pin is a 24V logic input. The default state is high. Different type of sensors exist: some send high level, some send low level to this input when the room is occupied. Active-high or active-low logic can be configured for this port in LDC to support them. The second pin has a constant 24V output voltage, and the third one is the ground.



Pin nr.	Signal
1	24V logic input
2	24V
3	Ground



OCS connector pin assignments

Voltage ranges for 1st pin are the following:

	Input voltage [V]
Logic low level	0 - 0.8
Logic high level	2V - 24V

OCS Output Voltage Level: 24V (50mA).

Compatible Plug Type

WR-TBL series (3.81mm 3-pole 90° Reversed Gender Plug Phoenix), type: WR-TBL Series 3483 - 3.81 mm.

ATTENTION: The occupancy sensor connector and the GPIO port are not compatible with each other due to voltage level difference, please do not connect them directly.

4.2.6. GPIO - General Purpose Input/Output Ports

DIFFERENCE: The DCX-2x1-HC10 switcher does not have a GPIO connector.


The switcher is supplied with an 8-pole Phoenix® connector with six GPIO pins that operate at TTL digital signal levels, and can be set to high or low level (Push-Pull). The direction of the pins can be input or output (adjustable). Voltage ranges for GPIO inputs are the following:

	Input voltage [V]	Output voltage [V]	Max. output current [mA]
Logical low level	0 - 0.8	0 - 0.5V	30
Logical high level	2 - 5	4.5 - 5V	18

The maximum total current for the six GPIO pins is 180 mA.



Pin nr.	Signal
1	
2	
3	
4	
5	
6	
7	5V
8	Ground

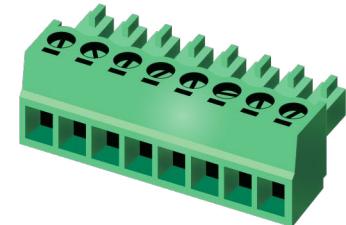

GPIO connector and plug pin assignments

INFO: The recommended cable for the connectors is the AWG24 (0.2 mm² diameter) or the generally used 'alarm cable' with 4x0.22 mm² wires.

Compatible plug type

Phoenix® Combicon series (3.5mm pitch 8-pole), type: MC 1.5/8-ST-3.5.

ATTENTION: The occupancy sensor connector and the GPIO port are not compatible with each other because of the voltage level difference, please do not connect them directly.

4.2.7. RS-232 Connector

DIFFERENCE: The DCX-2x1-HC10 switcher does not have an RS-232 connector.

The switcher contains a 3-pole Phoenix® connector, which is used for RS-232 serial connection.



RS-232 connector pin assignments

Pin nr.	Signal
1	Ground
2	TX data
3	RX data



RS-232 Output Voltage Levels

- Logic low level: 3V .. 15V
- Logic high level: -15V .. -3V

Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 3-pole), type: MC 1.5/3-ST-3.5.

You can find more information about RS-232 in the [Serial Interface](#) section.

4.3. Powering Options

INFO: The external power supply is not isolated, 230V side is galvanically connected to the 0 output pole.

Powering Locally

The DCX devices are built with 2-pole Phoenix connector for DC power connection.



Power connector pin assignments

Pin nr.	Signal
1	-
2	+



Remote Powering via USB-C Ports


The DCX series devices are designed to provide power delivery for the connected device over the USB-C connectors.

WARNING! Always use the supplied power supply! Use of any other power supplies may lead to damage!
Warranty void if damage occurs due to using a different power source.

INFO: Selecting the appropriate power profile happens automatically, no manual intervention required.

The following operation modes are available:

- Charge one device with up to 100W. Supported power profiles: 5V/3A, 9V/3A, 15V/3A, 20V/3A 20V/5A

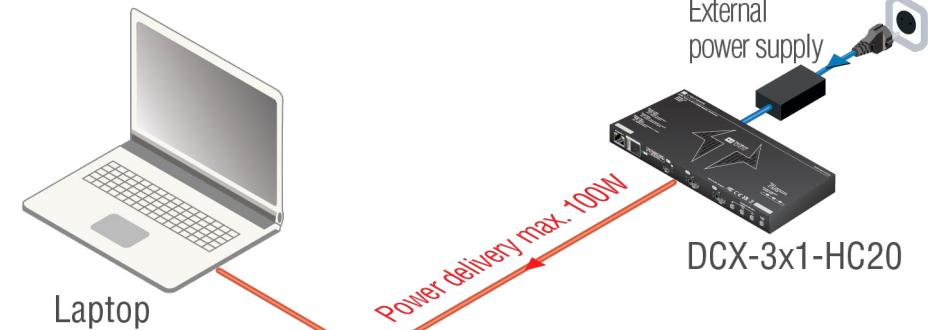


DIFFERENCE: From HW v5.0 and FW v2.4.0, 100W charging over one USB-C port is also available.

4.4. Power Delivery over Type-C

With Power delivery, these issues were solved:

- Allows negotiation of **up to 100 W** of power delivery to supply or charge equipment connected to a USB-C port.
- Power direction is **not fixed**.
- Intelligent and flexible system-level **management of power** (negotiation); the two connected partners exchange real-time PD protocol messages through the CC (control channel) lines.

USB PD supersedes all previous technologies and does not incorporate them. It can achieve any of the previous levels, but does so with its own methods.

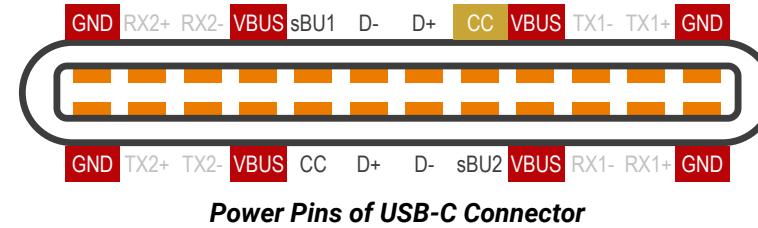


Power Pins of USB-C Connector

- The VBUS and GND pins are power and the return paths for the signals
- The CC channel is used for power negotiation
- The other CC pin can be used for VCONN powering

USB Chargers

USB-C PD covers a range of different power levels, with different amperage and voltage combinations that a charger can deliver, depending on what the device asks for and the cable negotiates. These values are defined by PDO (Power Data Objects).



According to the specification, 12V is not a mandatory Voltage level. The reason for support in case of certain chargers is that the 12V value was on the mandatory list of a former specification.

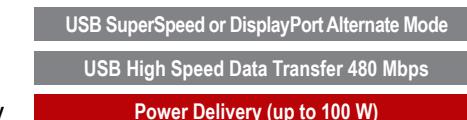

4.4.1. Power Data Objects (USB-C)

Power Data Object (PDO) defines a power capability:

- Nominal voltage and maximum current
- A Source must have at least one PDO
- The Sink chooses one of the Source's PDOs via CC communication

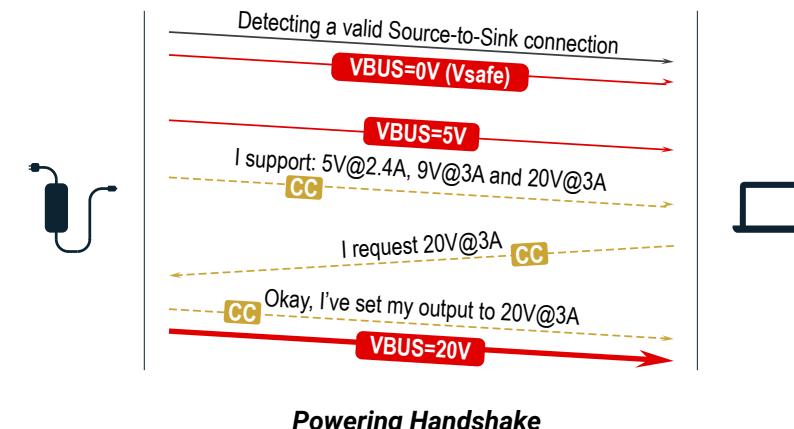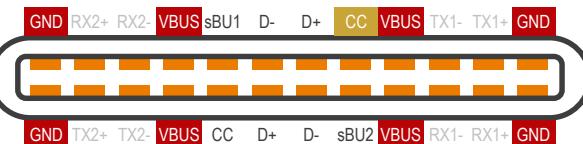


Powering Handshake

Dual-Role Power

With USB-C, the connector is the same on all products. Laptops, certain tablets and smartphones can be both a charger and a charged device (not simultaneously). Source/Sink defines the power role the port is currently operating in.

Source (SRC)
supply power over VBUS

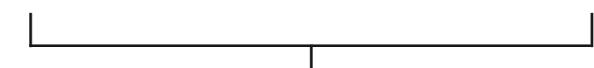

Sink (SNK)
consuming power from VBUS

Dual-Role Power (DRP)
can operate as either
a Source or a Sink


	Source-only	Sink-only	Dual-Role Power
Source-only	Non-functional	Functional	DRP = Sink
Sink-only	Functional	Non-functional	DRP = Source
Dual-Role Power	DRP = Sink	DRP = Source	DRPs negotiate

4.5. USB-C Cable Recommendation

Please find the recommendations for the applied cables below:

- Use Full-featured USB Type-C cables made by reliable brands.
- USB2.0 cables do not have the Superspeed channels, neither DP video, nor USB3 transmission works with them.
- Type-C cables certified for USB 3.x Gen1-Gen2 (5Gbps or 10Gbps) and Displayport Alternate mode HBR2-HBR3 (5.4Gbps or 8.1Gbps) applications are recommended.
- Thunderbolt cables are not backwards compatible with USB3.x or Displayport unless the manufacturer explicitly states so.
- Passive, 20Gbps Thunderbolt 3 cables, which are also specified for USB3.x are a good, but more expensive choice.
- 5A charging capability is not required. All USB Type-C cables should support at least 3A (up to 60W) charging.

4.6. Connecting Steps

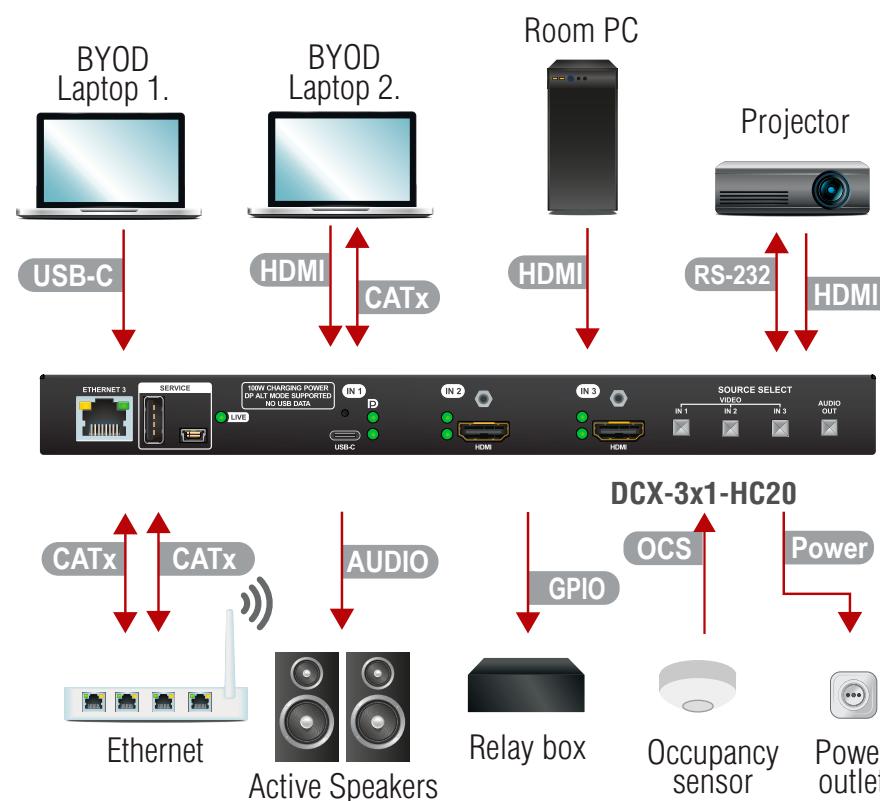

USB-C Connect a USB-C source (e.g. BYOD laptop) to the USB-C input port. The applied cable shall be certified for USB 3.1 Gen1 (5Gbps) and Displayport Alternate mode HBR2 (4x5.4Gbps) applications.

HDMI Connect an HDMI source (e.g. BYOD laptop or room PC) to the HDMI input port.

CATx Connect a device (e.g. BYOD laptop) to the Utility Ethernet port to access the internet or local network.

HDMI Connect an HDMI sink (e.g. projector) to the HDMI output port.

RS-232 Optionally for RS-232 extension: connect a controller/controlled device (e.g. projector) to the RS-232 port.

CATx Optionally connect the Secure Control Ethernet port to a Local Network Switch to provide Ethernet connection for device configuration and BYOD internet access.

Audio Optionally connect an audio device (e.g. active speakers) to the analog audio output port by an audio cable.

GPIO Optionally connect a device (e.g. a relay) to the GPIO port.

OCS Optionally connect an occupancy sensor to the OCS port.

Power Connect the external power supply to the AC power socket and the switcher unit. Powering the device is recommended as the final step.

ATTENTION: The USB-C ports of Taurus are developed to connect native USB-C sources. HDMI-USB-C or DP-USB-C adapters are not supported and not recommended to apply.

5

Device Concept


The following chapter describes the features of the device with a few real-life examples.

▶ Universal Switcher Concept	31
▶ USB Interface	31
▶ Video Interface	32
▶ The Autoselect Feature	34
▶ Audio Interface	35
▶ Ethernet Interface	36
▶ Lightware Advanced Room Automation (LARA)	37
▶ Basic Network Security	39
▶ 802.1x Authentication	41
▶ Advanced Ethernet Security	42
▶ Bulk Device Management	43
▶ Serial Interface	44
▶ GPIO Interface	45
▶ OCS Interface	45
▶ Further Built-in Features	45

5.1. Universal Switcher Concept

DCX-3x1-HC20

Lightware's universal switcher exploits the USB-C connectivity for a simplified transmission of 4K video, audio, control signals and power providing meeting participants with easy host switching, utilizing data speeds of up to 5 Gbps under the USB 3.1 Gen1 providing video supporting up to 4k@60Hz at 4:4:4 video resolution.

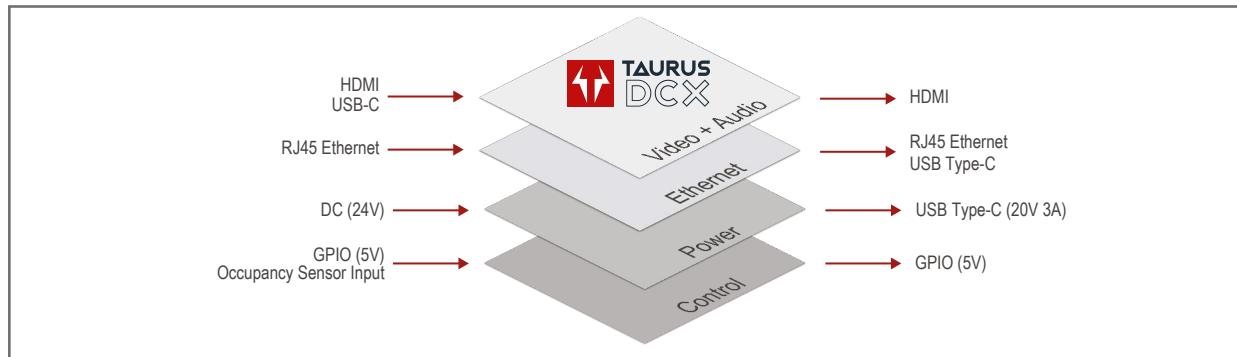

5.2. USB Interface


5.2.1. USB-C Interface

Summary of USB-C Ports

	DCX-2x1-HC10	DCX-3x1-HC20	DCX-3x1-HC21
USB-C 3.1 Gen1 (5 Gbps)	1x	1x	1x

DIFFERENCE: The USB-C connector does not transmit USB data and Ethernet.

USB-C Pinout and Data Channels


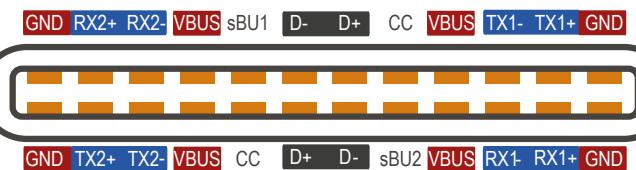


USB Superspeed Data Channel 5 Gbps
USB High Speed Data Channel 480 Mbps
Power Delivery (up to 100 W)

The USB-C interface consists of two main layers:


Displayport Alternate Mode (Video + Embedded Audio)

- DisplayPort Alternate Mode:** Alternate mode is designed for carrying uncompressed, native Displayport video as non-USB data (All Superspeed Data lanes deliver video signals, it reserves the whole bandwidth of the SS Lines).
- DisplayPort Alternate mode and USB 3.1 data shared: AV signals and USB 3.1 data are transmitted at the same time, sharing the bandwidth (2 SuperSpeed lines for video + 2 SuperSpeed lines for USB 3.1).

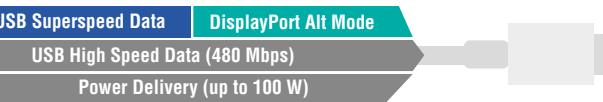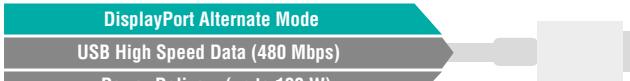

Power Delivery

- Going outward to power/charge external devices.

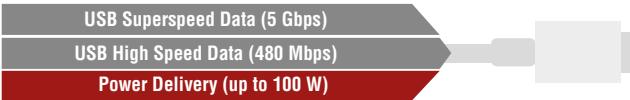

USB Features

DisplayPort Alternate Mode

This function is available only for USB type C connectors. See more details in the [DisplayPort Alternate Mode](#) section.

DIFFERENCE: The DCX-2x1-HC10 model only has a forced **4 Lane Video** setting.

Host detection

One host is available at once. Taurus DCX series devices give a feedback about the connected hosts.

USB Type-C introduced the port Power Roles: Sink port, Source port and Dual Role Power port. Supplying VBUS is not the privilege of the USB Host anymore.

Detecting the presence of a BYOD device on Type-C ports is done using the Power Delivery protocol over the Communication Channel.

5.2.2. USB Service Ports - USB 2.0 Interface

Summary of USB 2.0 ports

	Service ports	
	USB-A USB 2.0 (480 Mbps)	mini USB- B USB 2.0 (480 Mbps)
DCX-2x1-HC10	-	✓
DCX-3x1-HC20	✓	✓
DCX-3x1-HC21	✓	✓

The **SERVICE**-labelled USB-A connector is designed for service function. The Mini B-type connector is reserved for future LW3 control. Both features will be added by a future firmware update.

5.3. Video Interface

ATTENTION: The USB-C ports of Taurus are developed to connect native USB-C sources. HDMI-USB-C or DP-USB-C adapters are not supported and not recommended to apply.


Summary of Video Ports



#welcomescreen

	Video Inputs		Video Outputs
	Displayport Alternate mode HBR2 (4x5.4Gbps)	HDMI 2.0 (18 Gbps)	HDMI 2.0 (18 Gbps)
DCX-2x1-HC10	1x	1x	1x
DCX-3x1-HC20	1x	2x	1x
DCX-3x1-HC21	1x	2x	1x

5.3.1. Video Port Diagrams


DCX-2x1-HC10

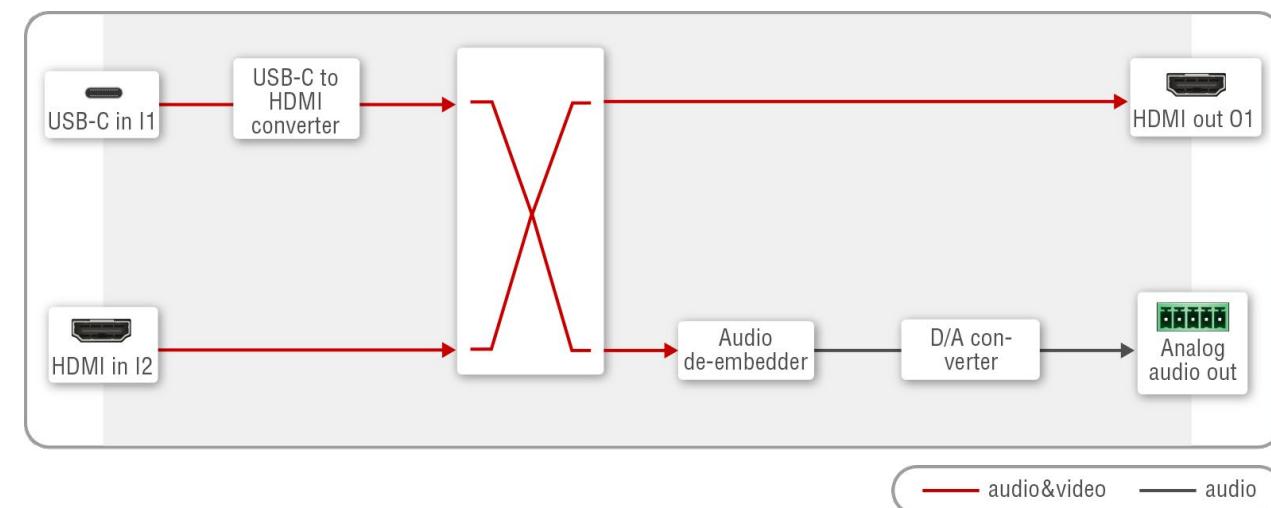

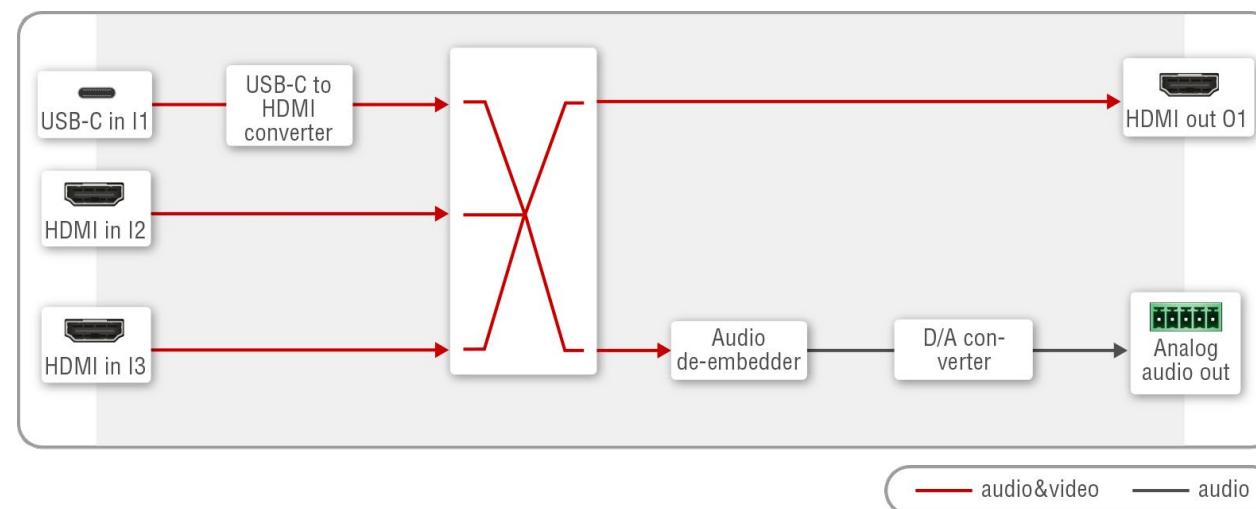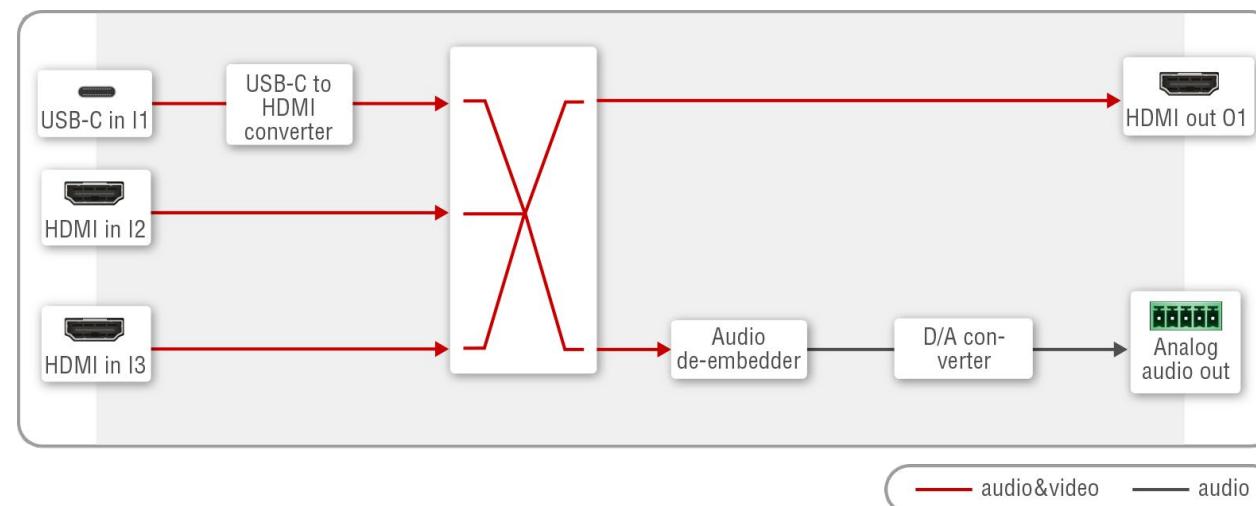
DCX-3x1-HC20**DCX-3x1-HC21****5.3.2. DisplayPort Alternate Mode**

USB-C sources send Displayport signal for video transmission.

Displayport Alternate mode allows using the USB-C cable instead of DisplayPort cable for DP video signals. The standard uses the Superspeed data transfer channels for carrying the video stream.

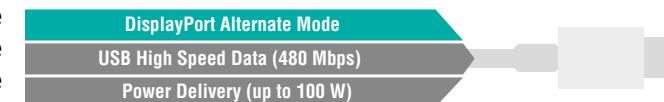

ATTENTION: The bandwidth of the video is based on the capacity of the source and the sink. USB3.1 Generation (Gen1=5Gbps, Gen2=10Gbps) is not related to DP bitrate (HBR1=4x2.7Gbps, HBR2=4x5.4Gbps)

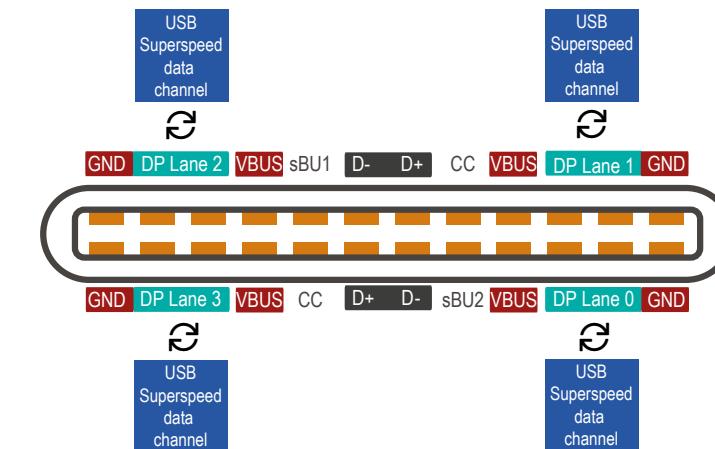

USB-C pinout in DP Alt mode

In Alt Mode, 2 or all 4 of the USB-C Superspeed data channels can be configured as DisplayPort connection. A full-bandwidth DisplayPort connection is always defined as 4 lanes.

The table below shows the correlation of the video resolution and the assigned lanes:

DisplayPort Video			DisplayPort Alternate Mode			
DisplayPort Standard	Raw bandwidth (1 lane)	Display Resolutions	2-Lane DP		4-Lane DP	
			BW	Display Resolutions	BW	Display Resolutions
HBR1 (DP 1.0 / 1.1)	2.7 Gbps	1440p@60 Hz	5.4 Gbps	1 × FullHD	10.8 Gbps	1 × 4K@30 Hz
HBR2 (DP 1.2)	5.4 Gbps	4K@60 Hz	10.8 Gbps	1 × 4K@30 Hz	21.6 Gbps	1 × 4K@60 Hz
HBR3 (DP 1.4a)*	8.1 Gbps	4K@60Hz	16.2 Gbps	2x4K@60 Hz	32.4 Gbps	2x4K@60Hz

* The host computer must be able to handle forward error correction.

DIFFERENCE: HBR3 Standard is only available for DCX-3x1-HC21.


DIFFERENCE: The DCX-2x1-HC10 model only has a forced **4 Lane Video** setting.

5.3.3. DisplayPort Alternate Mode and USB 3.x Mixed

The two different signals (video and USB 3.x) can be transmitted at the same time with shared bandwidth.

DP video reserves 2x Superspeed Channels for the video signal in alternate mode. 2x Superspeed Channels for USB 3.x. This setting can be configured manually via [Software Control Options](#) or via LW3 protocol commands (for more details, see the [LW3 Programmers' Reference](#) section).

5.3.3.1. Thunderbolt Compatibility

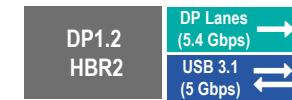

Thunderbolt 3 standard uses USB-C connector to transmit data. The standard is compatible backwards, so it is able to fall back to Displayport Alternate mode. In this case, the maximum bandwidth of transmitted video signal is based on the connected sink capability (e.g. HBR2, 5.4Gbps per lane in case of DCX-3x1-HC20 switcher).

5.4. The Autoselect Feature

Aside from manually selecting crosspoints, you can choose the Autoselect option in case of video and USB ports.

Video input source can be selected in the following ways:

- using the front panel buttons
- using Lightware Device Controller (LDC)
- sending LW3 protocol command or
- using the Autoselect function.

There are several Autoselect policies as follows:

- Disable autoselect
- First detect
- Last detect
- Follow video (in case of audio ports)

Individual input settings

This setting defines the priority level of the ports. The priority property is valid both for first detect and last detect operation modes. It overrides the chronological order of the appearance of the active video signal. The highest priority active input is always selected to transmit (1- highest priority, 100- lowest priority).

TIPS AND TRICKS: To use the individual input settings, change the default priority settings from 1 to 5 depending on their importance (e.g. I1 priority:1; I2 priority:2; I3 priority:3).

ATTENTION: The autoselect function remains active after the manual crosspoint switching. This operation mode works in contrast to the other Lightware matrix switchers or extenders.

Disable autoselect

The crosspoint state change only happens manually.

First detect

The selected input port is kept connected to the output as long as it has an active signal. The crosspoint changes when the signal becomes inactive on the chosen input, or when the video signal appears on a higher priority port.

TIPS AND TRICKS: To uphold the first detect mode, default priority settings (I1 priority:50; I2 priority:50; I3 priority:50) are appropriate.


Last detect

It is always the last attached input that is selected to transmit. The crosspoint changes when the signal becomes inactive on the chosen input, or when the active video signal appears on a port with the same or higher priority.


TIPS AND TRICKS: To uphold the last detect mode, default priority settings (I1 priority:50; I2 priority:50; I3 priority:50) are appropriate.

Automatic Input Selection- Example 1.

The video signal of the PC (I2) can be seen on Monitor 1. (01) when it is powered on and no BYOD device is connected.

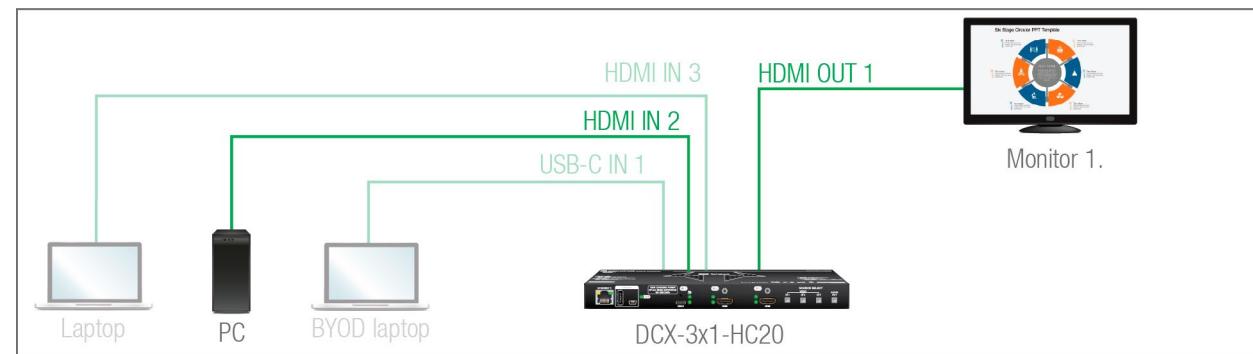

BYOD laptop 1. (I1) is displayed on Monitor 1. (01) when they are connected and send active video signal.

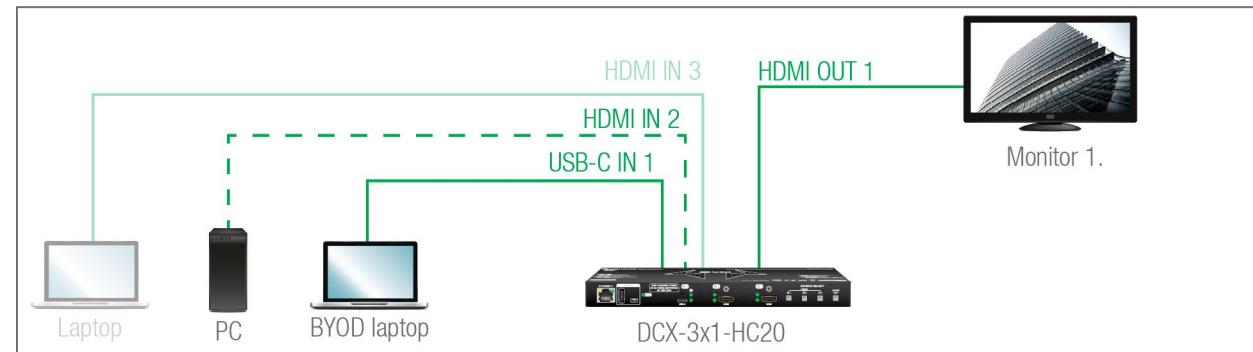

The individual input settings are the following:

O1: I1 priority:1; I2 priority: disabled; I3 priority:2

Automatic Input Selection - Example 2.



The laptop on HDMI input 3 will be automatically switched to the HDMI output if there is no other source connected to the switcher. If the PC is powered on and has active video signal, the HDMI input 2 will be switched to the HDMI output. If the BYOD Laptop is connected through the USB-C input 1, it will be switched to the HDMI output – independently of the presence of the other video signals.

Set the Autoselect mode to Last detect for HDMI out 1: The priorities are the following (the lowest number means the highest priority):

Source device	Input port	Priority
Laptop	I3 (HDMI in 3)	3
PC	I2 (HDMI in 2)	2
BYOD Laptop	I1 (USB-C in 1)	1


Priorities can be set in Lightware Device Controller software, see the related settings in the [HDMI Video Output](#) section.

5.5. Audio Interface


Summary of Audio Ports

	Audio Outputs
	Analog audio de-embedding
	5-pole Phoenix Combicon
DCX-2x1-HC10	✓
DCX-3x1-HC20	✓
DCX-3x1-HC21	✓

Audio Port Diagram (DCX-2x1-HC10)

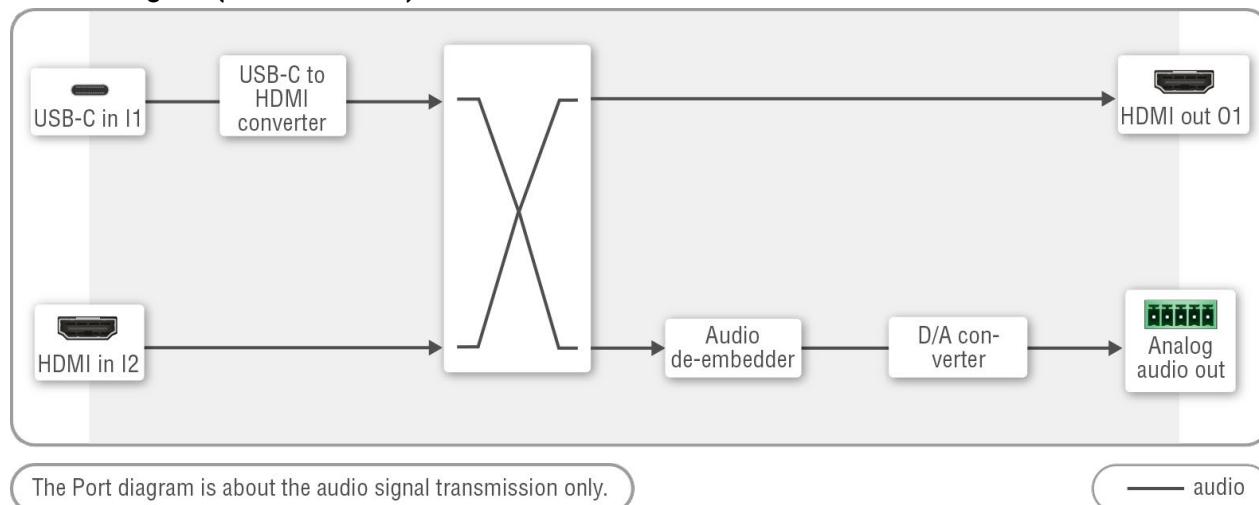

Audio Port Diagram (DCX-3x1-HC20, DCX-3x1-HC21)

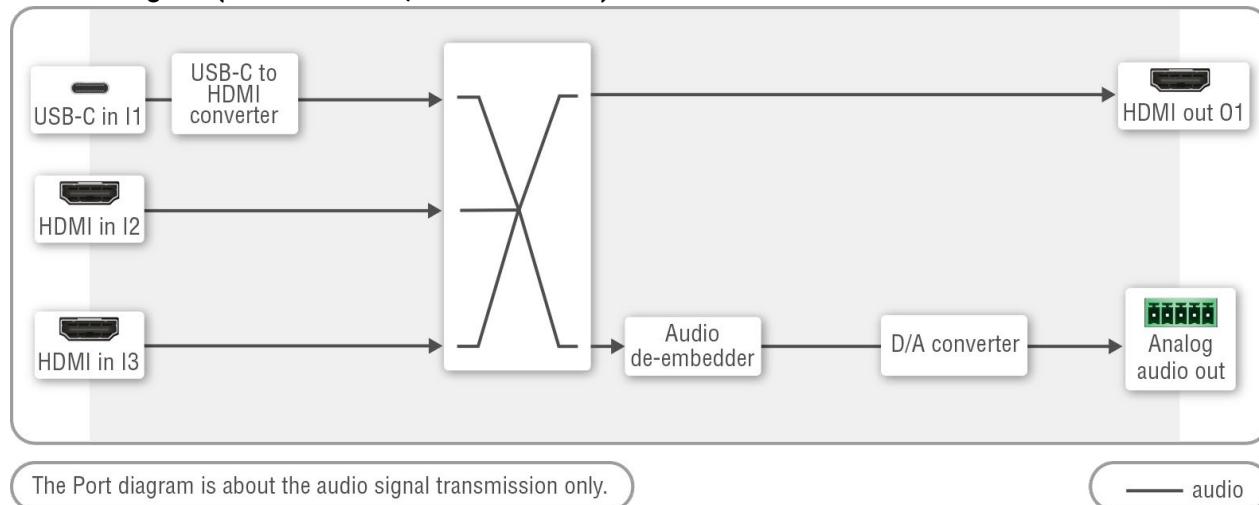

5.5.1. Analog Audio Interface

The device can receive embedded audio signal on the HDMI or USB-C inputs.

The switcher has a built-in audio de-embedder, which means the device is able to de-embed audio from its video ports to its analog audio output port.

5.6. Ethernet Interface

Summary of Ethernet ports

	Ethernet 1	Ethernet 2	Ethernet 3
DCX-2x1-HC10	✓	-	-
DCX-3X1-HC20	✓	✓	✓
DCX-3x1-HC21	✓	✓	✓

The device can be controlled via Ethernet (standard RJ45 connector). This interface supports:

- Configuration of the device with Lightware Device Controller. For more information about the LDC, see the [Software Control Options](#) section.
- Control of the Lightware devices with LW3 command protocols. See more details about the Lightware protocol in the [LW3 Programmers' Reference](#) section.
- Establishing the connection to the Lightware Device Updater v2 software and performing Firmware Update.
- Creation of a local network, passthrough the Ethernet traffic.
- The switcher provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands. For more details, see the [Setting Up the Room LAN](#) section.
- REST API interface is also designed for controlling the DCX switcher. See more details in the [Lightware REST API Reference](#) section.

5.7. Lightware Advanced Room Automation (LARA)

Lightware Advanced Room Automation (LARA) is a future-proof room automation platform that enables controlling both Lightware and 3rd-party devices in a meeting room area and also accessing remote services over the network. LARA has an easy-to-use graphical interface that allows the integrators to set up and deploy their system and also helps the technicians and IT personnel to check the system status and diagnose possible errors. LARA comes with built-in touchscreen control support, where a fully customizable graphical interface can be provided to literally any modern touchscreen device.

LARA eliminates the need for an external controller unit or PC, as it is embedded into the Taurus DCX family. Because of the modular design, the integrators can build their system based on existing modules (drivers, touch screens, services and more) or create their own. Thanks to the approach of open source modules, the integrators can easily modify or extend the existing modules, or use them as a base for their new solutions.

With LARA, integrators can set up the behavior of the meeting room by creating rules and setting various parameters, there is an option to write codes. JavaScript is the most widespread language today, which has a steep learning curve and huge online community. By using the popular NodeJS engine, the integrators can rely on the public NPM repository (<http://www.npmjs.org>) and use the free packages available there.

We are working hard to release new functionalities regularly and make LARA more and more user-friendly.

DIFFERENCE: LARA is available in DCX devices from FW version v2.11.0.

5.7.1. Opening the LARA interface

ATTENTION: When connecting to a device, you will need the 443 port for HTTPS connection, and optionally the 6107 port for raw TCP connection and the 80 port for HTTP connection.

Step 1. Enable LARA in your device. Navigate to the Settings/Network tab. First set a password for the 'admin' user, then enable LARA via the checkbox.

INFO: As LARA is capable of running NodeJS scripts accessing your network, it is imperative to prevent open access that could be used by a malicious attacker.

Step 2. Open LARA in either of the following ways:

- Via the **Open LARA** button under the System tab in the LDC, or
- By typing `https://<ip_address>/lara` into the address field of your browser. Even though any modern browser should work, we recommend using the latest Chrome or Safari versions. If you don't know the IP address of your device, please use Lightware Device Controller to discover it on your local network.

LARA does not run by default, however, once it starts, it will remain running even after resetting the device or closing the browser, until it is stopped by the user. It can be disabled in the LDC software. Please be aware that calling factory reset will erase LARA configurations.

While a graphical interface is available for most of the general functions, LARA offers the option to use it with JavaScript codes for every step and modification for both basic and more advanced task creation. Wizard and JavaScript code usage can easily be combined for maximum efficiency.

Help

LARA offers a built-in help interface, which is available by clicking on the **Help** button near the top right corner. If you have active Internet connection, the **LARA User Manual** is available either via the QR code or the clickable link beneath it.



5.7.2. Running LARA

LARA uses modules and their instances as basic building blocks of a configuration.

Modules

Modules are software pieces that give a base to the processes in the LARA interface. There are five module categories available as follows:

- **Driver:** a module connected to a certain device in the network
- **Logic:** a module for organizing the other modules into a system
- **Userpanel:** provides a user interface for the end user (e.g. tabletop control)
- **Service:** a module connected to a certain service in the network (e.g. calendar services)
- **Script:** any custom module for a specific purpose

LARA modules have access to the devices' every port, connection interface and the entire parameter library of the LW3 tree.

There are several pre-made modules that can be found in LARA for quick and easy system setup. These modules can be found in the **Browse Modules** menu by clicking on the **Create New** button and choosing one of the options from the **Base modules** drop-down list.

- **Taurus/MMX2 driver module** - for controlling the device
- **Taurus/MMX2 CEC driver module** - for sending CEC messages via the HDMI ports
- **Generic LW3 driver module** - for controlling another Lightware device that supports LW3 protocol
- **Generic TCP/IP driver module** - for controlling any device that is available via TCP/IP connection
- **Cisco Webex script module** - integration with Cisco Webex supporting BYOD (Bring Your Own Device) functions
- **OCS sensor serial message script module** - for sending a serial message to a device (e.g. Display) if the Occupancy Sensor detects a signal
- **Generic REST Client driver module**: universal module for controlling third-party devices over HTTP(S) REST API (PUT, POST, GET, DELETE)
- **Signal present serial message script module** - for sending a serial message to a device (e.g. Display) if a video signal is detected on a port

Instances

Modules can be run as instances. Different parameters may be added to different instances for the same module to include every possible process in the desired system.

Instances can communicate with each other using **Events** and **Methods**.

ATTENTION: It is currently only possible to run all instances together, or run none of them.

Events

Every instance can emit Events when something happens. An event is always momentary, it will be emitted immediately when something triggers it. An event can be used by other logic or user panel instances, or even by the same instance itself.

Methods

Methods are software pieces in any instance, which can be invoked (called) to initiate an activity in the associated room equipment.

Rules

Rules allow setting up processes according to changes in the state of the device. A status change might dispatch an **Event**, which can trigger a rule. The rule will then be able to execute an **Action** according to the triggering Event. When defining a new rule, a triggering Event must be selected. In case of Logic and Userpanel modules any instance can be chosen as the source of the Event. In other cases only the given module's own Events may be selected.

Once an Event has been dispatched that triggered a rule, an Action will be launched. An Action may have an unlimited number of steps defined.

5.7.3. Downloading/Uploading a Configuration


The modules, or even the entire configuration can be downloaded to the computer as a .zip file, or a previously saved configuration can be uploaded to a device.

ATTENTION: If the links to methods/properties are compatible with other models within the UCX/DCX/MMX2 product family, the configuration will work without a problem. However, sometimes a simple fine tune in the LW3 path of the properties/methods is necessary.


In case of downloading (and later uploading) a configuration of the module, these files are contained within the .zip file.

5.7.4. Status Board

The Status board offers real-time information about the connected devices through all running instances as Status Indicators. Such information might include connection status, signal presence, or even parameter status tracking. The indicators may show either static or self-refreshing information based on the current states of the device.

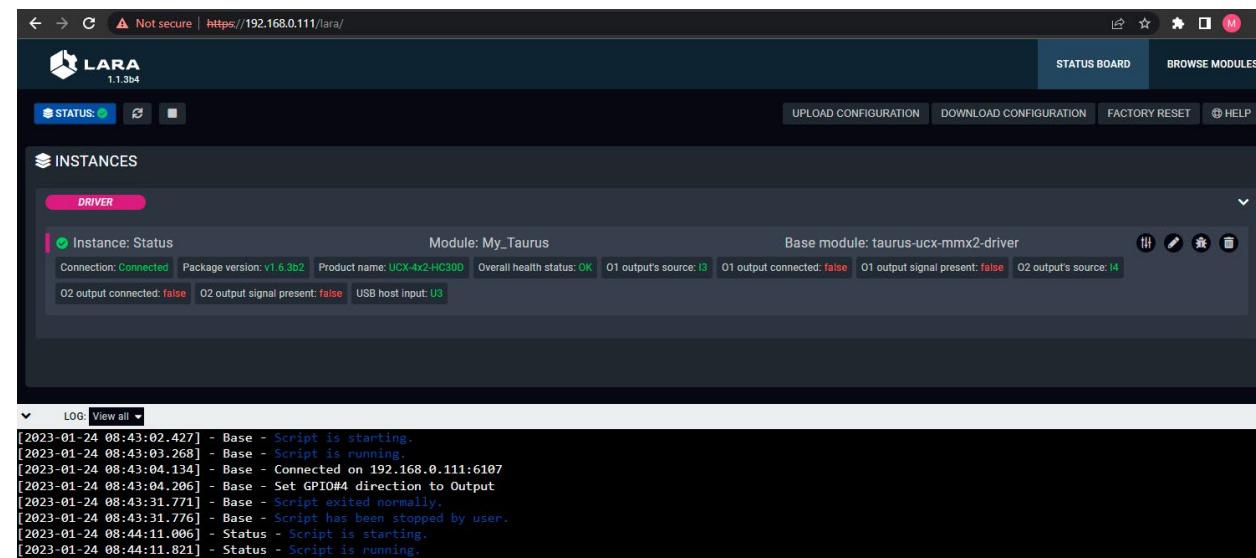

5.7.5. Touch Panel Support

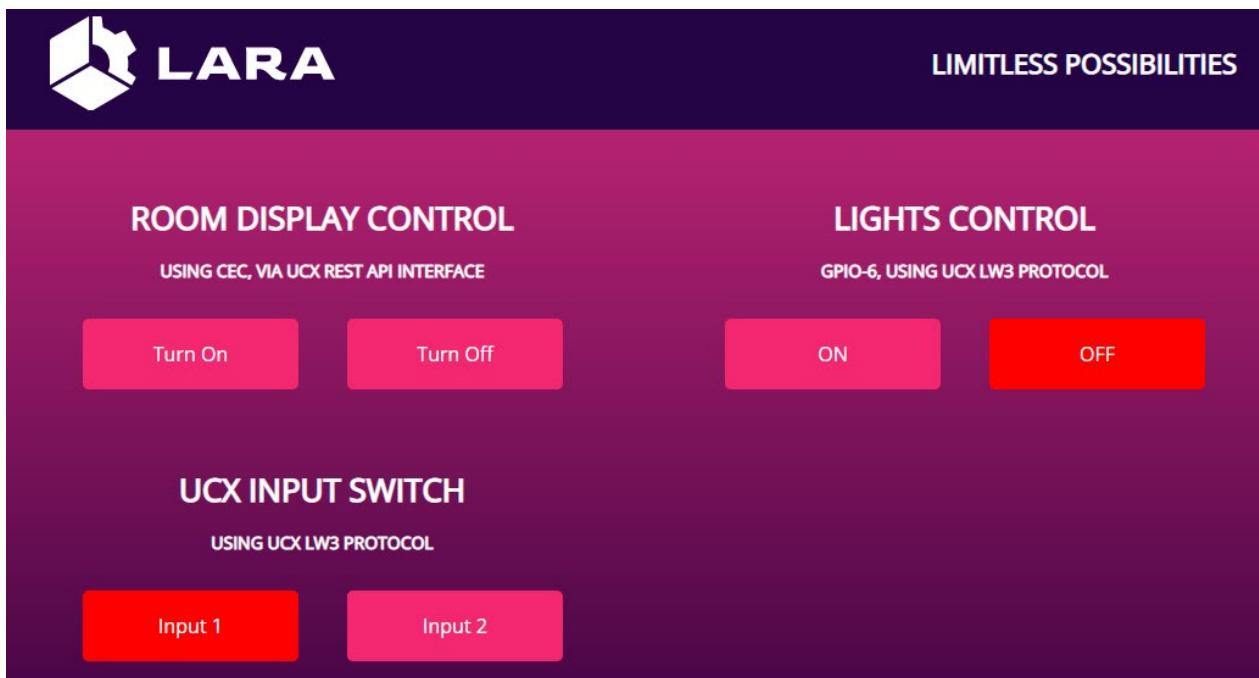

LARA offers support for any touch panel device that has a browser installed on it. With the use of Userpanel modules, you can easily upload project specific HTML/CSS/JS files to your devices, and edit or change them in LARA in real time. There is a Content option under a Userpanel module for the purpose of uploading and editing these files. It is also possible to create folders and subfolders for easy organization. Uploading can be done by dragging and dropping the files into the content section.

For proper operation, in the HTML code a unique ID shall be assigned to every HTML element where LARA interaction is required.

For more information, sample configurations and training materials, please visit lightware.com/lara or take a look at the [LARA User Manual](#).

WARNING! Enabling LARA on your device will open TCP ports 20,000 to 30,000 for service deployment. These ports will not be protected or filtered by the device's firewall, making them accessible from the device's network interfaces. Please be aware that running services on these ports could expose potential vulnerabilities on the device. Make sure to only activate services that have undergone thorough testing and do not contain any vulnerabilities.

5.8. Basic Network Security

These basic network security improvements help to prevent unauthorized access to the DCX series switchers:

- Disable Network Services
- Basic Authentication
- Encryption (HTTPS, WSS)
- Session Management (only in webLDC)

The following table summarizes the ports, protocols, features and the security options.

Port number	Protocol	Function	Affected software	Port disable option	Encryption	Authentication	Other features
80	TCP	HTTP port (LW3 over WS, REST API, LARA user panels)	LDC, LDU2	✓	✗	✓	FW update, Welcome Screen image upload, Log files, User Scripts Serial messaging
443	TCP	HTTPS port (LW3 over WSS, REST API, LARA management GUI)	LDC, LDU2	✓	✓	✓	
6107	TCP	LW3 protocol	LDC	✓	✗	✓	
8001	TCP	Serial over IP (RS-232)	-	✓	✗	✗	
224.0.0.251: 5353	UDP	mDNS / Bonjour (Device Discovery)	LDC, LDU2	✗	✗	✗	
230.76.87.82: 37421	UDP	Remote IP	LDC, LDU2	✗	✗	✗	

INFO: The ports are necessary to be passed via a network switch/firewall for proper operation between the device and the softwares.

ATTENTION: Be careful when combining the security functions; improper settings may cause malfunction.

5.8.1. HTTP/HTTPS

DCX series switcher provides HTTP/HTTPS server services on its 80 (for HTTP) and 443 (for HTTPS) ports. It makes it possible to use the following services via HTTP/HTTPS:

- LW3 over WebSocket (WS, WSS) for LW3 protocol or using LDC for device control
- REST API for device control
- Serial message sending with REST API
- Firmware update
- LARA interface
- Downloading logfiles from the device

ATTENTION: LARA management GUI is only available through HTTPS and it is password-protected.

Basic Authentication

DIFFERENCE: From FW version v2.21.0 and LDC version v2.20.0, authentication is enabled by default on the HTTPS port of the DCX devices. For DCX-2x1-HC10 and DCX-3x1-HC20 models the default password is **Lightware10g**, and you will be prompted to change it after the first login. HTTP port is disabled by default.

DIFFERENCE: DCX-3x1-HC21 models will have a **random generated factory default password** applied to the device during the manufacturing process. This unique password will be supplied on a sticker along with the device.


After a **factory reset** from this FW onward, you will need the Username (admin) and the default password (**Lightware10g** in case of DCX-2x1-HC10 and DCX-3x1-HC20 models or the **unique generated password** in DCX-3x1-HC21 models) to login. After successfully logging into the device, you will be prompted to change the password.

ATTENTION: This FW update will **not** invalidate your current password if you have one set already. It will only take effect following a factory reset called on the device.

To limit user access for HTTP/HTTPS server services, basic authentication can be turned on for the ports 80 and 443 separately.

ATTENTION: Authentication feature in DCX series is not equal to the Cleartext login feature in the Advanced Control Pack v3 of the TPS family extenders.

The picture below illustrates the successful authentication process:

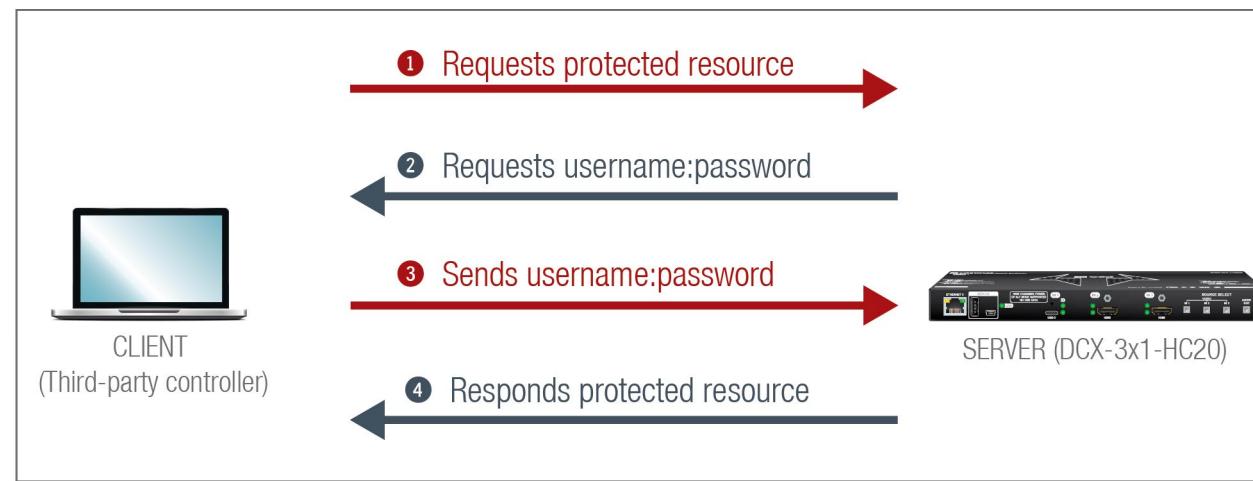

User

- The switcher can manage one user (with fixed username: admin) with full access.

Password

- Prior to FW version v2.21.0, no password is set by default, the authentication can be enabled after setting a password. The old password is required when password is changed. **From FW version v2.21.0, there is a default password assigned to the device, Lightware10g (DCX-2x1-HC10 and DCX-3x1-HC20 models) or a random generated unique password (DCX-3x1-HC21 models), set on the device that is recommended to be changed after the first login. The default password will only take effect **after a factory reset**.**
- From FW version v2.2.0, the password must be at least 10 characters long, and any UTF-8 character is allowed.
- From FW version v2.11.0, password history is maintained in the web authentication, not allowing for the last 10 passwords to be set again.
- The device does not store the password string, so it can not be queried.
- The password can be reset by calling factory defaults ().

Follow the instructions to set the authentication:

Step 1. Set the password with Lightware Device Controller software ([Network](#)) or REST API command ([Setting a Password for Authentication](#)).

Step 2. Enable the authentication on the chosen port (HTTP: 80 or HTTPS: 443) with the Lightware Device Controller software ([Network](#)) or LW3 protocol command ([Enabling the Authentication](#)).


Step 3. Restart network services.

ATTENTION: The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP.

5.8.2. Encryption (HTTPS, WSS)


HTTP protocol uses clear text format for data transport. This method allows a third-party to listen in and eavesdrop on the transferred information.

HTTP request-response

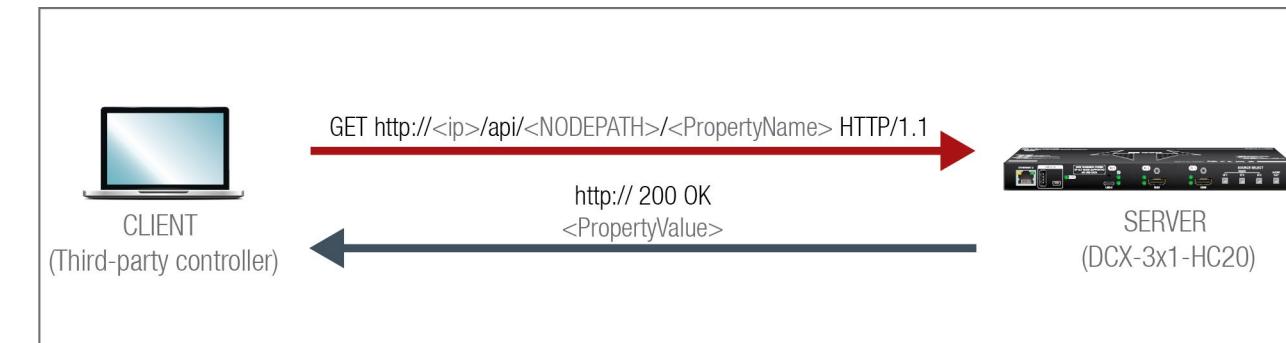

To ensure the secure data transmission, the HTTP port (80) can be disabled, and the all the information can be transferred via HTTPS (443 port). HTTPS protocol encrypts the clear text, so it becomes incomprehensible for a third-party and keeps the data secure.

HTTPS request-response

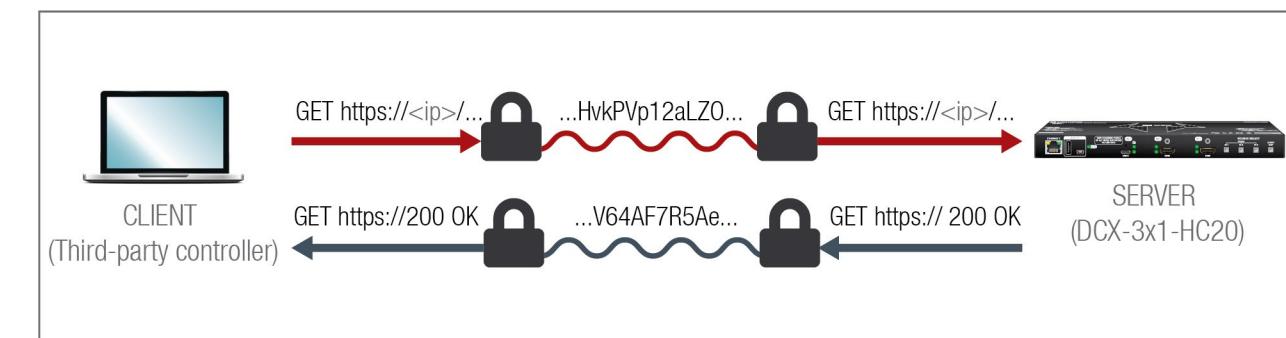

The same services are available on HTTPS as HTTP (for the detailed service list, see the [HTTP/HTTPS](#) section).

- The DCX series switcher generates a self-signed certificate, so the user does not have to deal with the configuration.
- From firmware version v2.2.0, SSL certificates can also be uploaded into the device ([Certificate Management](#)).
- A new certificate is generated after hostname changing or restoring the factory default settings.
- Please ensure proper DCX time and date setting in DCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

ATTENTION: HTTPS does not guarantee that the communication is secure. Make sure that the client communicates with the server directly, without any third-party element in the communication route (Man-in-the-middle attack).

To keep the system protected, the unsecured ports should be disabled and data traffic should be managed by secured channels.

Step 1. Disable the HTTP port (80) and use HTTPS (443) instead.

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the [Enabling/Disabling the Network Service Port](#) section).
- LW3 protocol commands (see the details in the [Enabling/Disabling the Service Port](#) section).

Step 2. Set the password and enable the authentication.

The username is always fix (admin) and the password has to be set before authentication is enabled.

The setting is available in the following ways:

- Lightware Device Controller software (see the details in the [Network](#) section)
- Lightware REST API HTTP posts (see the details in the [Setting a Password for Authentication](#) and the [Enabling the Authentication](#) section).

Step 3. Disable 6107 port, use Lightware REST API HTTPS (443 port) or WSS for LW3 protocol to control the device.

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the [Enabling/Disabling the Network Service Port](#) section).
- LW3 protocol commands (see the details in the [Enabling/Disabling the Service Port](#) section).


Step 4. Disable the remaining unsecured Serial over IP port (8001).

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the [Enabling/Disabling the Network Service Port](#) section).
- LW3 protocol commands (see the details in the [Enabling/Disabling the Service Port](#) section).

5.9. 802.1x Authentication

802.1x is a server-based port authentication protocol that restricts unauthorized clients from accessing a LAN through a public port. Three parties make up the most basic setup of 802.1x: a supplicant (client device), an authenticator (Ethernet switch) and an authentication server. Before the device is permitted access to the network, port communication is restricted to Extensible Authentication Protocol over LAN (EAPOL) traffic.

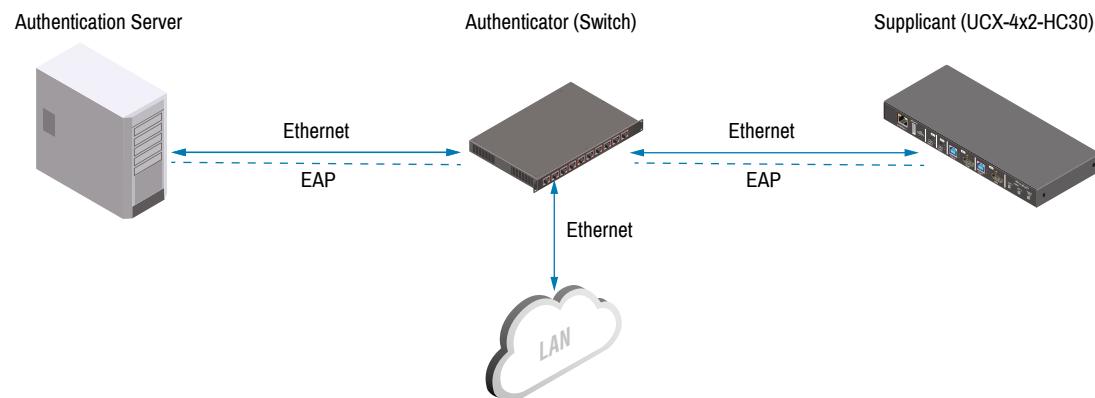

After the device passes the authentication process, the authentication server notifies the switch, allowing the client to access the LAN.

There are two available methods for 802.1x authentication in the DCX devices:

- **EAP-MD5:** This commonly used method authenticates by verifying MD5 (Message Digest 5) hash of a user password.
- **EAP-TLS:** This method utilizes Public Key Infrastructure to authenticate with an authentication server. To communicate with the server, a certification authority (CA) certificate and a client-side certificate that is signed by a known certification authority are needed.

DIFFERENCE: From firmware version v2.12.0, EAP-MD5 authentication is unavailable.

The DCX itself can act as a supplicant, but also as a route through which a BYOD device can reach the authenticator as a supplicant.

ATTENTION: This method authenticates the DCX device, not the BYOD connected to the DCX! If you only want to authenticate the connected BYOD device and not the DCX, you do not need to activate 802.1x authentication in the DCX device.

INFO: When updating the firmware of the DCX device, sensitive information (passwords, keys etc.) on the authentication will not be downloaded into the backup file, but it will be retained in the device during the update.

5.10. Advanced Ethernet Security

5.10.1. Room LAN

DIFFERENCE: From FW version v2.20.0, Room LAN is introduced in DCX devices.

DEFINITION: Room LAN is a VLAN Membership setting that creates an Ethernet port that is separated from the management interface while supporting controlled network behavior with separate, static MAC address and static IP allocation.

VLAN ID 2000 is reserved for Room LAN, which can be set via REST API ([Enabling the Room LAN on an Ethernet Port](#)) and LW3 ([Enabling the Room LAN on an Ethernet Port](#)) as seen below.

INFO: The CPU will appear with the **Main_3** MAC address within the Room LAN.

INFO: Internet access is not available from the Room LAN.

Setting Up the Room LAN

In order to be able to reach the device after setting up the Room LAN, you need to make sure it will have an IP address. By default, it is set to DHCP, so it will be able to get an IP address if you have a DHCP server. However, without a DHCP server, you need to enable and set a static IP address before you enable the Room LAN.

These settings currently can only be done via REST API or LW3 commands.

Step 1. To enable Static IP, do the following:

REST API	LW3
<ul style="list-style-type: none"> ► request-line: POST <code>http://<ip_address>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC/Enabled</code> ► body: <code>true</code> 	<ul style="list-style-type: none"> ► SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC. Enabled=true

Step 2. To set the static IP address and gateway, do the following:

REST API	LW3
<ul style="list-style-type: none"> ► request-line: POST <code>http://<ip_address>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC/ConfiguredIpAddress</code> ► body: <code><configured_ip_address></code> 	<ul style="list-style-type: none"> ► SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC. ConfiguredIpAddress=<configured_ip_address>
<ul style="list-style-type: none"> ► request-line: POST <code>http://<ip_address>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC/ConfiguredGatewayAddress</code> ► body: <code><configured_gateway></code> 	<ul style="list-style-type: none"> ► SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC. ConfiguredGatewayAddress=<configured_gateway>

Step 3. Finally, enable the Room LAN/set the Room LAN ID on the desired port:


REST API	LW3
<ul style="list-style-type: none"> ► request-line: POST <code>http://<ip_address>/api/V1/MEDIA/ETHERNET/<ethernet_port>/VlanMembership</code> ► body: <code>2000</code> 	<ul style="list-style-type: none"> ► SET /V1/MEDIA/ETHERNET/<ethernet_port>. VlanMembership=2000

WebSocket Service (WS, WSS)

DCX series switcher provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands.

The DCX series switcher can manage 18 connected clients in total simultaneously for WS (80), WSS (443) and LW3 (6107) ports.

The WebSocket connection is built up by HTTP handshake. After the connection is established, communication switches to a bi-directional WebSocket protocol for LW3 communication.

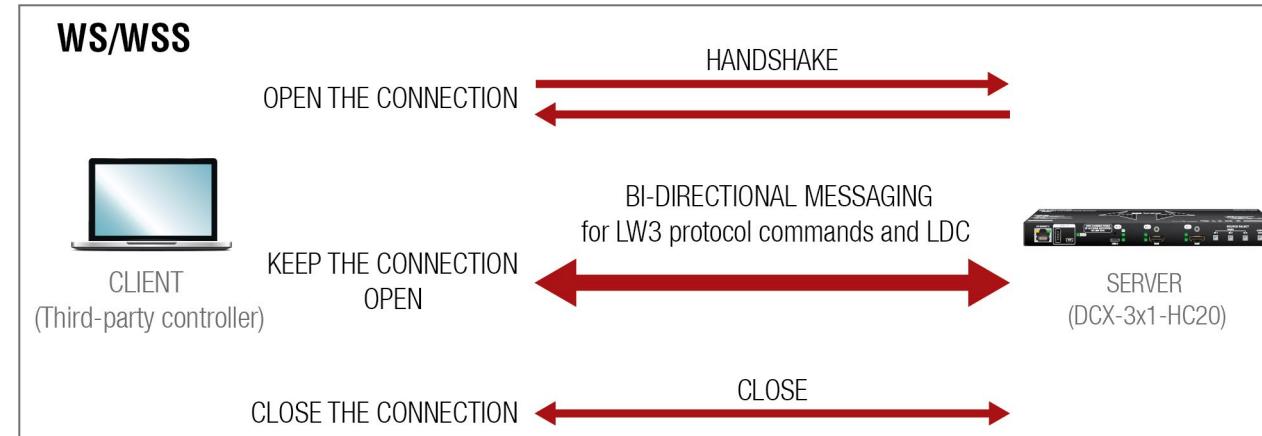

The main difference between HTTP and WS communication process is that HTTP closes the connection between the client and the server after one request-response pair, while WebSocket keeps the connection open. This feature allows real-time communication such as **controlling the device with LW3 protocol commands**. The WS functions are also available via WebSocket Secure (WSS).


5.11. Bulk Device Management

It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the **Tools** button in the bottom left corner of the Device Discovery window of the LDC and choosing the Bulk Management option.

See the [Bulk Device Management](#) section for more details.


5.11.1. Network Settings

This function makes it possible to change and adjust the network settings of several devices at once (unique settings for each device), without having to set them at each device one by one. A .csv file can be created containing the list and desired settings of the devices and it can be uploaded into the LDC to be applied to the devices quickly.

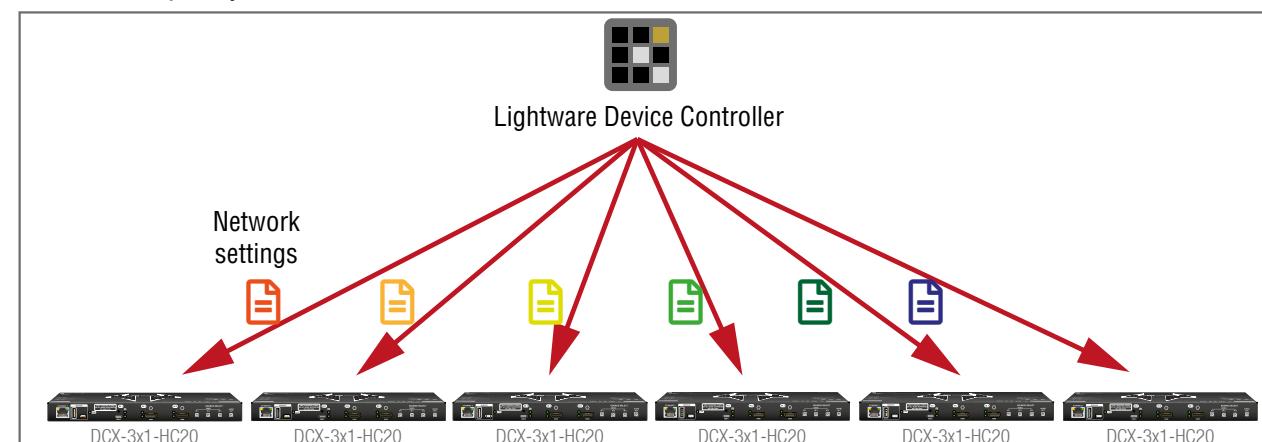

5.11.2. Device Configuration

Here you can choose the devices that need to be configured, and upload a previously saved configuration to all of them at once. This is a helpful tool for quick and easy reconfiguration of the devices after a firmware update. This function allows uploading configurations to devices with the same firmware version, without changing their network settings.

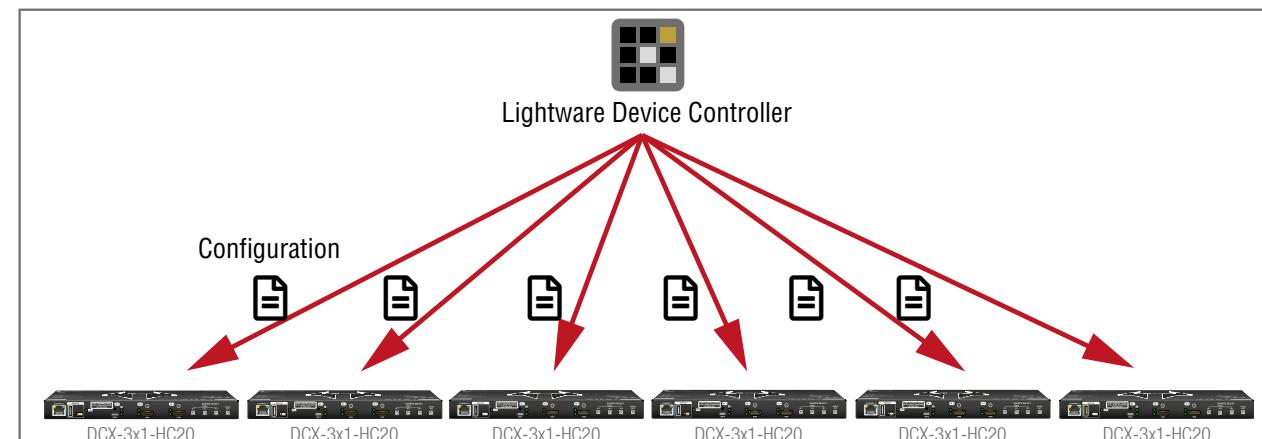


5.12. Serial Interface

Serial data communication can be established via the local RS-232 port (Phoenix connector).

Summary of Serial Ports

	DCX-2x1-HC10	DCX-3x1-HC20	DCX-3x1-HC21
RS-232	-	1x	1x
			

5.12.1. Serial Port Diagram

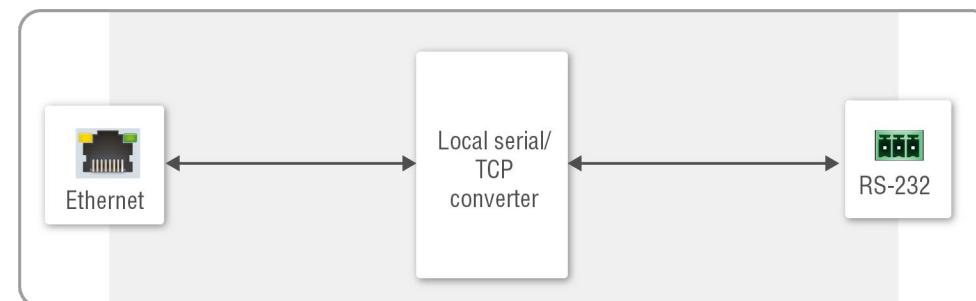

The DCX switcher works as an RS-232 bi-directional converter. The TCP signal is converted to RS-232 data and vice versa. TCP/IP port number is defined for the serial port (8001) for this purpose. If a command is coming from the Ethernet interface that is addressed to the port no. 8001, it will be transmitted to the Tx pin of the local RS-232 port (P1). That works in the opposite direction too, and the method is the same on the serial interface of the Ethernet port as well, but the serial message will be transmitted to all opened TCP sockets (if the TCP connection closed meanwhile, the message will not be transmitted). It can handle a maximum of 20 connections at the same time.

Disabling Serial over IP function disconnects the Serial/TCP converter from the Ethernet layer and the serial data won't be transmitted to the Ethernet network. This setting is available in the Lightware Device Controller software (in the Settings menu, [Network tab](#)) or with LW3 protocol command ([Enabling/Disabling the Network Service Port](#)).

The switcher can manage a maximum of 20 connected clients at the same time for each serial port.


Message Sending Function

Message sending function allows RS-232 command sending to a third-party (or a Lightware) device from the Taurus DCX series. Any format is acceptable (text, binary, hexadecimal, etc.), maximum message size is 100Kb. Escaping is unnecessary.

Serial message sending is possible by using HTTP Post with Lightware REST API.

→ header: POST·http://<ip>/api/V1/MEDIA/SERIAL/P1/send
→ body: <message>


The CPU is available over REST API interface. The CPU sends the message via the serial port to a third-party (or a Lightware) device. This is a one-way communication, the response will not be interpreted by the CPU. Consider using Serial over IP function instead of listening to a serial device.

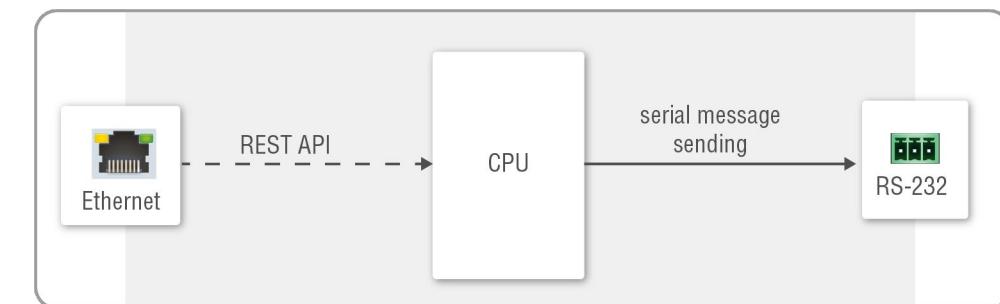

For more details about the Lightware REST API, see the [Lightware REST API Reference](#) chapter.

INFO: Taurus can receive a serial message in a special way. When a message is sent from the Taurus, the response from the connected device is accepted within 100 ms. The communication is closed after that time interval.

Serial Options - Example

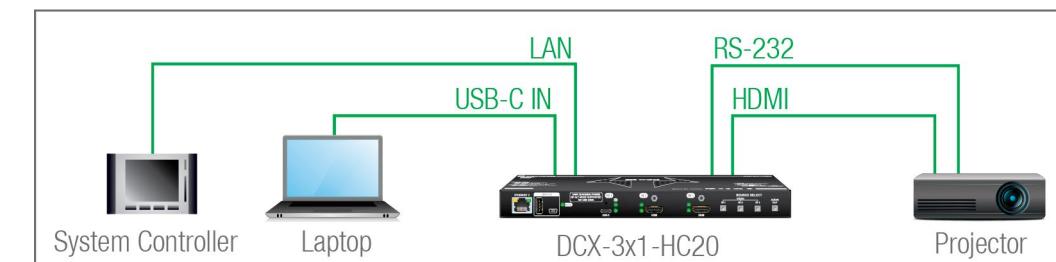

External Controller Concept

The projector is turned on and off by the external System Controller. The **System controller** has an internal REST API client, which is connected to the DCX switcher. It sends a HTTP POST to the **DCX-3x1-HC20**. The **Switcher** sends a serial message over the P1 port to the **Projector**.

Security: When interpreting of the response from the projector is necessary, serial over IP port 8001 can be enabled, in this case, the 8001 port is available from other devices too, and it makes the system unsecured.

Taurus as a Controller Concept


Lightware Advanced Room Automation (LARA) supports the automatism in DCX series devices. To use it, first enable LARA in the Settings menu, Services tab in the Lightware Device Controller (LDC) or the webLDC.

After opening LARA, set up the desired modules and methods. For more information about this procedure, please see the [LARA User Manual](#).

5.13. GPIO Interface

The General Purpose Input/Output (GPIO) port is a multifunctional input/output interface to control the switcher or third-party devices and peripherals. You can establish the connection between the controller/controllable device and the switcher via the 8-pole Phoenix connector. The direction of the six pins is configurable independently from each other.

GPIO Options - Example

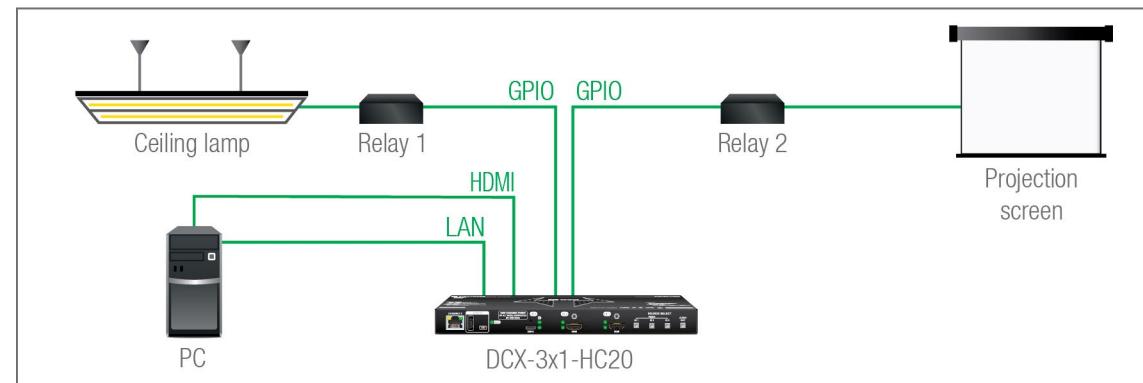

The ceiling lamp is turned off by Relay 1 and the projection screen is rolled down by Relay 2. Both relays are controlled by the GPIO port.

When the PC starts to play the video presentation, the signal is received over the HDMI input, so the GPIO pins send a signal to Relay 1 to open, which results in the lights being turned off. Furthermore, the GPIO pins also send a signal to Relay 2 to close and the projection screen is rolled down. When the presentation ends, signal ceases on the HDMI input, so the GPIO pins send a signal to Relay 1 to close, which results in the lights being turned on, and send a signal to Relay 2 to open, so the projection screen returns to its enclosure.

Lightware Advanced Room Automation (LARA) supports the automatism in DCX series devices. To use it, first enable LARA in the Settings menu, Services tab in the Lightware Device Controller (LDC) or the webLDC.


After opening LARA, set up the desired modules and methods. For more information about this procedure, please see the [LARA User Manual](#).

ATTENTION: Please always check the electrical parameters of the devices that you want to control. The maximum current of one GPIO pin is 30 mA, the maximum total current for the six pins is 180 mA.

5.14. OCS Interface

OCS Application Example

When the occupancy sensor detects people in the meeting room, the DCX switcher turns on the ceiling lamp.

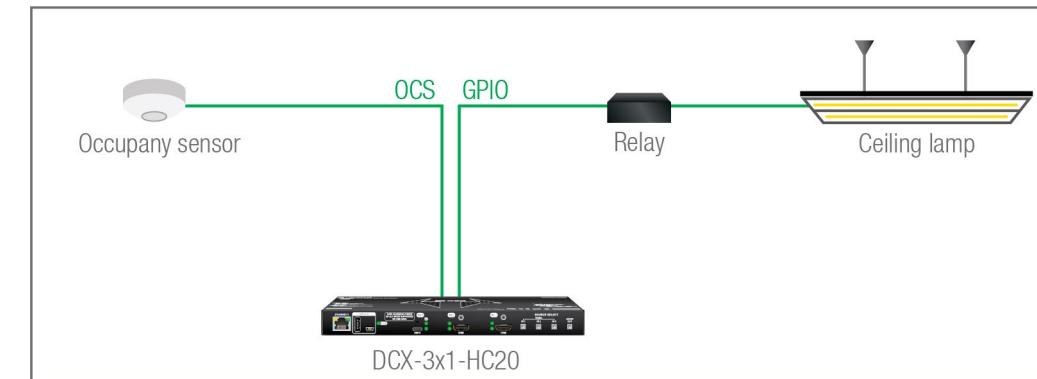


Lightware Advanced Room Automation (LARA) supports the automatism in DCX series devices. To use it, first enable LARA in the Settings menu, Services tab in the Lightware Device Controller (LDC) or the webLDC.

After opening LARA, set up the desired modules and methods. For more information about this procedure, please see the [LARA User Manual](#).

5.15. Further Built-in Features

5.15.1. Device Cloning – Configuration Backup and Restore

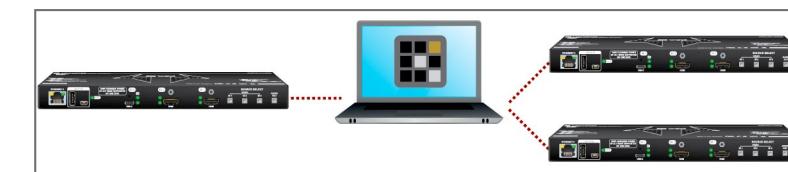

The device (configuration) cloning of DCX series switcher is a simple method that eliminates the need to repeatedly configure certain devices to have identical (non-factory) settings. If the devices are installed in the same type of system multiple times, then it is enough to set up only one device to fit the user's needs and then copy those settings to the others, thus saving time and resources.

Cloning is possible between devices using the same firmware version. All LW3 settings, WelcomeScreen Image and LARA configurations will be saved.

Please note that the clone file can be downloaded and uploaded via HTTP or HTTPS, so 80 or 433 port has to be enabled.

See more information about the settings in the [Clone configuration](#) section.

5.15.2. Remote System Logging

DIFFERENCE: The remote system logging function is available from FW version v2.19.0.

This feature allows system logs to be sent to an external log collector for remote analysis purposes. This makes supervising and troubleshooting the devices easier and more comfortable.

Logs may be sent using either TCP, UDP or TLS. In case of TLS only encrypted forwarding is provided, but no certificate validation is performed (anonymous TLS).

The following steps need to be taken to set up remote system logging:

Step 1. Set the destination hostname or IP address where the logs should be sent to

- Lightware REST API HTTP messages ([Setting the Remote Server Address](#))
- LW3 protocol command ([Setting the Remote Server Address](#))

Step 2. Set the network protocol used for forwarding

- Lightware REST API HTTP post ([Setting the Protocol for the Remote System Logging](#))
- LW3 protocol command ([Setting the Protocol for the Remote System Logging](#))

Step 3. Set the format of the logs

- Lightware REST API HTTP post ([Setting the Format of the Remote System Logging](#))
- LW3 protocol command ([Setting the Format of the Remote System Logging](#))

Step 4. Set the port number on the remote host to send log messages to

- Lightware REST API HTTP post ([Setting the Port for Remote System Logging](#))
- LW3 protocol command ([Setting the Port for Remote System Logging](#))

Step 5. Enable remote system logging

- Lightware REST API HTTP post ([Enabling Remote System Logging](#))
- LW3 protocol command ([Enabling Remote System Logging](#))

6

Software Control Options

Taurus device allows setting all the parameters via a user-friendly interface. Open a web browser (Google Chrome or Mozilla Firefox is highly recommended) and connect to the device to access the parameters and settings. The other option is to use the Lightware Device Controller (LDC) software and connect to the device without a web browser. The features are described in the coming sections.

▶ Software Control Modes	48
▶ Using the Built-in Web	49
▶ Install and Update the LDC	49
▶ Running the LDC	50
▶ Establishing the Connection	50
▶ Bulk Device Management	52
▶ Video & Audio Crosspoint	54
▶ Port Properties Window	55
▶ CEC Tool	61
▶ EDID Menu	62
▶ Control Menu	65
▶ Settings Menu	67
▶ Advanced View Window	73

6.1. Software Control Modes


The device can be controlled in the following ways:

- Using the **built-in web page**,
- Using the **Lightware Device Controller (LDC)** software,
- Sending **REST API commands** (see the [Lightware REST API Reference](#) chapter), or
- Sending **LW3 commands** (see the [LW3 Programmers' Reference](#) chapter).


Built-in web page vs. LDC

The LDC and the built-in web page shows the same content, but there are some minor differences:

Function	Built-in Web	LDC
Platform	A Web browser running under Windows, macOS or Android	Windows, mac OS
Installation	Web browser needed only	Required
Device discovery	-	✓

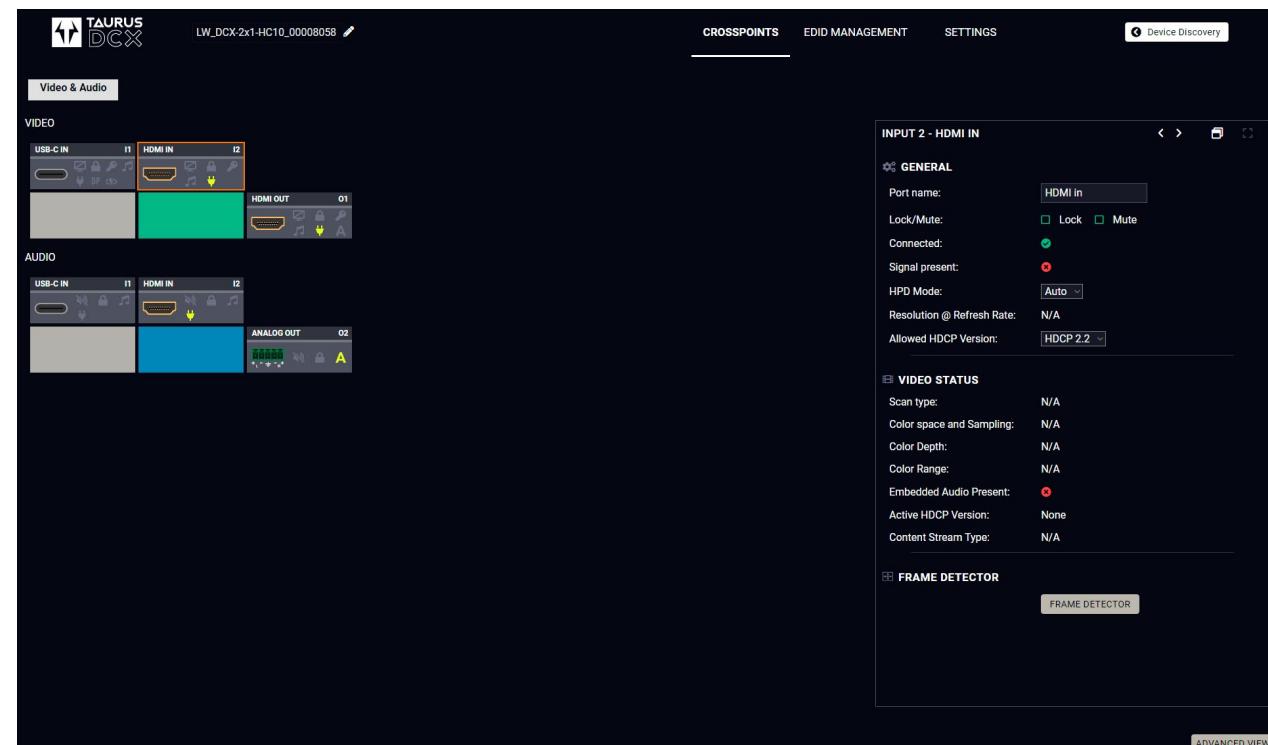

The Main window – Displayed in LDC

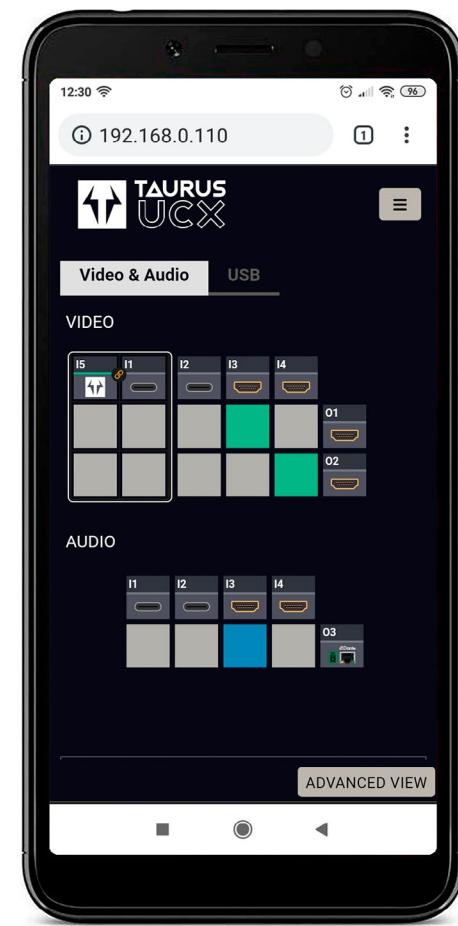

The Main Window - Displayed on a Smartphone

6.2. Using the Built-in Web

DCX devices can easily be controlled and configured without downloading and installing LDC, by utilizing the built-in web.

Connecting to the device is possible by typing its IP address into the URL of the browser.


The layout of the built-in web is generally the same as the LDC, with a few differences:

- There is no **Device Discovery** button.
- From FW version v2.9.0, there is a **Logout** button.

INFO: The **Logout** button will only appear if the device has a password and the user is logged in.

DIFFERENCE: From FW version v2.9.0, the maximum length of a single session is **120 minutes**. If this time is up, you will be logged out, and the device will only be available upon logging in again.

DIFFERENCE: From FW version v2.9.0, in case of **30 minutes** of inactivity the session will expire. The system will remind you in a pop-up window if the current session is about to expire five minutes before the time limit. If the reminder receives no answer, the session will restart and you will be forced to log out.

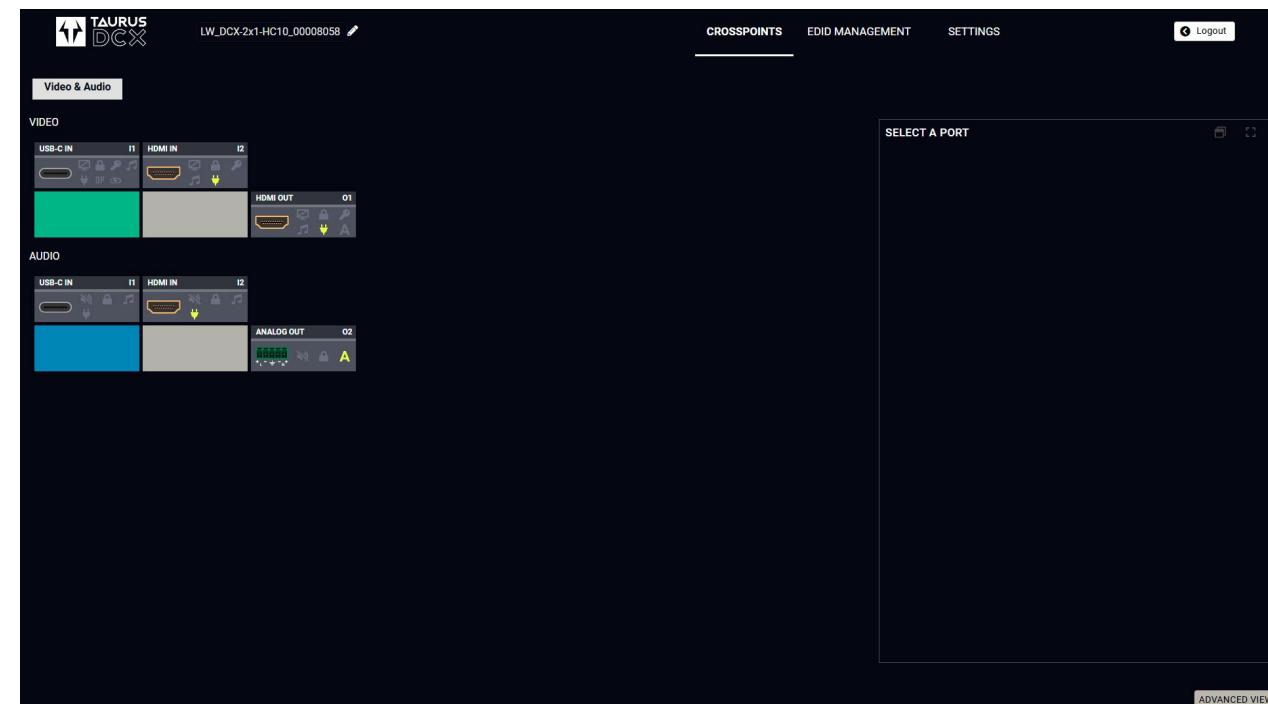

The Logout button appears in the upper right corner upon login

6.3. Install and Update the LDC

INFO: After the installation, the Windows and the Mac applications have the same look and functionality. This type of the installer is equal with the Normal install in case of Windows and results in an updatable version with the same attributes.

Installation for Windows OS

Run the installer. If the User Account Control drops a pop-up message, click **Yes**.

During the installation you will be prompted to select the type of the installation: **normal** and the **snapshot** install:

Normal install	Snapshot install
Available for Windows and macOS	Available for Windows
The installer can update only this instance	Cannot be updated
Only one updatable instance can exist for all users	More than one different version can be installed for all users

Comparison of installation types

ATTENTION: Using the Normal install as the default choice is highly recommended.

Installation for macOS

Mount the DMG file by double clicking on it, and drag the LDC icon over the Applications icon to copy the program into the Applications folder. If you want to copy the LDC into another location, just drag the icon over the desired folder.


Updating of LDC

Step 1. Run the application.

The **Device Discovery** window appears automatically, and the program checks the available updates on Lightware's website and opens the update window if LDC updates are found.

The current and the update version numbers can be seen at the top of the window and they are shown in this window even with the snapshot install.

The **Update** window can also be opened by clicking on the **About** icon and the **Update** button.

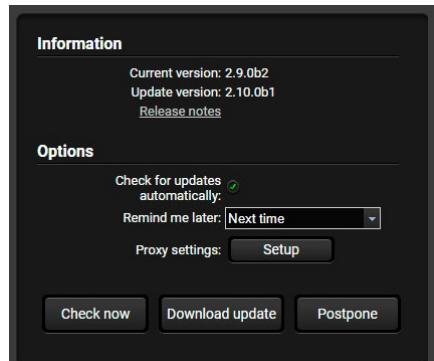


Step 2. Set the desired update setting in the **Options** section.

- If you do not want to check for the updates automatically, uncheck **the circle** that contains the green tick.
- If you want to postpone the update, a reminder can be set with different delays from the **drop down list**.
- If the proxy settings traverse the update process, set the proper values, then click on the **OK** button.

Step 3. Click on the **Download update** button to start the updating.

The updates can be checked manually by clicking on the **Check now** button.

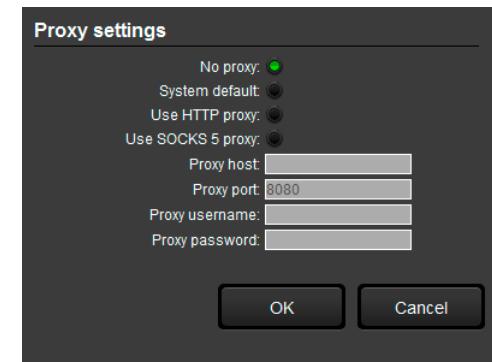


6.4. Running the LDC

The common way to start the software is to double-click on the LDC icon. But the LDC can be run by command line parameters as follows:

Connecting to a Device with Static IP Address

The LDC is connected to a device with the indicated static IP address directly; the Device Discovery window is not displayed. When the port number is not set, the default port is used: 6107 (LW3 protocol).

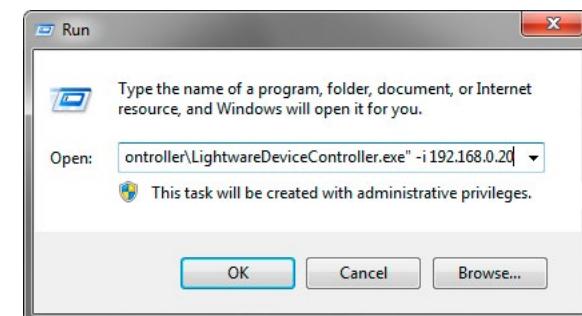

Format: LightwareDeviceController -i <IP_address>:<port>

Example: LightwareDeviceController -i 192.168.0.20:6107

Adjusting the Zoom

The window can be zoomed to a specific value to fit to the resolution of the desktop (higher/lower). '1' is the default value (100%).

Format: LightwareDeviceController -z <magnifying_value>


Example: LightwareDeviceController -z 1.2

ATTENTION: The last set value is stored and applied when LDC is started without a parameter.

6.5. Establishing the Connection

Step 1. Connect the device to a computer via Ethernet.

Step 2. Run the controller software; device discovery window appears automatically.

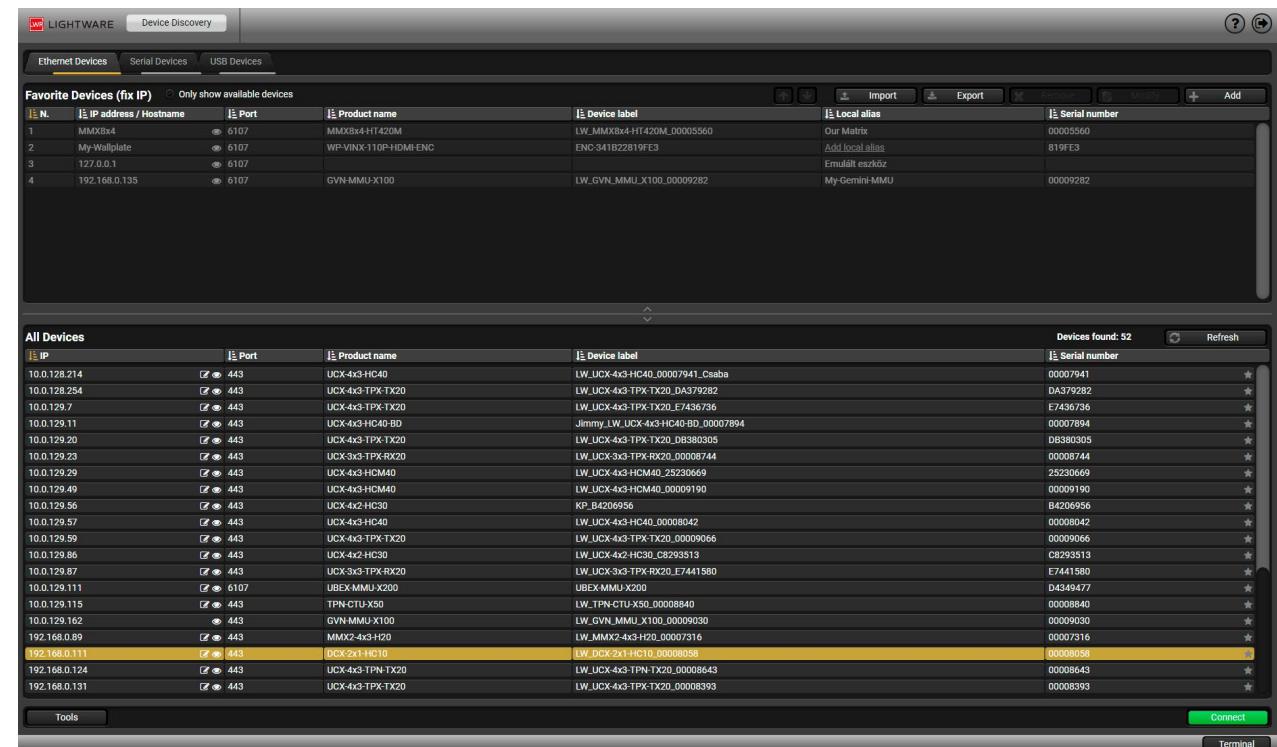

Device discovery window in LDC

The Ethernet tab consists of two lists. **All devices** list contains all Lightware devices that are available in the connected network. However, there is no need to browse all the available devices, as you can expand the list of **Favorite devices** with any Lightware device that is connected via Ethernet by any of the following ways:

- Mark the desired device with the ★ symbol in the **All Devices** list,
- Press the **Add** button and add the device in the appearing window, or
- Import the list of favorite devices that was **exported** previously.

When both the 6107 and 80 ports are disabled, only the secure 443 port remains open, the DCX switcher appears in the all devices list with 443 port.


INFO: When several ports are enabled, the device will appear in the list with the most secure one available: 6107 < 80 < 443 (with 6107 as the least and 443 as the most secure).

Add New Favorite Device

Press the **Add** button; in the appearing window you can enter the **IP address**. The **hostname** of the desired device can be used instead, if it is supported. That allows setting a unique name to identify the device in a network. If the host name is saved in this window and the IP address is changing, the device will still be available and connectible.

ATTENTION: The host name connection-feature does not work when the target device is accessed over VPN.

See more information about the host name property in the [Setting the Host Name](#) section.

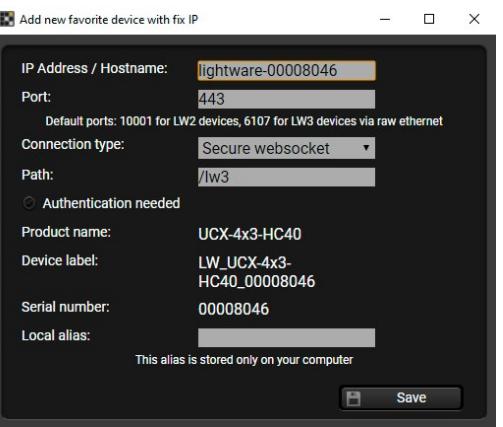

Import/Export the List of Favorite Devices


The list of favorite devices can be exported/imported by the dedicated buttons (saved as *.JSON file). The list can be imported later (in another computer, too), but please note that the current list will be overwritten by the imported list.

Changing the IP Address



To modify the IP address settings quickly, it is not necessary to enter the device's settings/network menu, you can set them by clicking the pencil icon beside the IP address.

You can see the new settings only in this window. The device needs a few seconds to apply the new settings. [#ipaddress](#)

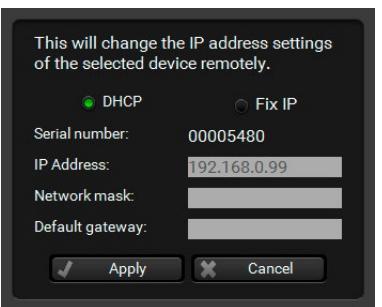

Identifying the Device



Clicking on the icon results in the blinking of the status LEDs for 10 seconds. The feature helps to find the device itself physically.

6.6. Bulk Device Management

It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the Tools button in the bottom left corner of the Device Discovery window and choosing the Bulk Management option.


6.6.1. Network Settings

It is possible to set the network settings of several devices at once by using a .csv file that contains the list of the devices that we need to configure, then uploading it into the LDC.

Please note that if the data in the file is missing or incorrect, then the discovery of the affected device will fail and an '**Invalid data**' message will be displayed in the State column. In case of an IP or MAC address conflict, the message is '**Duplicated**'.

BULK DEVICE MANAGEMENT									
Network Settings		Device Configuration							
Discovered	MAC Address	Part Number	DHCP	IP Address	Netmask	Gateway	Host Name	Device Label	State
✓ a8:d2:36:ff:50:23	91560003	DISABLED	192.168.0.111	255.255.255.0	192.168.0.1	lightware-00005023	LW_UMX-HDMI-140-Plus_00005023		Invalid Data
✓ a8:d2:36:00:55:60	91310042	ENABLED	192.168.0.116	N/A	N/A	MMX8x4	LW_MMX8x4-HT420M_00005560		
✓ a8:d2:36:ff:38:59	91540059	DISABLED	192.168.0.121	255.255.255.0	192.168.0.1	lightware-00003859	UMX-TPS-TX140-kicsirizs		
✓ a8:d2:36:ff:44:29	91310034	ENABLED	192.168.0.121	N/A	N/A	MMX4x2-HDMI	MMX4x2-HDMI		Duplicated
✓ a8:d2:36:ff:22:63	91540065	ENABLED	192.168.0.117	N/A	N/A	lightware-00002263	LW_SW4-TPS-TX240-Plus_00002263		
✓ a8:d2:36:ff:99:99	91540021	ENABLED	192.168.0.122	N/A	N/A	lightware-99999999	LW_HDMI-TPS-RX110AY_00005909		
✓ a8:d2:36:f0:69:74	91310082	ENABLED	192.168.0.112	N/A	N/A	lightware-00006974	LW_UCX-4x2-HC30D_00006974		
✓ a8:d2:36:f0:73:16	91310078	ENABLED	192.168.0.115	N/A	N/A	lightware-00007316	LW_MMX2-4x3-H20_00007316		
✓ a8:d2:36:ff:66:02	91310075	ENABLED	192.168.0.127	N/A	N/A	mtg-room1	MMX8x8_USB		

MACADDRESS	PARTNUMBER	DHCP	IP	NETMASK	GATEWAY	HOSTNAME	DEVICELABEL
a8:d2:36:ff:50:23	91560003	DISABLED	192.168.0.111	255.255.255.0	192.168.0.1	lightware-00005023	LW_UMX-HDMI-140-Plus_00005023
a8:d2:36:00:55:60	91310042	ENABLED	192.168.0.116	255.255.255.0	192.168.0.1	MMX8x4	LW_MMX8x4-HT420M_00005560
a8:d2:36:ff:38:59	91540059	DISABLED	192.168.0.121	255.255.255.0	192.168.0.1	lightware-00003859	UMX-TPS-TX140-kicsirizs
a8:d2:36:ff:44:29	91310034	ENABLED	192.168.0.120	255.255.255.0	192.168.0.1	lightware-00004429	MMX4x2-HDMI
a8:d2:36:ff:22:63	91540065	ENABLED	192.168.0.117	255.255.255.0	192.168.0.1	lightware-00002263	LW_SW4-TPS-TX240-Plus_00002263
a8:d2:36:ff:99:99	91540021	ENABLED	192.168.0.122	255.255.255.0	192.168.0.1	lightware-99999999	LW_HDMI-TPS-RX110AY_00005909
a8:d2:36:f0:69:74	91310082	ENABLED	192.168.0.112	255.255.255.0	192.168.0.1	lightware-00006974	LW_UCX-4x2-HC30D_00006974
a8:d2:36:f0:73:16	91310078	ENABLED	192.168.0.115	255.255.255.0	192.168.0.1	lightware-00007316	LW_MMX2-4x3-H20_00007316
a8:d2:36:ff:66:02	91310075	ENABLED	192.168.0.127	255.255.255.0	192.168.0.1	mtg-room1	MMX8x8_USB

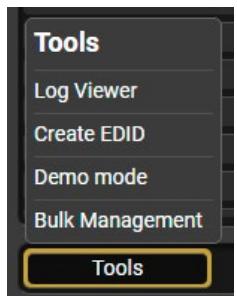

Changing the network settings can be done in a few easy steps:

- Step 1. First alter the settings you need to change in the .csv file that contains the devices. You can use a template file accessible via the **Export template** button and saving the file to your computer, then filling it out with the parameters of the devices. The file contains the MAC address, Partnumber, DHCP status, IP address, Netmask, Gateway, Hostname and Device label of each device.
- Step 2. Upload the .csv file into the LDC by pressing the **Choose network file** button and browsing the file in the pop-up window. This will result in a list of the devices appearing on the screen.
- Step 3. Finally, press the **Apply settings** button to execute the changes. This might take up to a minute to finish.


BULK DEVICE MANAGEMENT									
Network Settings		Device Configuration							
CHOOSE NETWORK FILE template_new.csv									
Discovered	MAC Address	Part Number	DHCP	IP Address	Netmask	Gateway	Host Name	Device Label	State
✓ a8:d2:36:ff:50:23	91560003	DISABLED	192.168.0.111	255.255.255.0	192.168.0.1	lightware-00005023	LW_UMX-HDMI-140-Plus_00005023		Invalid Data
✓ a8:d2:36:00:55:60	91310042	ENABLED	192.168.0.116	255.255.255.0	192.168.0.1	MMX8x4	LW_MMX8x4-HT420M_00005560		All Done
✓ a8:d2:36:ff:38:59	91540059	DISABLED	192.168.0.121	255.255.255.0	192.168.0.1	lightware-00003859	UMX-TPS-TX140-kicsirizs		Partly Done
✓ a8:d2:36:ff:44:29	91310034	ENABLED	192.168.0.120	255.255.255.0	192.168.0.1	lightware-00004429	MMX4x2-HDMI		Duplicated
✓ a8:d2:36:ff:22:63	91540065	ENABLED	192.168.0.117	255.255.255.0	192.168.0.1	lightware-00002263	LW_SW4-TPS-TX240-Plus_00002263		All Done
✓ a8:d2:36:ff:99:99	91540021	ENABLED	192.168.0.122	255.255.255.0	192.168.0.1	lightware-99999999	LW_HDMI-TPS-RX110AY_00005909		All Done
✓ a8:d2:36:f0:69:74	91310082	ENABLED	192.168.0.112	255.255.255.0	192.168.0.1	lightware-00006974	LW_UCX-4x2-HC30D_00006974		All Done
✓ a8:d2:36:f0:73:16	91310078	ENABLED	192.168.0.115	255.255.255.0	192.168.0.1	lightware-00007316	LW_MMX2-4x3-H20_00007316		All Done
✓ a8:d2:36:ff:66:02	91310075	ENABLED	192.168.0.127	255.255.255.0	192.168.0.1	mtg-room1	MMX8x8_USB		All Done

Message	DHCP enabled	DHCP disabled	Device discovered
✓ All Done	Successful procedure		✓
✗ Partly Done	Failure setting the Host name and/or the Device label		✗
Unavailable device	Host name and Device label missing	IP address, Network, and/or Gateway missing	✗
Failed	Host name and Device label incorrect	IP address, Network and Gateway incorrect	✓
IP mismatch	-	Host name and Device label incorrect	✗

ATTENTION: The '**Failed**' and '**IP mismatch**' status indicators are not common, they appear when the multicast and/or the port used for LMDMP connection is disabled, or if the firmware version of the device is below the recommended (see the pop-up window when opening the Bulk Management or the beginning of this chapter).

6.6.2. Device Configuration

Here you can choose the devices that need to be configured and upload a previously saved configuration to all of them at once. This is a helpful tool for quick and easy reconfiguration of the devices after a firmware update. This function allows uploading configurations to devices with the same firmware version, without changing their network settings.

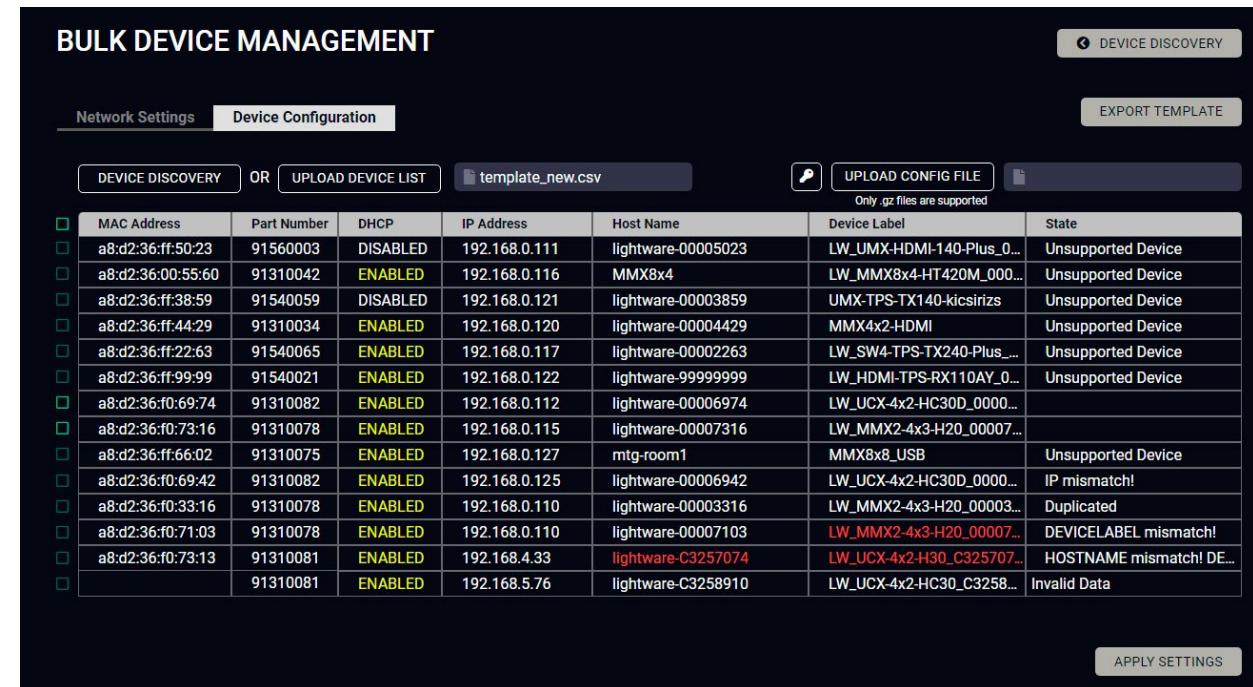

The screenshot shows the 'BULK DEVICE MANAGEMENT' interface. At the top, there are buttons for 'DEVICE DISCOVERY', 'EXPORT TEMPLATE', and 'UPLOAD CONFIG FILE' (with a note 'Only .gz files are supported'). Below these are tabs for 'Network Settings' and 'Device Configuration'. The main area is a table with columns: MAC Address, Part Number, DHCP, IP Address, Host Name, Device Label, and State. The table lists several devices, many of which are marked as 'Unsupported Device'. At the bottom right is a 'APPLY SETTINGS' button.

MAC Address	Part Number	DHCP	IP Address	Host Name	Device Label	State
a8:d2:36:ff:50:23	91560003	DISABLED	192.168.0.111	lightware-00005023	LW_UMX-HDMI-140-Plus_0...	Unsupported Device
a8:d2:36:00:55:60	91310042	ENABLED	192.168.0.116	MMX8x4	LW_MMX8x4-HT420M_000...	Unsupported Device
a8:d2:36:ff:38:59	91540059	DISABLED	192.168.0.121	lightware-00003859	UMX-TPS-TX140-kicsirizs	Unsupported Device
a8:d2:36:ff:44:29	91310034	ENABLED	192.168.0.120	lightware-00004429	MMX4x2-HDMI	Unsupported Device
a8:d2:36:ff:22:63	91540065	ENABLED	192.168.0.117	lightware-00002263	LW_SW4-TPS-TX240-Plus_...	Unsupported Device
a8:d2:36:ff:99:99	91540021	ENABLED	192.168.0.122	lightware-99999999	LW_HDMI-TPS-RX110AY_0...	Unsupported Device
a8:d2:36:f0:69:74	91310082	ENABLED	192.168.0.112	lightware-00006974	LW_UCX-4x2-HC30D_0000...	
a8:d2:36:f0:73:16	91310078	ENABLED	192.168.0.115	lightware-00007316	LW_MMX2-4x3-H20_00007...	
a8:d2:36:ff:66:02	91310075	ENABLED	192.168.0.127	mtg-room1	MMX8x8_USB	Unsupported Device
a8:d2:36:f0:69:42	91310082	ENABLED	192.168.0.125	lightware-00006942	LW_UCX-4x2-HC30D_0000...	IP mismatch!
a8:d2:36:f0:33:16	91310078	ENABLED	192.168.0.110	lightware-00003316	LW_MMX2-4x3-H20_00003...	Duplicated
a8:d2:36:f0:71:03	91310078	ENABLED	192.168.0.110	lightware-00007103	LW_MMX2-4x3-H20_00007...	DEVICELABEL mismatch!
a8:d2:36:f0:73:13	91310081	ENABLED	192.168.4.33	lightware-C3257074	LW_UCX-4x2-H30_C325707...	HOSTNAME mismatch! DE...
	91310081	ENABLED	192.168.5.76	lightware-C3258910	LW_UCX-4x2-HC30_C3258...	Invalid Data

Please note that if the data in the .csv file is missing or incorrect, then the discovery of the affected device will fail and an 'Invalid data' message will be displayed in the State column. In case of an IP or MAC address conflict, the message is 'Duplicated', or if the IP address is incorrect, 'IP mismatch!'. 'Hostname mismatch!' or 'Device label mismatch!' appears if the respective values are incorrect.

Changing the configuration of the devices can be done in a few easy steps.


- Step 1. Set the desired configurations in one of the devices, then clone your configuration in the **Settings** menu, under the **System** tab. Click on the **Download clone file** button in the right, set the file name in the pop-up window and press **Save**. Please note that this file is not available for offline editing.
- Step 2. Go back to the Device Discovery screen of the LDC, click on the **Tools** button in the bottom left corner and select the **Bulk Management** option.
- Step 3. Select the Device Configuration tab, then press the black **Device discovery** button for the LDC to list all compatible devices, or upload a device list that has been created beforehand. For such a file, you can use a template by clicking on the **Export template** button and saving it to your computer, see in the previous section. You can upload this file into the LDC by clicking on the **Upload device list** button, browsing the desired file and pressing the **Open** button.

Step 4. Once uploaded, you can further select devices from the list to be configured or you can change settings in all of them by ticking the box next to the head of the list.

Step 5. To change the configuration of the devices, you need to upload a configuration file previously saved from a device with the same firmware version via the **Upload config file** button. Browse the file in the pop-up window and press **Open**.

Step 6. In order to upload a configuration to a device that has authentication, it is necessary to fill out the credentials. This can be done via the **Credential Details** button (key icon in case of a smaller window). LDC will attempt uploading the configuration over HTTPS first, if that fails, it will attempt it over HTTP.

Step 7. Click on the **Apply settings** button in the lower right corner to start the reconfiguration procedure.

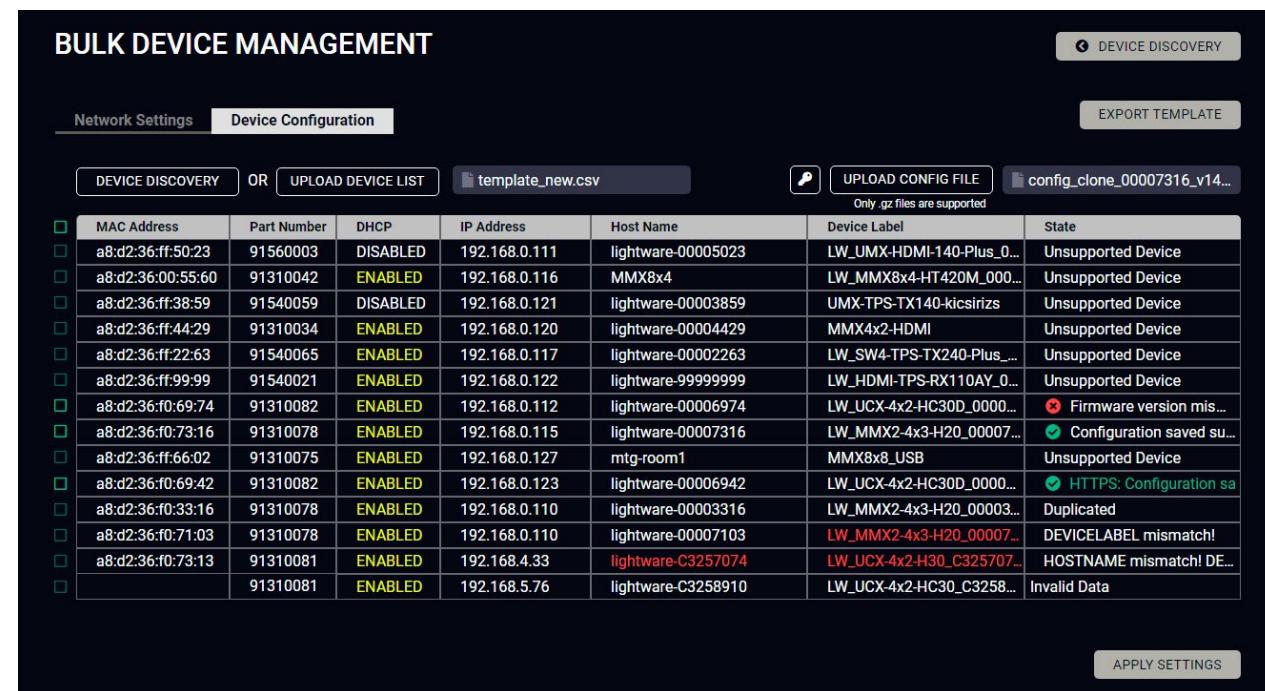

The screenshot shows the 'BULK DEVICE MANAGEMENT' interface. It is similar to the first one but with a different configuration file loaded. The table shows the same devices, but the 'State' column for several entries now includes a green checkmark and the text 'Configuration saved successfully'. At the bottom right is a 'APPLY SETTINGS' button.

MAC Address	Part Number	DHCP	IP Address	Host Name	Device Label	State
a8:d2:36:ff:50:23	91560003	DISABLED	192.168.0.111	lightware-00005023	LW_UMX-HDMI-140-Plus_0...	Unsupported Device
a8:d2:36:00:55:60	91310042	ENABLED	192.168.0.116	MMX8x4	LW_MMX8x4-HT420M_000...	Unsupported Device
a8:d2:36:ff:38:59	91540059	DISABLED	192.168.0.121	lightware-00003859	UMX-TPS-TX140-kicsirizs	Unsupported Device
a8:d2:36:ff:44:29	91310034	ENABLED	192.168.0.120	lightware-00004429	MMX4x2-HDMI	Unsupported Device
a8:d2:36:ff:22:63	91540065	ENABLED	192.168.0.117	lightware-00002263	LW_SW4-TPS-TX240-Plus_...	Unsupported Device
a8:d2:36:ff:99:99	91540021	ENABLED	192.168.0.122	lightware-99999999	LW_HDMI-TPS-RX110AY_0...	Unsupported Device
a8:d2:36:f0:69:74	91310082	ENABLED	192.168.0.112	lightware-00006974	LW_UCX-4x2-HC30D_0000...	✖ Firmware version mis...
a8:d2:36:f0:73:16	91310078	ENABLED	192.168.0.115	lightware-00007316	LW_MMX2-4x3-H20_00007...	✓ Configuration saved su...
a8:d2:36:ff:66:02	91310075	ENABLED	192.168.0.127	mtg-room1	MMX8x8_USB	Unsupported Device
a8:d2:36:f0:69:42	91310082	ENABLED	192.168.0.123	lightware-00006942	LW_UCX-4x2-HC30D_0000...	✓ HTTPS: Configuration sa...
a8:d2:36:f0:33:16	91310078	ENABLED	192.168.0.110	lightware-00003316	LW_MMX2-4x3-H20_00003...	Duplicated
a8:d2:36:f0:71:03	91310078	ENABLED	192.168.0.110	lightware-00007103	LW_MMX2-4x3-H20_00007...	DEVICELABEL mismatch!
a8:d2:36:f0:73:13	91310081	ENABLED	192.168.4.33	lightware-C3257074	LW_UCX-4x2-H30_C325707...	HOSTNAME mismatch! DE...
	91310081	ENABLED	192.168.5.76	lightware-C3258910	LW_UCX-4x2-HC30_C3258...	Invalid Data

The list will be updated when the configuration procedure is finished, where in case of success, the ✓ Configuration saved successfully message will be displayed in the State column.

Please note that a configuration can only be applied to a device with the same firmware version, otherwise the ✖ Firmware version mismatch error message will appear under the State column.


If the configuration is applied to a different variant, the ✖ Variant mismatch error message will appear.

If the network settings are incorrect, applying the configuration will fail, and the message ✖ Incorrect network settings will appear under the State column.

For more details about saving a configuration, see the [Clone configuration](#) section.

If a device that is in the list is not connected to the network or its IP address is incorrect, the software will fail to detect it, and will display a ✖ Failed to fetch message in the State column when applying settings.

6.7. Video & Audio Crosspoint

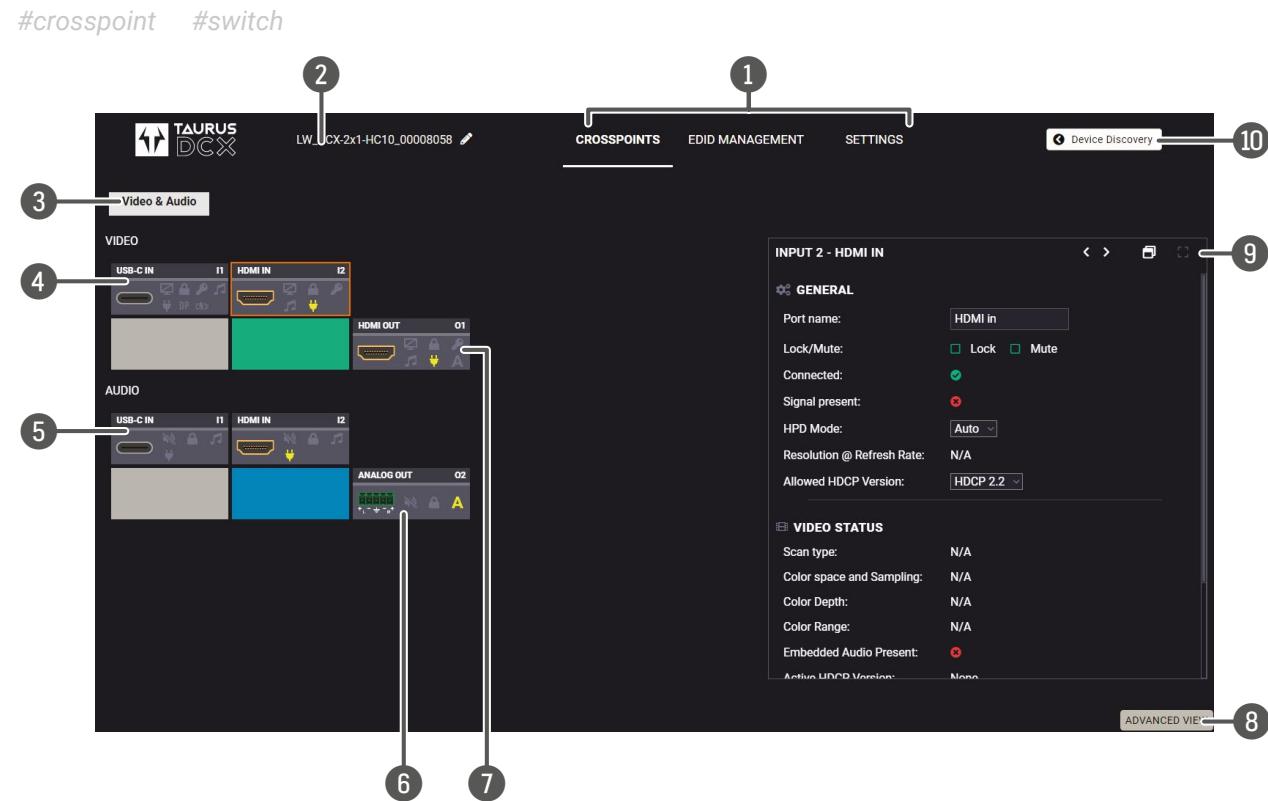


- 1 Main menu The available menu items are displayed. The active one is shown with dark grey background color.
- 2 Information ribbon The label shows the device label, which can be edited in the Settings menu - Status tab.
- 3 Submenu selector The audio and video crosspoint menu and the USB crosspoint menu are available under the two tabs.
- 4 Video input ports Each tile represents a video input port: [USB-C Inputs](#), [HDMI Video Inputs](#). The tile below the port shows the current crosspoint setting; if the port is switched to the output, the color of the tile is green, otherwise grey. Clicking on the tile opens the input properties window.
- 5 Audio input ports Each tile represents an audio input port. All of them are logical audio ports, they mean the de-embedded audio channel of the selected USB-C/HDMI inputs. For more details, see [Embedded Audio Input](#).
- 6 Audio output port Analog audio output port; clicking on the O3 tile opens the [Analog Audio Output](#) window.
- 7 Video output ports HDMI video output ports; clicking on the tile opens the [HDMI Video Output](#) port properties window.
- 8 Advanced view Displaying the [Advanced View Window](#), showing the Terminal window and the LW3 protocol tree.
- 9 Properties window Settings and status information of the selected panel are displayed in this section. Clicking on the icon opens the properties section in a new window.
- 10 Navigation button The device discovery window can be displayed by clicking on this button.

TIPS AND TRICKS: Hover the mouse cursor over the information ribbon; the **device label** and the **IP address** of the device will appear as a tooltip text.

6.7.1. Port Tiles

The colors of the port tiles and the displayed icons represent different states and information:

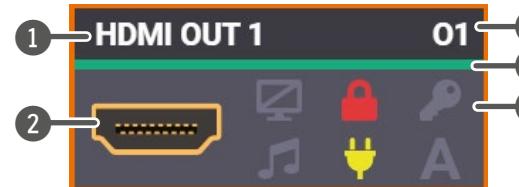

- 1 Port name
- 2 Port symbol
- 3 Port number
- 4 Signal present indicator
green: present
grey: not present
- 5 State indicators

State Indicators `#lock #unlock #mute #unmute`

The following icons display different states of the port/signal:

Icon is grey	Description	Icon is highlighted	Description
	Port is unmuted		Port is muted
	Port is unlocked		Port is locked
	Signal is not encrypted with HDCP		Signal is encrypted with HDCP (the HDCP version is displayed)
	Embedded audio is not present		Embedded audio is present
	There is no connected device		The device is connected
	No USB Host connected or DP Alt mode is not supported by USB Host		DP Alternate mode successfully entered
			Unable to enter DP Alternate mode
	Autoselect is disabled		Autoselect is enabled
	Audio is unmuted		Audio is muted
	Charging function is inactive		Charges the connected device

6.8. Port Properties Window

Clicking on the port tile opens the Port properties window. This section shows the available settings and status information by port types. `#lock #unlock #mute #unmute`

General

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock `#lock #unlock`


The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

Mute `#mute #unmute`

The port can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

6.8.1. USB-C Inputs

Clicking on the USB-C video input port icon opens the Port properties window. The most important information and settings are available from the panel.

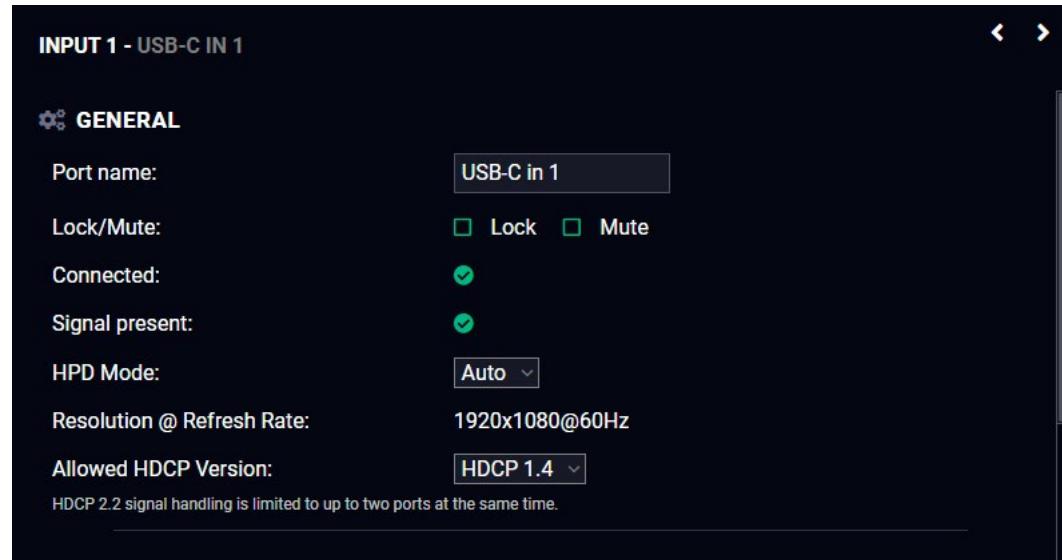

USB-C input port properties window

HPD Mode

Hot Plug Detection function can be set here. Using Auto mode is highly recommended.

Status information

Connected / Signal Presence / Resolution


Allowed HDCP Version `#hdcp`

ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.

- **Off:** The connected source will detect that the switcher is not HDCP-compliant and turn off authentication if the content allows it.
- **HDCP 1.4:** The connected source will detect that the switcher is compliant with HDCP 1.4, but not compliant with HDCP 2.2.
- **HDCP 2.2:** The connected source will detect that the switcher is compliant with HDCP 2.2.

Video Status

This section gives a feedback about the current video stream:

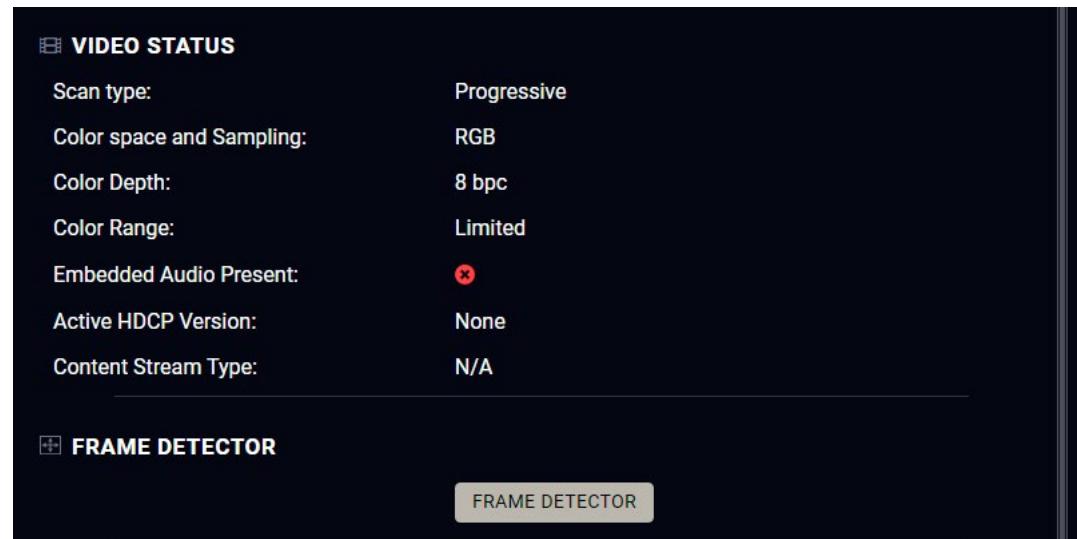


USB-C input port properties window

Frame detector

For more details, see the [Frame Detector](#) section.

DisplayPort Link

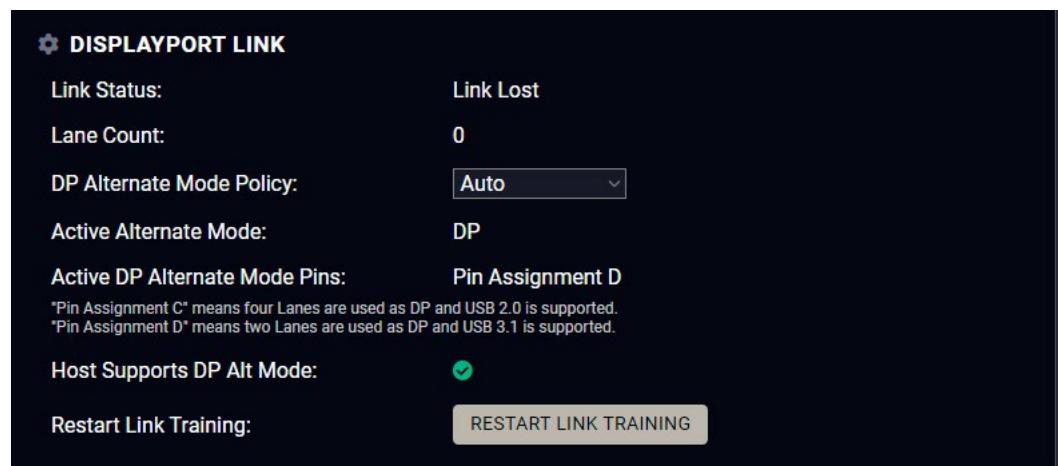

USB-C input port properties window

INFO: The USB-C source sends Displayport video signal, so the video setting options of the USB-C port are similar to the DisplayPort. The DCX switcher converts DP signal to HDMI internally.

DP Alternate Mode Policy

The following parameters can be set:

The two different signals (video and USB 3.x) can be transmitted at the same time with shared bandwidth. In this case DP video reserves 2x Superspeed Channels for the video signal in alternate mode, and there are 2x Superspeed Channels for USB 3.x.

- **Auto:** Taurus offers both operation modes described below. The BYOD device can choose between the two. Neither USB3, nor 4 lane DP Alt mode operation (4K@60) is guaranteed. BYOD devices supporting USB3.x usually choose shared mode: USB3.1 and 2 lane DP.
- **Prefer video:** Uses 4 Lanes for Displayport video, in this case USB 3.x data transmission does not operate.
- **Prefer USB 3.1:** The two different signals (DP video and USB 3.x) can be transmitted at the same time with shared bandwidth. DP video reserves 2 Lanes.

DIFFERENCE: The DCX-2x1-HC10 model only has a forced **4 Lane Video** setting.


Restart Link Training [#linktraining](#)

Link training is a process where the source (PC, laptop, media server) and the sink (switcher) agree on a data rate, lane count and electrical parameters. The successful link training is a pre-requisite of the video transmission. If the quality of the USB cable is insufficient to reliably handle higher data rates, link training will result in a lower data rate, where stable connection between the source and the switcher can be maintained.

Clicking on the **Restart Link Training** button starts to build up the connection again between the switcher and the source (it happens automatically when the source is connected). It is equal to unplugging and reconnecting the Type-C connector.

6.8.2. HDMI Video Input

Clicking on the HDMI video input port icon results in opening the Port properties window. The most important information and settings are available from the panel.

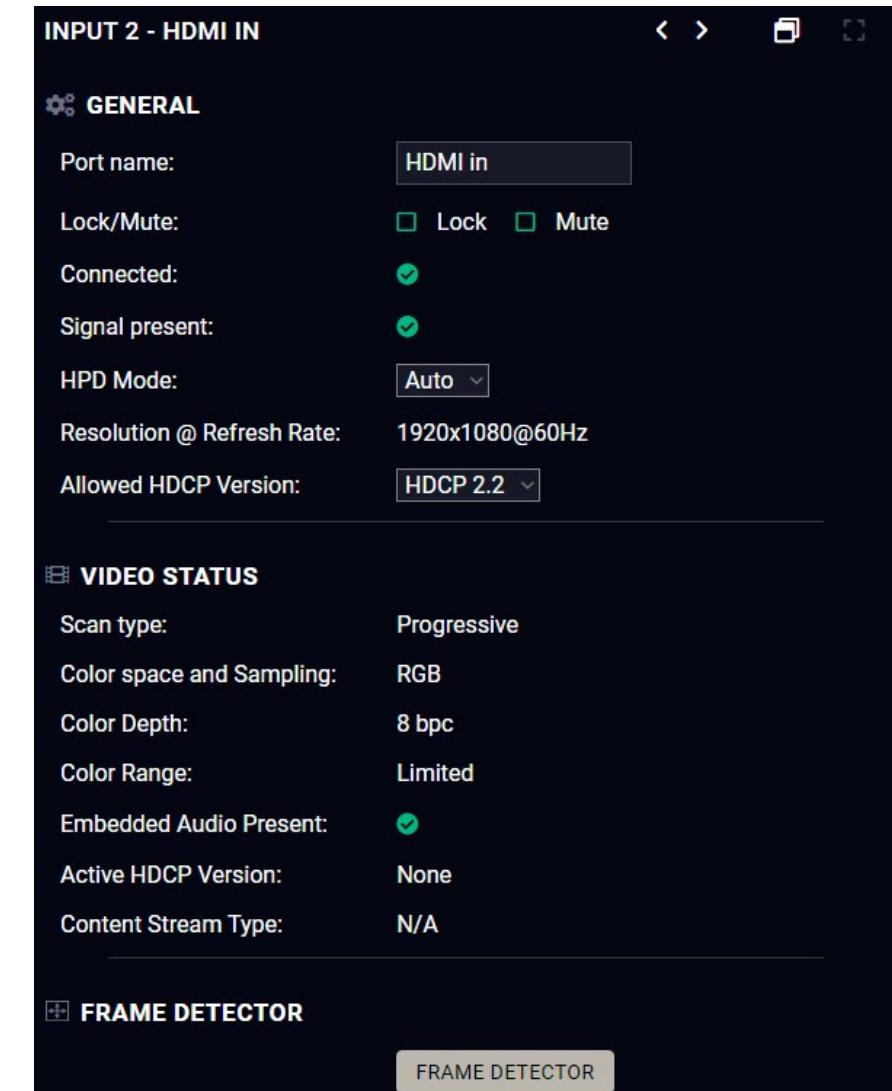

Port properties window of the HDMI video input

Available settings and tools

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock `#lock #unlock`

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

INFO: When the locked input is switched to the output, the crosspoint state can not be changed and all inputs are locked in that line.

Mute `#mute #unmute`

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

Allow HDCP Version `#hdcp`


ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.

- **Off:** The connected source will detect that the switcher is not HDCP-compliant and turn off authentication if the content allows it.
- **HDCP 1.4:** The connected source will detect that the switcher is compliant with HDCP 1.4, but not compliant with HDCP 2.2.
- **HDCP 2.2:** The connected source will detect that the switcher is compliant with HDCP 2.2.

Frame detector

For more details, see the [Frame Detector](#) section.

6.8.3. HDMI Video Output

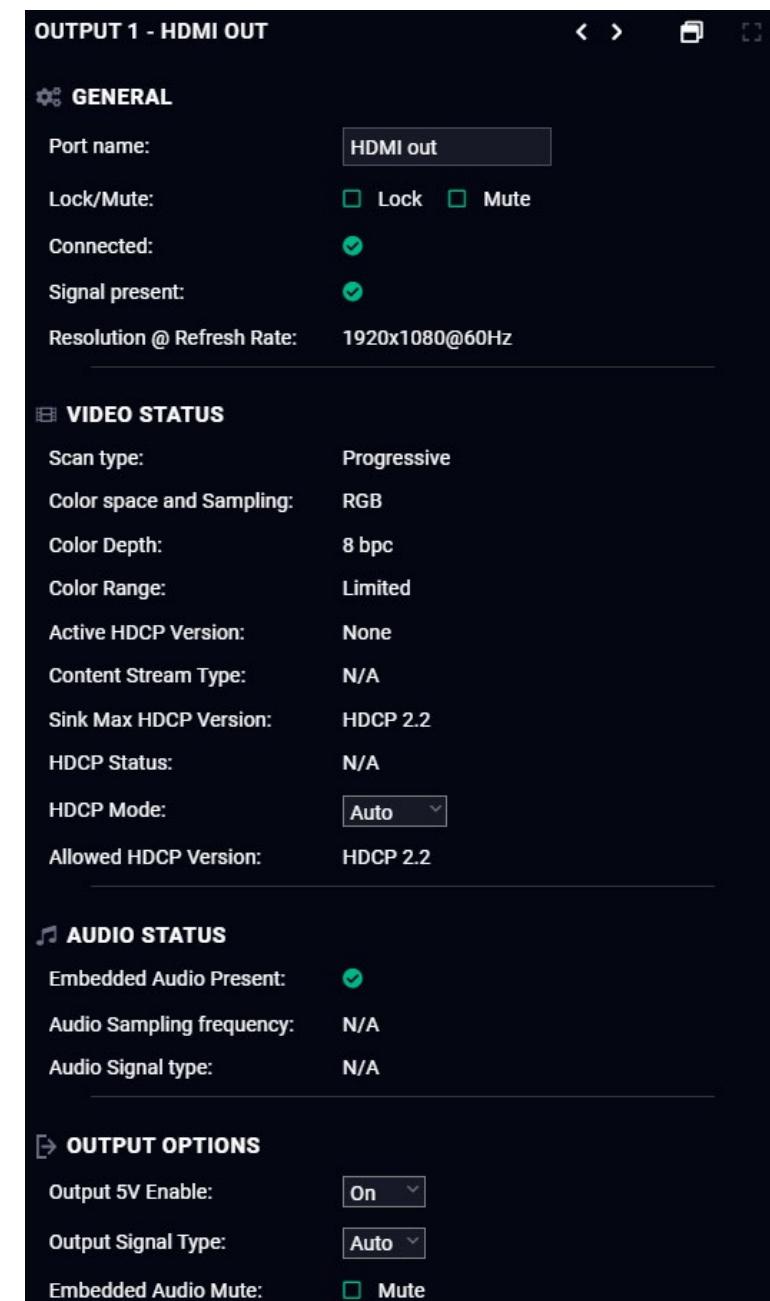

Port properties window of the HDMI video output

Available settings and tools

General

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock `#lock #unlock`

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

Mute `#mute #unmute`

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

HDCP Mode `#hdcp`

- HDCP mode:** Auto / Always - The transmitter forces the source to send the signal without encryption if the content allows when Auto mode is selected; `#signaltypes` `#hdcp`

Output Options

Output 5V Enable

- Auto / On / Off - The setting lets the source and the sink devices be connected – independently of the transmitted signal.

Output Signal Type

- Auto / DVI - The outgoing signal format can be selected from a drop-down menu.

Embedded Audio Mute

Add a tick to turn off the embedded audio.

Frame detector

For more details, see the [Frame Detector](#) section.

Autoselect

Autoselect feature makes the switching of an input to an output without human intervention possible. The crosspoint state changes based on the active input signals.

Three operation policies can be set: `#autoselect # videoautoselect`

Disable autoselect: crosspoint state change happens manually.

First detect: selected input port is kept connected to the output as long as it has an active signal.


Last detect mode: it is always the last attached input that is selected to be transmitted.

Individual input settings: it is always the highest priority active input that is selected to be transmitted (1- highest priority, 100- lowest priority).


Pay attention to the following settings for the proper operation of the Autoselect function:

- Be sure that all priority values are filled in;
- Be sure that all inputs are enabled with the green tick on the right side;
- Always click on the **Apply autoselect settings** button after the changes to launch the new settings.

See more details about the feature in [The Autoselect Feature](#) section.

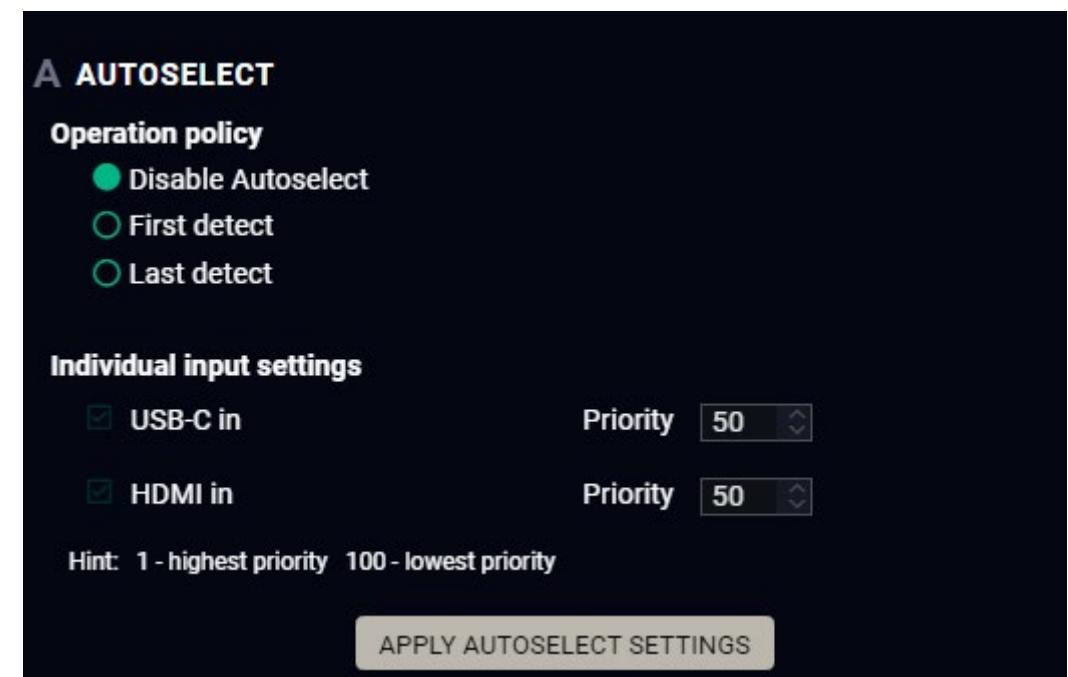

6.8.4. Embedded Audio Input

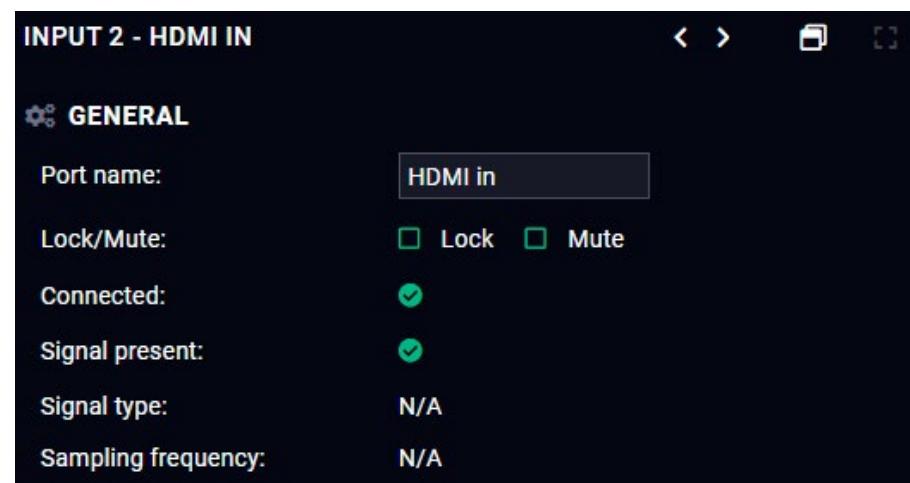

Port properties window of the audio input

Available settings

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.


Lock `#lock #unlock`

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

Mute `#mute #unmute`

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no audio signal is transmitted from the input port.

6.8.5. Analog Audio Output

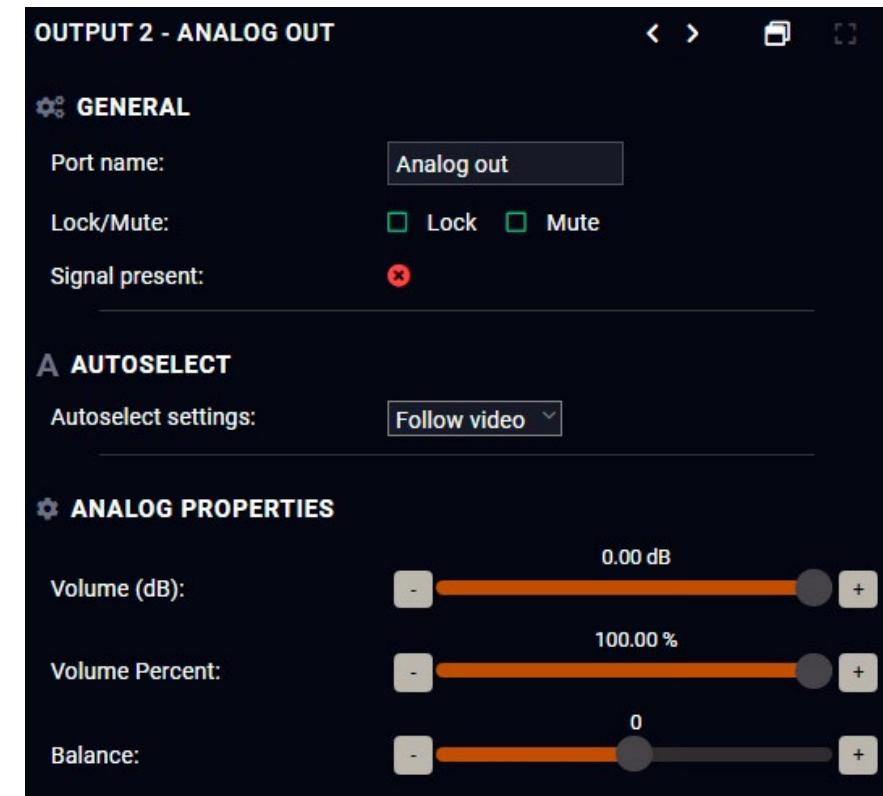

Port properties window of the analog audio output

Available settings: `#analogaudio #volume #balance`

- Port name
- Mute/unmute the port;
- Lock/unlock the port;
- Autoselect settings: off / follow video. Follow video option means that the audio of the selected video input will be switched to the analog audio output. When the video crosspoint changes, audio crosspoint follows it.
- Volume: from 100 to 0%, in step 1% (0 dB to -95.625 dB, in step 0.375 dB (default is 0 dB));
- Balance: from -100 to +100, in step 1 (default is 0 = center).

6.8.6. Frame Detector

The ports can show detailed information about the signal like full size and active video resolution. This feature is a good troubleshooter if compatibility problems occur during system installation. To access this function, open the port properties window and click on the **Frame detector** button. [#framedetector](#)



Frame Detector Window

Lightware's Frame Detector function works like a signal analyzer and makes it possible to determine the exact video format that is present on the port, thus helps identify many problems. E.g. actual timing parameters may differ from the expected and this may cause some displays to drop the picture.

Frame Detector measures detailed timings on the video signals just like a built-in oscilloscope, but it is much easier to use. The actual display area shows the active video size (light grey). Dark grey area of the full frame is the blanking interval, which can contain the info frames and embedded audio data for HDMI signals. Shown values are measured directly on the signal and not retrieved only from the HDMI info frames.

It is possible to download the results by clicking on the **Export Data to CSV** button.

Automatic scrolling can be toggled by clicking on the **Autoscroll** checkbox in the lower right corner. It is enabled by default.


6.9. CEC Tool

The device is able to send Consumer Electronics Control (CEC) commands via the HDMI outputs. This feature is to remote control the sink device. CEC is a bi-directional communication via the HDMI cable.

#cec

ATTENTION: Make sure that the controlled unit is CEC-capable and this function is enabled.

INFO: Taurus DCX series devices are only capable of sending CEC commands, but not of receiving them.

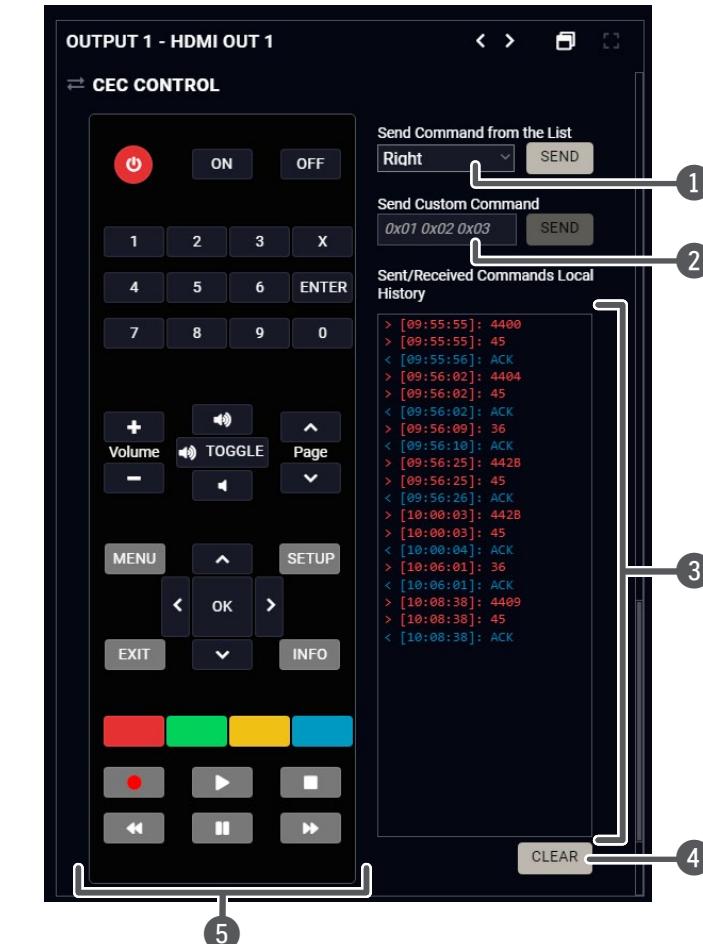

- 1 **Drop-down command list** Containing the basic CEC commands, most of them are displayed on the graphical interface too (on the left side). Click on the **Send** button to send the command.
- 2 **Custom command textbox** The text field is for sending hexadecimal commands in the indicated format to the source. Click on the **Send** button to send the command.
- 3 **Received Command box** Displays all the sent CEC commands (in red) and the received answers (in blue) with a timestamp.
- 4 **Clear button** Click on the **Clear** button to erase the content of the terminal window.
- 5 **CEC command button panel** This panel provides the quick and easy management of CEC commands. These buttons are pre-programmed with basic functions and send commands towards the sink. The communication is displayed in the Received Command box. For the list of the commands, see the [CEC Command Sending](#) section. Both the layout and functionality are similar to the design of a remote control.

It can occur that the third-party device can receive, but not execute the command, because it is not supported by the product. Check the accepted commands in the documentation of the device.

6.10. EDID Menu

Advanced EDID Management can be accessed by selecting the EDID menu. There are two panels: the left one contains Source EDIDs, the right one contains Destination places where the EDIDs can be emulated or copied to.

EDID Menu

Control Buttons

EXPORT	Exporting an EDID (save to a file)		Transfer button: executing EDID emulation or copying
IMPORT	Importing an EDID (load from a file)	DELETE SELECTED	Deleting EDID (from User memory)
INFO	Display EDID Summary window	SELECT ALL	Selecting all memory places in the right panel
EDIT	Opening Advanced EDID Editor with the selected EDID	SELECT NONE	Selecting none of the memory places in the right panel
CREATE	Opening Easy EDID Creator		

#edid

6.10.1. EDID Operations

Changing Emulated EDID

- Step 1. Choose the desired **EDID list** on the source panel and select an **EDID**.
- Step 2. Press the **Emulated** button on the top of the Destination panel.
- Step 3. Select the desired **port** on the right panel (one or more ports can be selected); the EDID(s) will be highlighted in yellow.
- Step 4. Press the **Transfer** button to change the emulated EDID.

Learning an EDID

The process is the same as changing the emulated EDID; the only difference is the Destination panel: press the **User** button. Thus, one or more EDIDs can be copied into the user memory either from the factory memory or from a connected sink (Dynamic).

Exporting an EDID

A source EDID can be downloaded as a file (*.bin, *.dat or *.edid) to the computer.

- Step 1. Select the desired **EDID** from the Source panel (line will be highlighted in yellow).
- Step 2. Press the **Export** button to open the dialog box and save the file to the computer.

Importing an EDID

A previously saved EDID (*.bin, *.dat or *.edid file) can be uploaded to the user memory:

IMPORT

- Step 1. Press the **User** button on the top of the Source panel and select a **memory** slot.
- Step 2. Press the **Import** button below the Source panel.
- Step 3. Browse the file in the opening window then press the **Open** button. The browsed EDID is imported into the selected User memory.

ATTENTION: The imported EDID overwrites the selected memory place even if it is not empty.

Deleting EDID(s)

The EDID(s) from User memory can be deleted as follows:

DELETE SELECTED

- Step 1. Press the **User** button on the top of the Destination panel.
- Step 2. Select the desired **memory** slot(s); one or more can be selected ("Select All" and "Select None" buttons can be used). The EDID(s) will be highlighted in yellow.
- Step 3. Press the **Delete selected** button to delete the EDID(s).

6.10.2. EDID Summary Window

Select an EDID from the Source panel and press the **Info** button to display the EDID summary.


INFO

GENERAL	
EDID version:	1
EDID revision:	3
Manufacturer ID:	LWR (Lightware Visual Engineering)
Product ID:	0000
Monitor serial number:	Not present
Year of manufacture:	2010
Week of manufacture:	Not Used
Signal interface:	Digital
Separate Sync H&V:	-
Composite sync on H:	-
Sync on green:	-
Serration on VS:	-
Color depth:	Undefined
Interface standard:	Not defined
Color spaces:	RGB 4:4:4
Aspect ratio:	0
Display size:	0 cm X 0 cm

EDID Summary Window

6.10.3. Editing an EDID


Select an EDID from the Source panel and press the Edit button to display the Advanced EDID Editor window. The editor can read and write all descriptors that are defined in the standards, including the additional CEA extensions. Any EDID from the device's memory or a saved EDID file can be loaded into the editor. The software resolves the raw EDID and displays it as readable information to the user. All descriptors can be edited, saved in an EDID file, or uploaded to the User memory. For more details about EDID Editor, please visit our website (www.lightware.com) and download the [EDID Editor Application note](#).

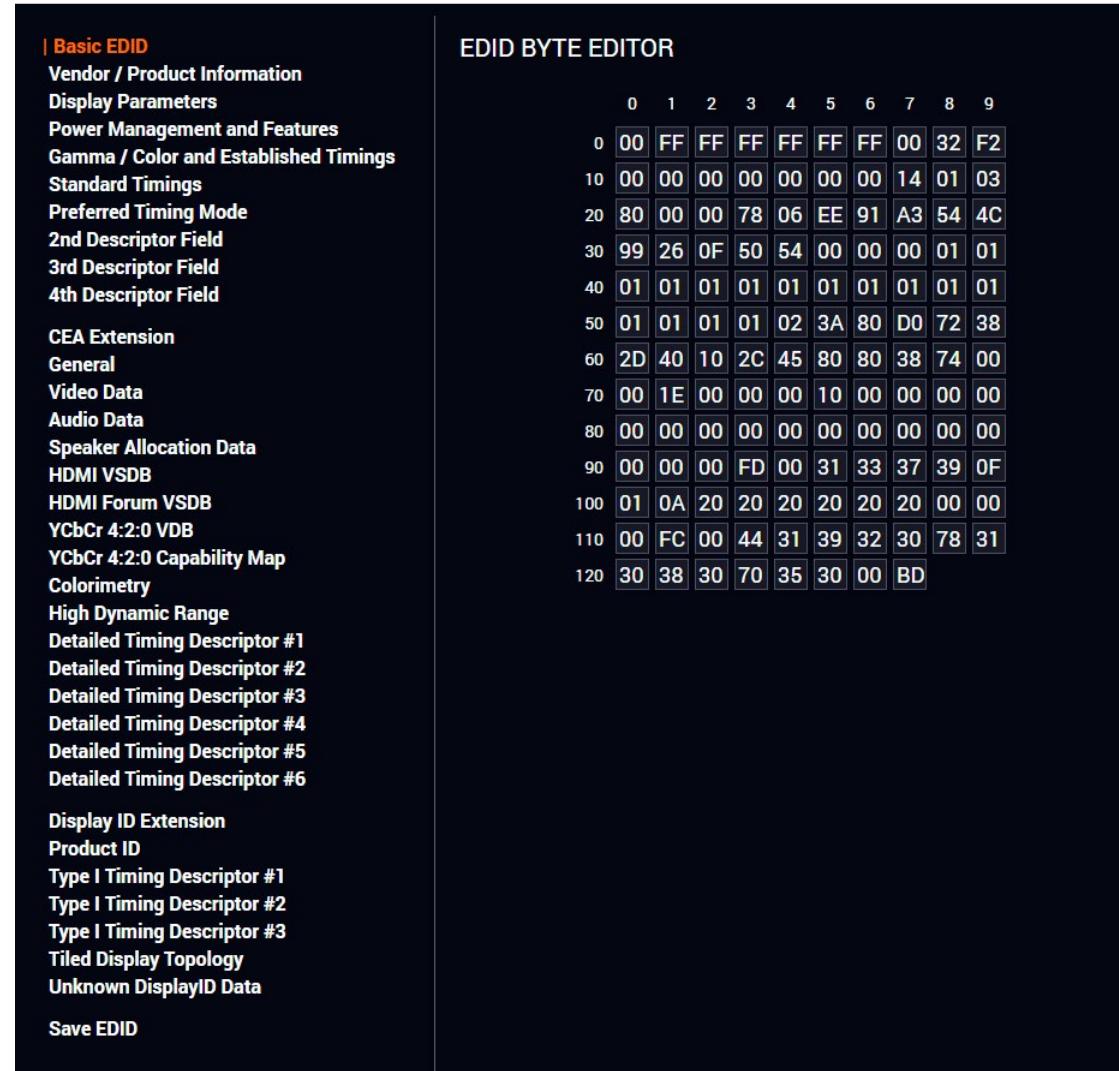

EDID Editor Window

6.10.4. Creating an EDID - Easy EDID Creator


Since the Advanced EDID Creator mentioned above needs more complex knowledge about EDID, Lightware introduced a wizard-like interface for fast and easy EDID creation. With Easy EDID Creator, it is possible to create custom EDIDs in four simple steps. By clicking on the **CREATE** button below the Source panel, **Easy EDID Creator** is opened in a new window. For more details about the EDID Editor, please visit our website (www.lightware.com) and download the [EDID Editor Application note](#).

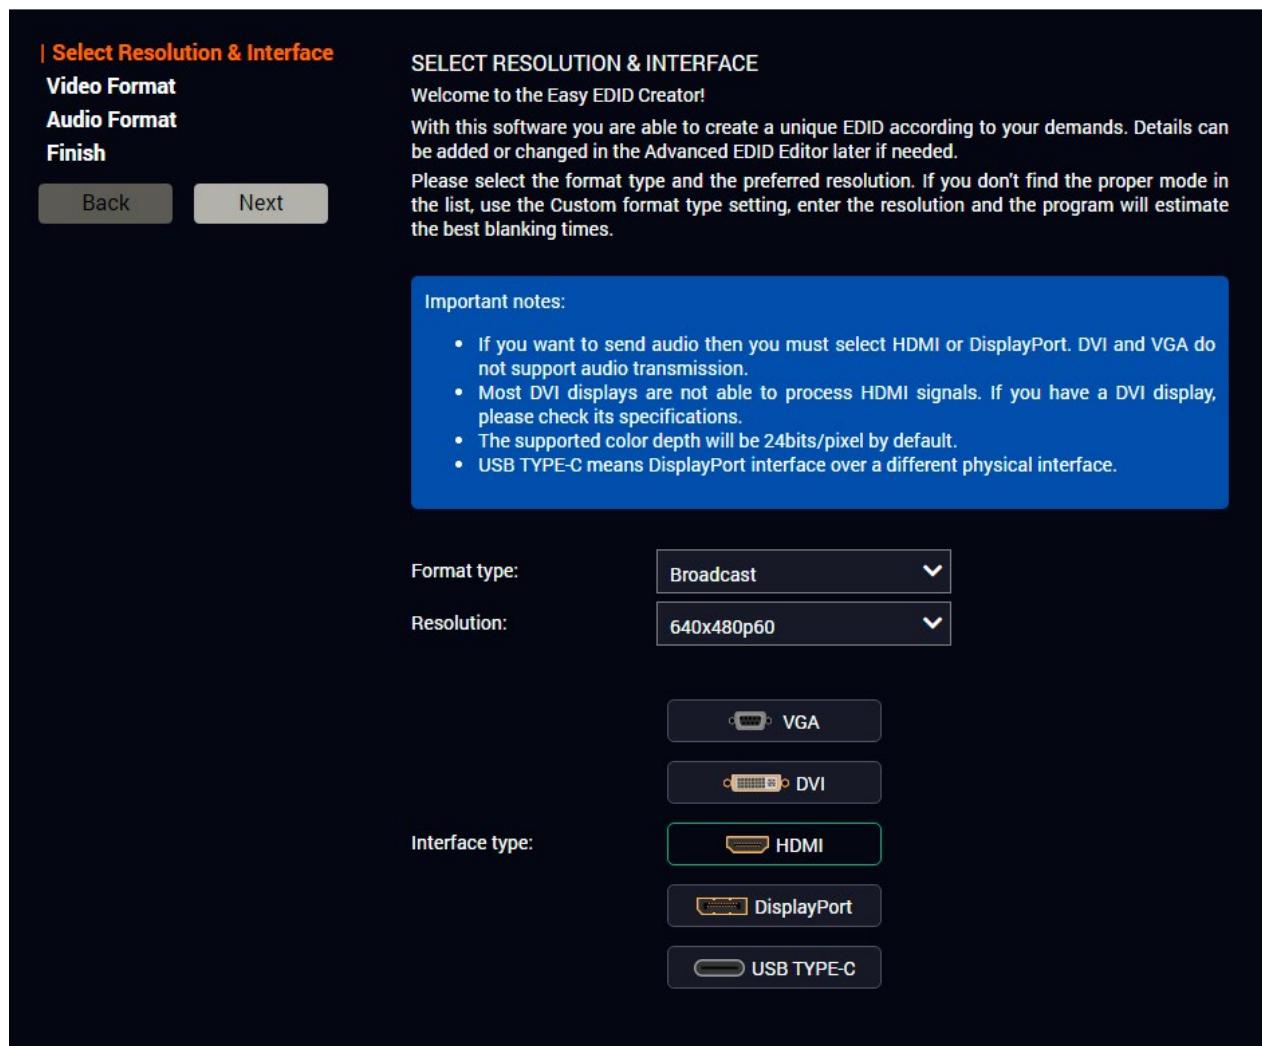

EDID Creator Window

6.11. Control Menu

6.11.1. Ethernet

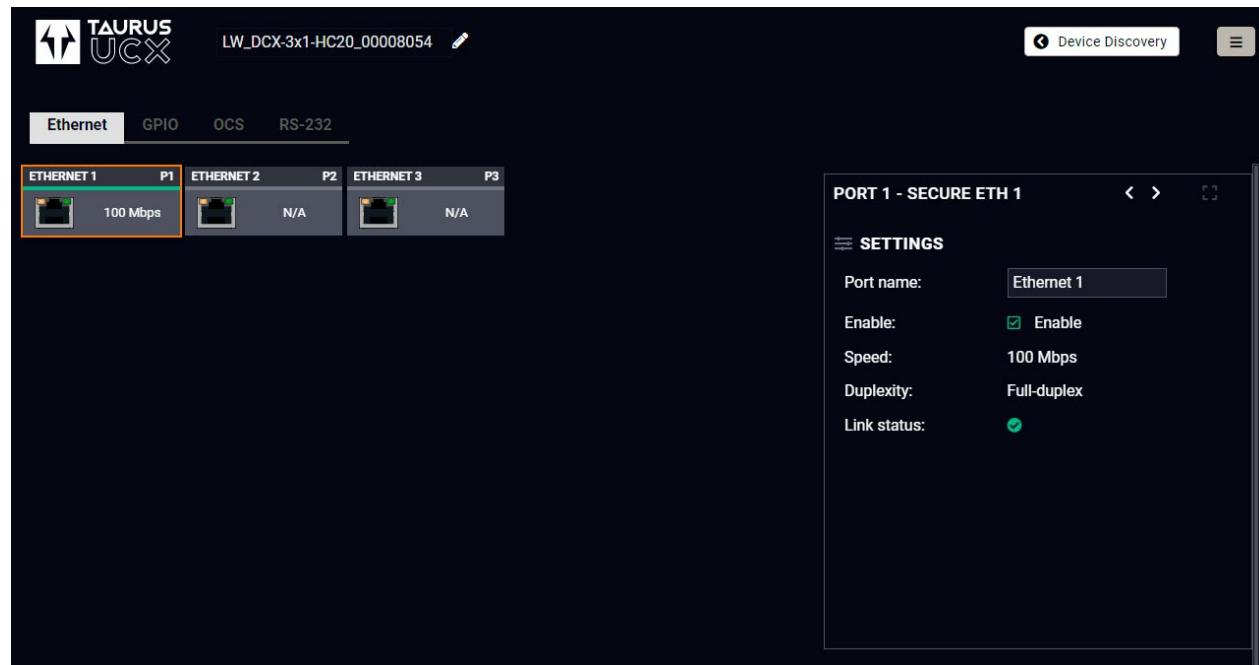

Ethernet tab in Control menu

Three Ethernet ports are displayed in the Ethernet settings that belong to the RJ45 Ethernet connectors. You can check the status of the Ethernet line by each port: the speed and the duplexity of the connection.


The following settings are available for each port:

- Rename the port,
- Enable / disable the port;


6.11.2. GPIO

DIFFERENCE: The DCX-2x1-HC10 switcher does not have a GPIO port.

The GPIO port has 6 pins, which operate at TTL digital signal levels and can be controlled by LDC or protocol commands. Select a GPIO pin under the Port settings section; the settings (pin direction and input level) are displayed on the port tiles as well. `#gpio`

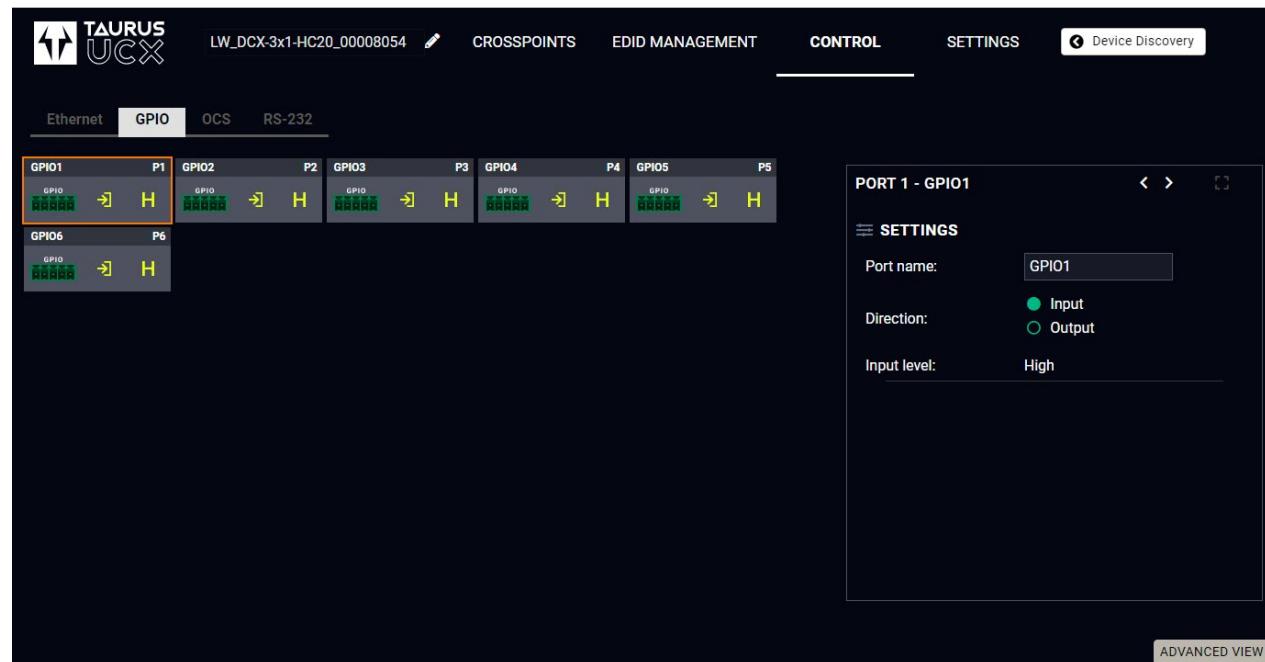

INFO: Output level can be set only if the pin direction is set to Output. In case of input direction, the output level setting and the **Toggle** button is not available.

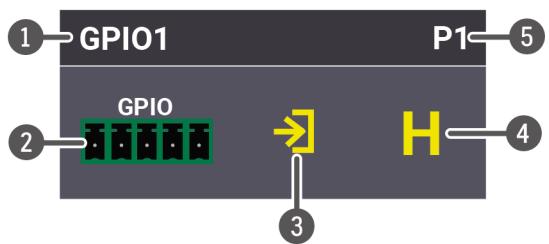

- 1 GPIO pin name
- 2 GPIO Port symbol
- 3 Pin direction:
 - Input
 - Output
- 4 Level indicator:
 - L: Low
 - H: High
- 5 GPIO Port number


Interval

Interval section is designed for setting the chosen GPIO pin to the specified level for a specified time. Configure the **Duration** time and the **Logic level** of the desired value. Confirm by clicking the **Set interval** button.

6.11.3. OCS - Occupancy Sensor

DIFFERENCE: The DCX-2x1-HC10 switcher does not have an OCS port.

The OCS sensor has 3 pins, where the first pin is a 24V logic input. The default state is high. Different type of sensors exist: some send high level, some send low level to this input when the room is occupied. Active-high or active-low logic might be configured for this port in LDC to support them.

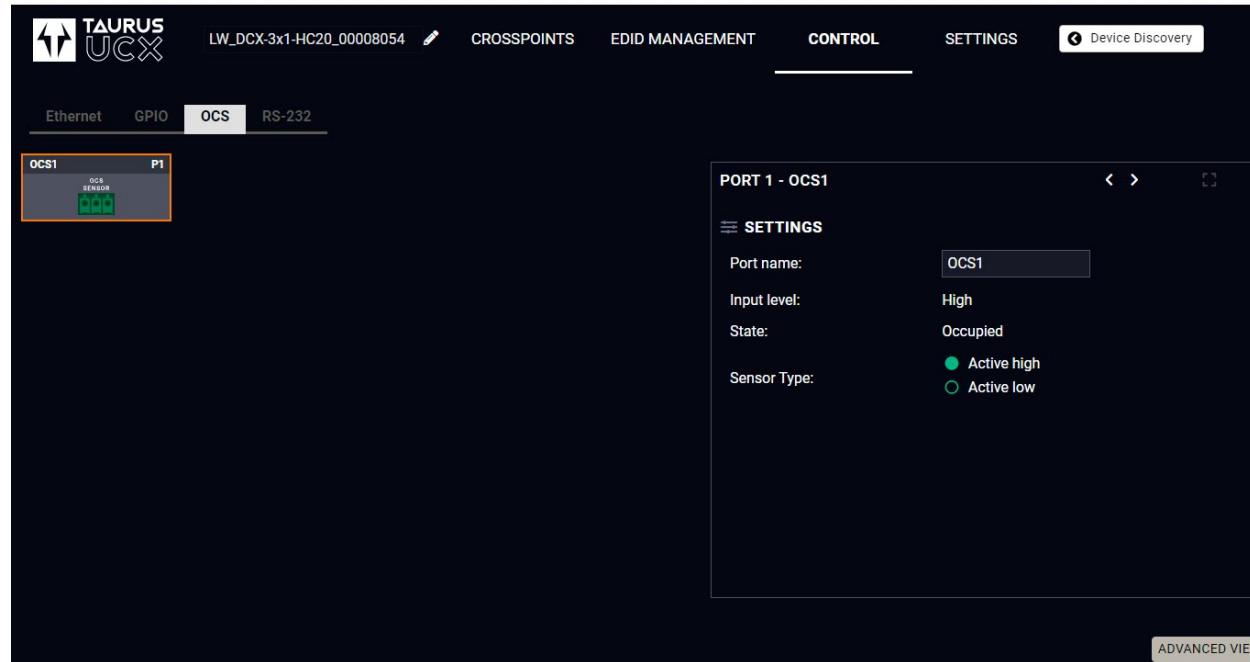

Input level refers to the current input signal level of the first pin.


State value can be free or occupied, depending on the Sensor type setting and the Input level (e.g. when the sensor type is Active high and the input value is high, the state reports 'Occupied').

Sensor type can be active high/active low, and this defines whether the low or high input level means the occupancy.

#ocs

6.11.4. RS-232

DIFFERENCE: DCX-3x1-HC20 model is assembled with one local RS-232 port.

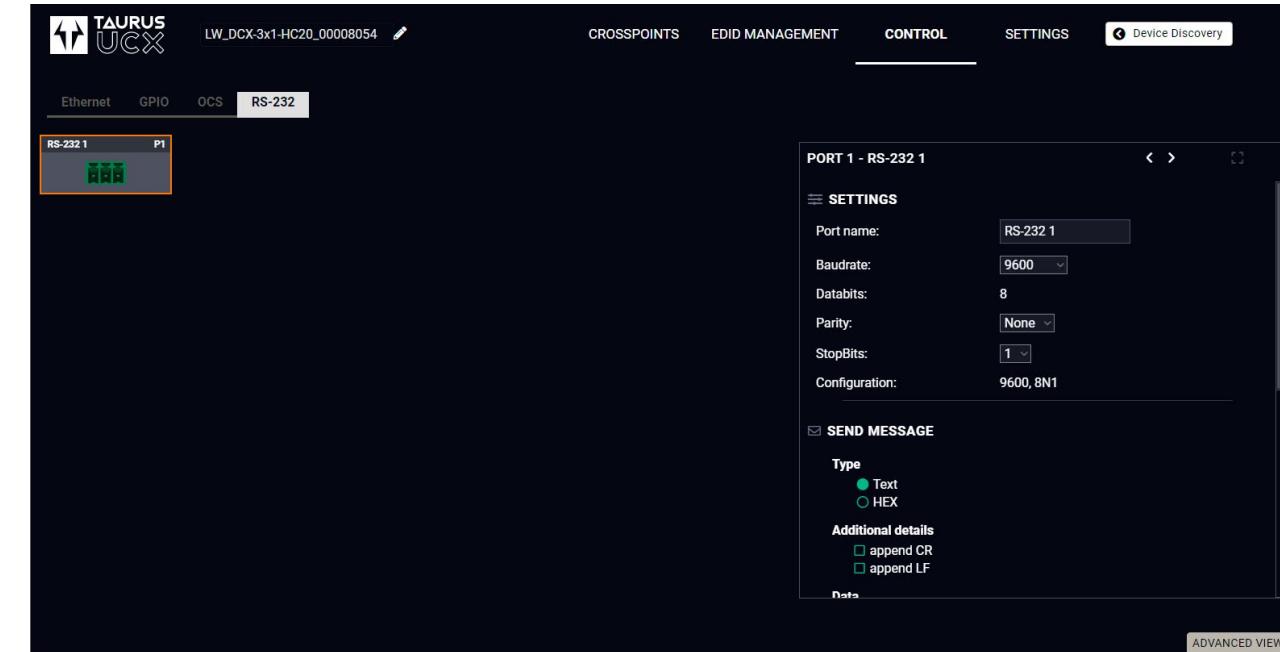

RS-232 tab in Control menu

DIFFERENCE: The DCX-2x1-HC10 switcher does not have an RS-232 port.

The following settings and functions are available: #rs-232 #serial

- **Baud rate:** 9600, 14400, 19200, 38400, 57600, 115200;
- **Data bits:** 8;
- **Parity:** None, Odd, or Even; #rs232


Send Message Section

The serial message sending is achieved by Lightware REST API, and it can be in text or hexadecimal format. The CR/LF (Carriage Return/Line Feed) can be enabled optionally.

6.12. Settings Menu

6.12.1. Status

#devicelabel #label #producttype #firmwareversion #status #serialnumber

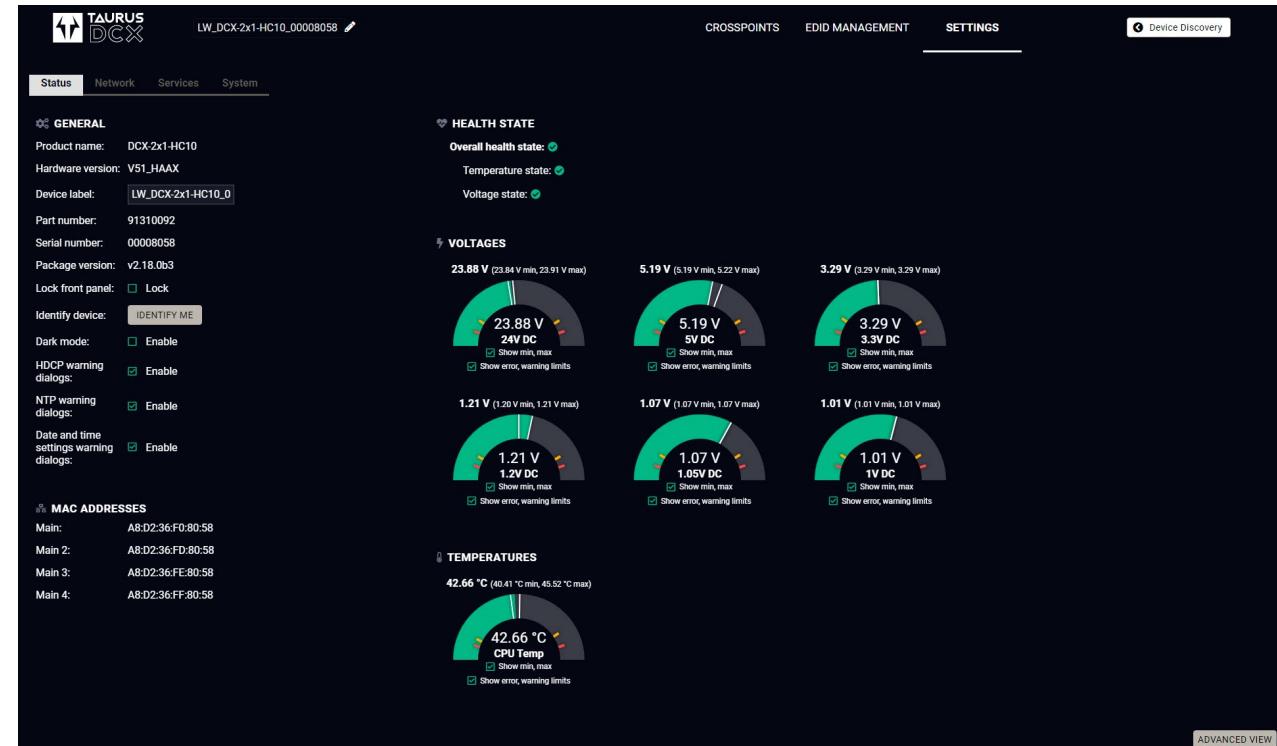

Status tab in Settings menu

The most important hardware and software related information can be found on this tab: hardware and firmware version, serial numbers, MAC addresses, temperatures, and voltage information. Device label can be changed to a unique description by the **Set** button. [#buttonlock](#) [#lockbutton](#)

You can disable the functionality of the front panel buttons by marking the Lock front panel option. This is same method of the control lock enabled by the front panel buttons. See the details in the [Control Lock](#) section.

Clicking on the **Identify me** button results in the blinking of the status and crosspoint LEDs in green for 10 seconds. The feature helps to identify the device itself in the rack shelf.

Dark mode enable: When Dark mode is enabled, all LEDs on the unit are switched off (after 60 seconds by default) if no buttons are pressed. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. [#darkmode](#)

MAC Addresses


DIFFERENCE: From FW version v2.18.0, the list of MAC addresses is expanded to allow for better and more secure network applications.

Here you can see a list of MAC addresses that are assigned to the device.

- Main: This is the MAC address of the CPU in Default network setting.
- Main_2: This is the MAC address of the CPU for future uses.
- Main_3: This is the MAC address of the CPU for future uses.
- Main_4: This is the MAC address of the CPU for future uses.
- USB Type C Port 1: This is the MAC address of the IN1 USB-C port.
- USB Type C Port 2: This is the MAC address of the IN2 USB-C port..

In case of DCX devices manufactured after this update, additional MAC addresses will be provided as a continuous list.

6.12.2. Network

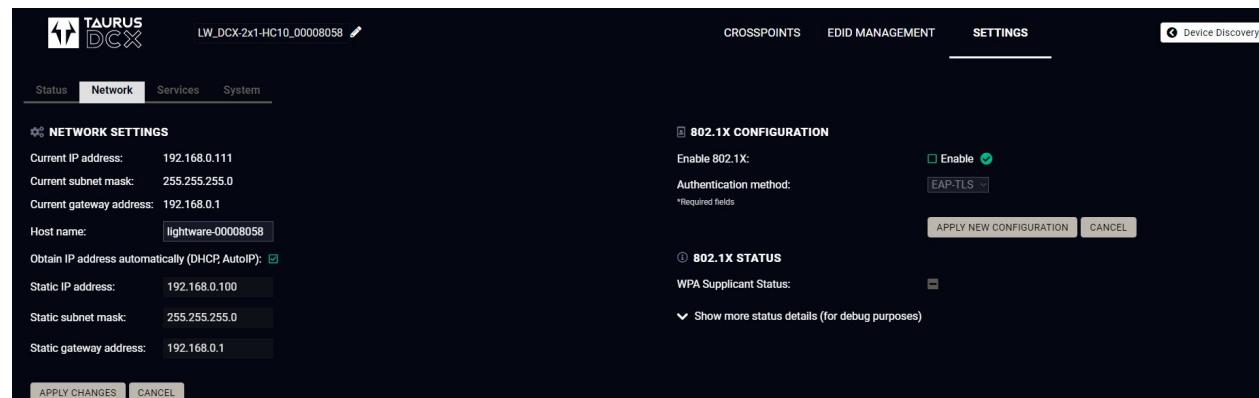

Network tab in Settings menu

Network Settings

IP address and DHCP settings can be set on this tab. Always press the **Apply settings** button to save changes.

When the host name is modified, clicking on the **Restart http(s) services** button is also needed.

INFO: A new certificate is generated after the hostname changing.

802.1x Configuration

DIFFERENCE: From FW version v2.18.0, 802.1x will only work properly if there is **exactly one** port in the Default VLAN. The authentication can still be turned on when several or none of the ports are in the Default VLAN, however, it will not operate properly.


Authentication Process

You will find the 802.1x authentication section in the right.


You can enable authentication by ticking in the Enable box. Once 802.1x authentication is enabled, you can choose the authentication method from the drop-down menu: **EAP-MD5** or **EAP-TLS**.

DIFFERENCE: From firmware version v2.12.0, EAP-MD5 is unavailable.


When using EAP-MD5, authentication will require an Identity and a Password to gain access to the secure network.

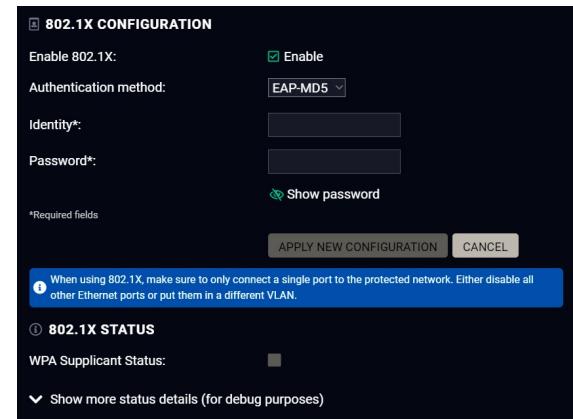

With EAP-TLS, you will also need CA and Client certificates, a Client Private Key, and a password for the Key.

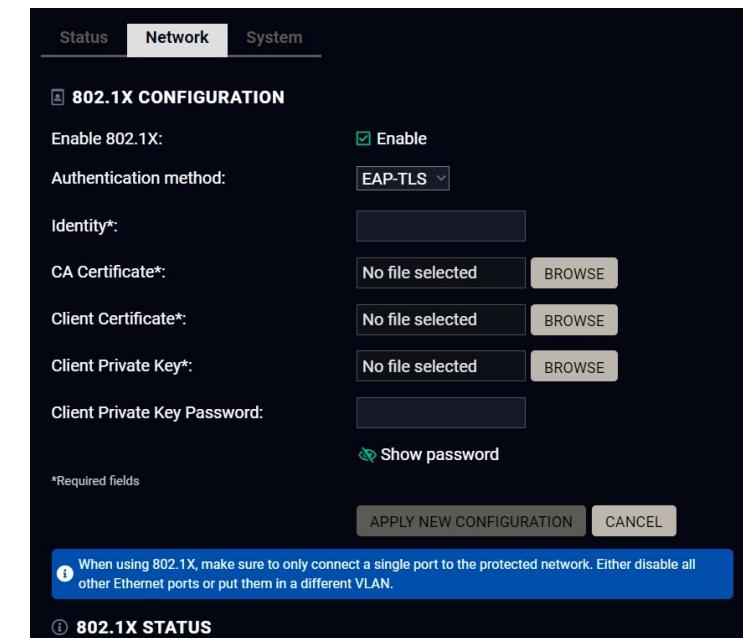

After entering every necessary information, click on the **Apply new configuration** button, and the authentication process starts.

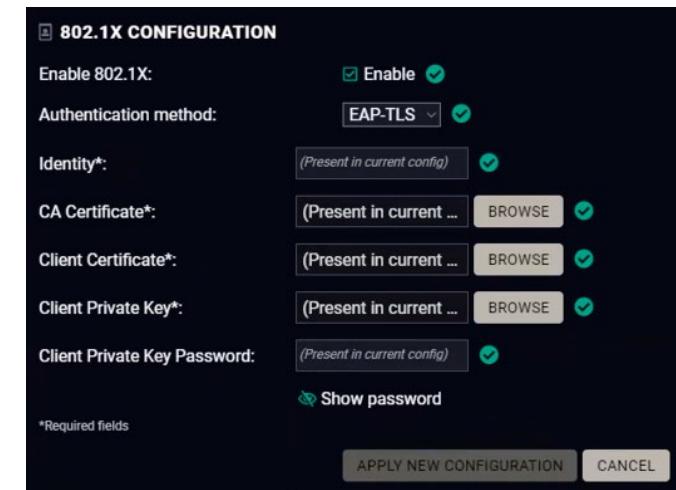

If every component is correct, the device will gain access to the secure LAN.

6.12.3. Services

The Services tab is available from LDC version v2.7.0.

The Services tab in the Settings menu displays the following configuration options:

- HTTP(S):**
 - Enable port 80:
 - Require Authentication over HTTP:
 - Enable port 443:
 - Require Authentication over HTTPS:

By changing HTTP(S) related settings, (including host name) the device will restart these services automatically to apply them. If you currently using LDC
- LW3:**
 - Enable LW3 over 6107:

Warning: Disabling all network interfaces will prevent any communication with the unit. Restoring factory default settings can re-enable network interfaces.
- LARA:**
 - Enable LARA:
 - To access LARA, please enable HTTPS service (port 443) and set a valid password below, in advance.
- CREDENTIALS:**
 - To change password, the current password is mandatory if exists, otherwise leave it blank.
 - Username: admin
 - Current password:
 - New password:
 - Confirm new password:
 - Show passwords
 - Save Password

Services tab in the Settings menu

Network Services

HTTP/HTTPS

DCX series switcher provides HTTP/HTTPS server services on its 80 and 443 ports to make it accessible over WebSocket (WS), LW3 protocol, using Lightware Device Controller and REST API for device control (see the detailed list about the additional available features in the summary table of the [Lightware Advanced Room Automation \(LARA\)](#) section).

HTTPS protocol encrypts the transferred data to keep it protected. For more details about the HTTPS, see the [Encryption \(HTTPS, WSS\)](#) section.

- Enable/Disable HTTP/ HTTPS port: To ensure the secure data traffic, the HTTP port (80) can be disabled, and the all the information can be transferred via HTTPS (443 port). 80 or 443 port is necessary to upload/download WelcomeScreen image, LARA configurations, log and clone files so one of them should be opened to reach these functions.

ATTENTION: Please ensure proper DCX time and date setting in DCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

- Require Authentication over HTTP/HTTPS:** authentication helps limit the access to the device by setting a username (admin) and a password. For more details, see the [Basic Authentication](#) section. No password is set by default, the authentication can be enabled after setting a password.
- Restart HTTP(S) Services** is required after the authentication settings changed.

Serial over IP

The signal route of the serial-IP transmission can be broken by disabling the serial over 8001 or 8002 port. For more details about the RS-232, see the [Serial Interface](#) section.

LW3

Enable LW3 over 6107: LW3 protocol commands, Lightware Device Controller software.

WARNING! The Lightware Device Controller software operates on 6107 port, when it is disabled, the DCX series switcher can be controlled only with protocol commands via http(s). can re-enable the network interfaces.

LARA

LARA can be enabled by ticking in the box after enabling HTTPS and setting a password, which can be done below.

Credentials

DIFFERENCE: From firmware version v2.11.0 and LDC version v2.8.0, password history is maintained in authentication, not allowing for the last 10 passwords to be set again.

DIFFERENCE: From FW version v2.21.0 and LDC version v2.20.0, authentication is enabled by default on the HTTPS port of the DCX devices. For DCX-2x1-HC10 and DCX-3x1-HC20 models the default password is **Lightware10g**, and you will be prompted to change it after the first login. HTTP port is disabled by default.

DIFFERENCE: DCX-3x1-HC21 models will have a **random generated factory default password** applied to the device during the manufacturing process. This unique password will be supplied on a sticker along with the device.

After a factory reset from this FW onward, you will need the Username (admin) and the default password (Lightware10g in case of DCX-2x1-HC10 and DCX-3x1-HC20 models or the **unique generated password** in DCX-3x1-HC21 models) to login. After successfully logging into the device, you will be prompted to change the password.

The authentication password can be set here for HTTP/HTTPS ports. UTF-8 characters are allowed. Min length: 10 characters, max length: 100 characters. The password string can not be queried. #password

ATTENTION: If a wrong password is entered during login five times in a row, all login attempts are denied for 15 minutes.

New Password

ATTENTION: The old password is also required when changing the password.

ATTENTION: Authentication feature in DCX series is not equal to the Cleartext login feature in the Advanced Control Pack in the TPS family extenders.

Certificate Management

You can upload certificates signed by the Certificate Authority (CA) to provide secure connection to the devices with the webLDC.

To download a Certificate Signing Request (CSR), follow these steps:


- Step 1. Navigate to the Settings menu, Services tab and click on the **Certificate Signing Request** button.
- Step 2. Enter the data required for the authentication process. It is important to provide all information related to your organization, because it will be used to verify your identity.
- Step 3. Once all the necessary data has been entered, the file can be downloaded via the button in the bottom, and sent for signing.
- Step 4. When the CA signs the certificate, it will create a .pem file, which then can be uploaded onto the device.
- Step 5. After uploading, press the **Refresh** button in the Certificate Management section and the signed certificate shall be active.

Please be aware that the certificate will use the device's own private key and will not work for any other device. Each device must have its own certification.

The certificate signing request form

Information	Description	Example
Common Name	The domain name you wish to secure.	www.example.com
Organization Name	The legal name of the company or organization, any suffix included.	Lightware Visual Engineering PLC
Organizational Unit	The name of the internal organizational department/division.	IT
Locality	The name of the city, town, village etc. of the organization.	Budapest
State	Province, region, county or state, not abbreviated.	Pest county
Country	The country of the organization can be chose from the drop-down menu.	Hungary
Email Address	The contact address of the certificate administrator or the IT department of the company.	example@lightware.com


In the Subject Alt Name(s) field you can enter additional information for more hosts to be certified with one SSL. The information type can be chosen from the drop down menu. You can have several Subject Alt Name fields.

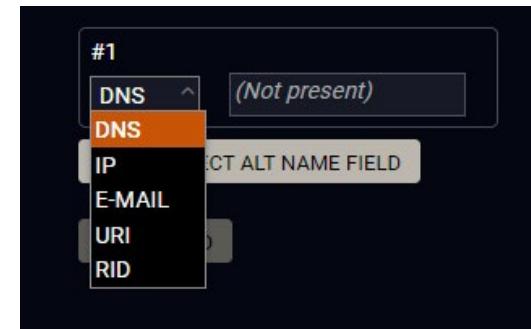

You can enter the following information in the Subject Alt Name field:

- DNS
- IP address
- E-mail address
- URI
- RID

6.12.4. System

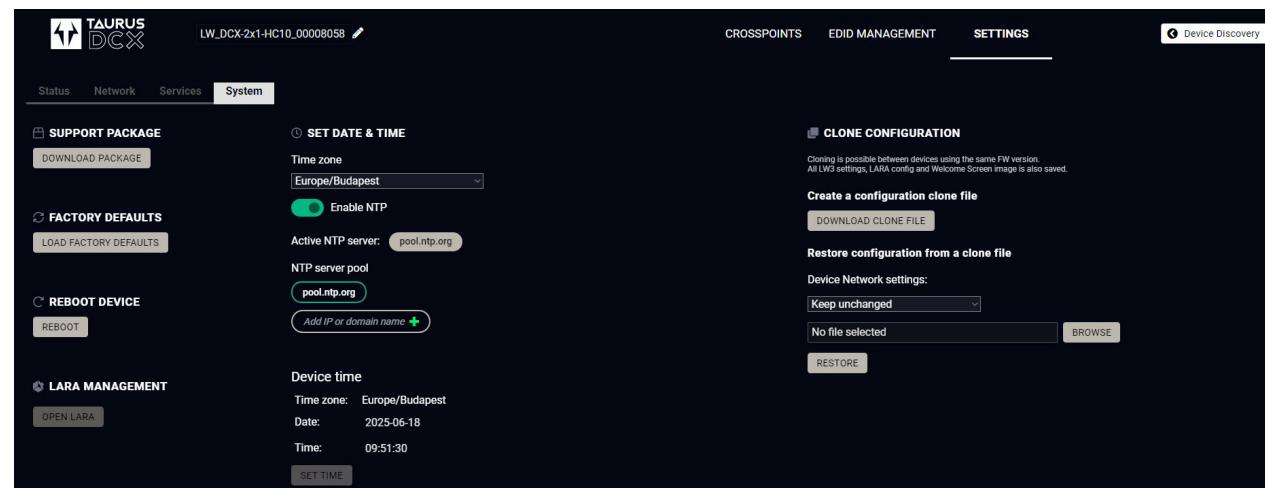

System tab in Settings menu

The following functions are available under the System tab:

- **Support package** - saving a log file of the device, helps during the troubleshooting process
- **Load factory defaults** - recalling factory default settings and values. All factory default settings are listed in the [Factory Default Settings](#) section.
- **Reboot** - rebooting the system.
- **LARA management** - opening the LARA
- **Set time** - (internal clock) of the switcher, which is used for logging events.
- Pressing the **Sync with Computer** button is a quick and easy way to set the time. `#factory #log #systemlog #reboot #restart`

ATTENTION: Please ensure proper DCX time and date setting in DCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

LARA management

The LARA interface can be opened by clicking on the Open LARA button.

DIFFERENCE: LARA is available in DCX devices from firmware version v2.11.0.

Set Date & Time

DIFFERENCE: From FW version v2.9.0 and LDC version v2.7.6, NTP management is available for time and date setting.

To enable Network Time Protocol (NTP), the device must be able to reach an NTP server either online or a local server.

Manual time and date setting is available when NTP is disabled.

Clone configuration

Clone configuration makes saving all the LW3 settings, custom scripts and welcome screen image and uploading them to another device possible.

ATTENTION: Please note that clone configuration function operates properly when the same firmware version is installed on the devices.

ATTENTION: If the device that the clone configuration is created on is password protected, the devices where this file is uploaded will also ask for a password. However, as passwords are not saved in the configuration file, the password is reset to **admin**.

Create a configuration clone file

Click on the **Download Clone File** button to save the setting to the computer.

Restore a configuration from a clone file

Step 1. Choose the desired network setting from the drop down menu:

- Keep unchanged.
- Restore from clone file (hostname will change, because the hostname property is also cloned from the original device and it can affect the generated certificates of the 443 port).
- Set to DHCP mode.
- Set to custom non-DHCP mode (in this case additional settings required: IP Address, Subnet Mask, Gateway Address).


INFO: The network settings relates to Static or DHCP setting/ IP address/ Subnet mask/ Gateway address and the hostname property. Network service settings (enable http(s) ports, authentication etc.) will be always restored.

Step 2. Click on the **Select file** button to browse a clone file from the PC.

Step 3. The cloning process will start by clicking on the **Restore** button.

See the entire list of the saved data in the backup file in the [Content of the Backup File](#) section.

6.13. Advanced View Window

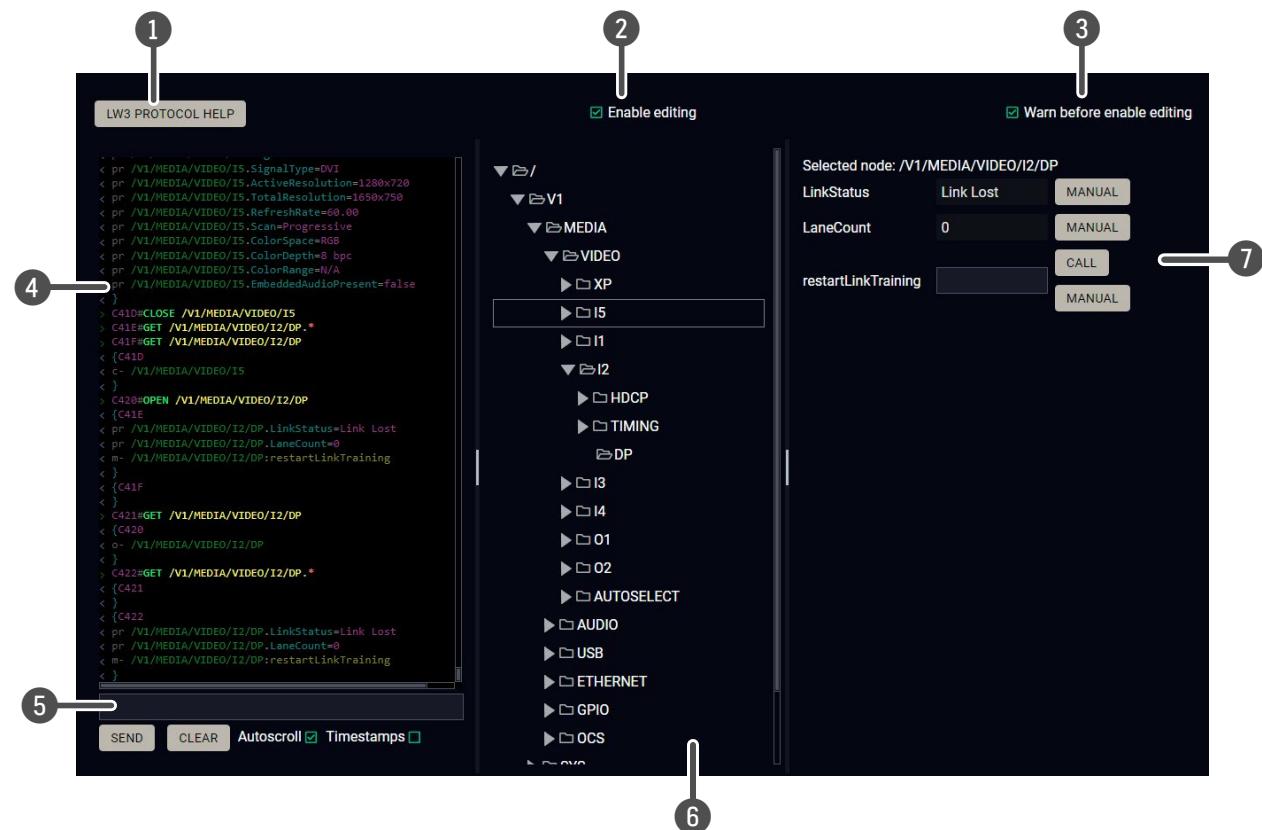

- 1 **LW3 protocol help** Pushing the button results in a help window opening, which describes the most important information about LW3 protocol commands in HTML format.
- 2 **Edit mode** The default appearance is the read-only mode. If you want to modify the values or parameters, tick the option. You will be prompted to confirm your selection.
- 3 **Warning mode** If this is checked, a warning window pops up when you enable Edit mode.
- 4 **Terminal window** Commands and responses with time and date are listed in this window. Sent command starts with '!' character, received response starts with '<' character. The color of each item depends on the type of the command and response. The content of the window can be emptied by the **Clear** button. If the **Autoscroll** option is ticked, the list is scrolled automatically when a new line is added.
- 5 **Command line** Type the desired command and execute it by the **Send** button. Clear all current commands and responses in the Terminal window by the **Clear** button.
- 6 **Protocol tree** LW3 protocol tree; select an item to see its content.
- 7 **Node list** Correspondent parameters and nodes are shown that are connected to the selected item in the protocol tree.
 - Manual button:** Manual (short description) of the node can be called and displayed in the terminal window.
 - Set button:** Saves the value/parameter typed in the textbox.
 - Call button:** Calls the method, e.g. reloads factory default settings.

TIPS AND TRICKS: You can browse the previously entered commands by using the **Up** and **Down** arrows in the Command line.

7

Lightware REST API Reference

The device can be controlled through standard HTTP(S) requests to ensure the control functions from web browsers or terminal program. This feature is available from 1.2.0 firmware package.

▶ Overview	75
▶ Instructions for the Terminal Application Usage	75
▶ Protocol Rules	78
▶ REST API Security	80
▶ System Commands	80
▶ Video Port Settings - General	84
▶ Video Port Settings - USB-C Related Commands	87
▶ CEC Command Sending	88
▶ Audio Port Settings	89
▶ USB Port Settings - USB-C Related Commands	92
▶ EDID Management	94
▶ Ethernet Port Configuration	96
▶ Network Security	98
▶ Advanced Ethernet Security	100
▶ Serial Port Configuration	102
▶ Serial Port Messaging	103
▶ GPIO Port Configuration	104
▶ OCS Port Configuration	105
▶ Updating the Device via REST API	106
▶ Lightware REST API Quick Summary	109

7.1. Overview

The Lightware REST API is designed to provide a platform-free interface, where the DCX series switchers can be controlled by HTTP requests. REST API is a software architectural style based on HTTP protocol, so it can be used via web browser, Node.js, terminal programs.

The DCX series device provides a REST API server where most of the LW3 commands are available (for more details, see the [Lightware REST API vs. LW3 Protocol](#) section).


Lightware devices can be controlled with LW3 protocol commands (for more details, see [LW3 Programmers' Reference](#)). LW3 protocol consist of read-only, read-write properties and methods, which operate in the same way as REST API GET/POST methods. This is not a new protocol, the LW3 tree structure became available via HTTP(s).

7.2. Instructions for the Terminal Application Usage

7.2.1. Web Browser Plugins


REST API interface can be easily accessed via a web browser's plugin, see the two examples below:

Mozilla Firefox - RESTED

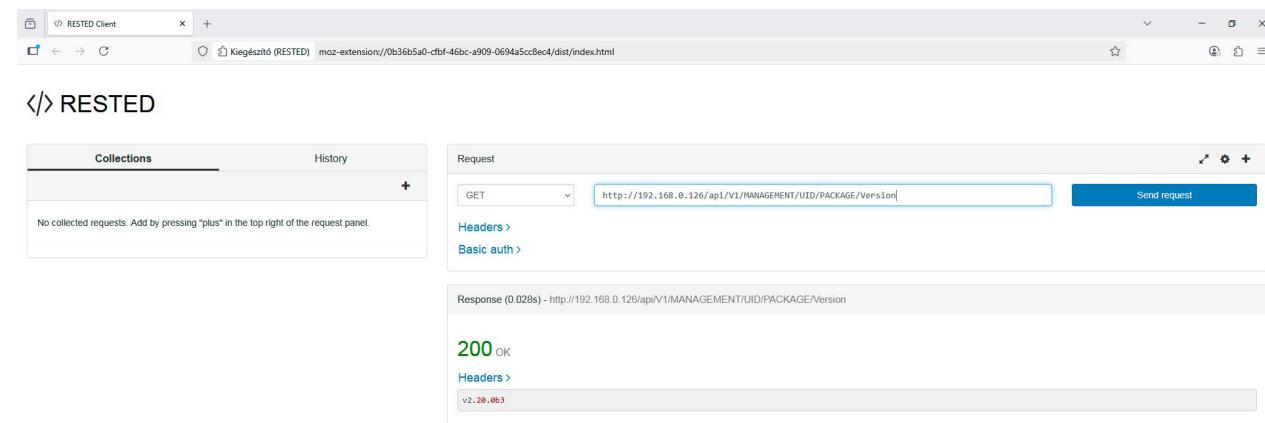

RESTED plugin for Mozilla Firefox


Google Chrome - Yet Another REST Client

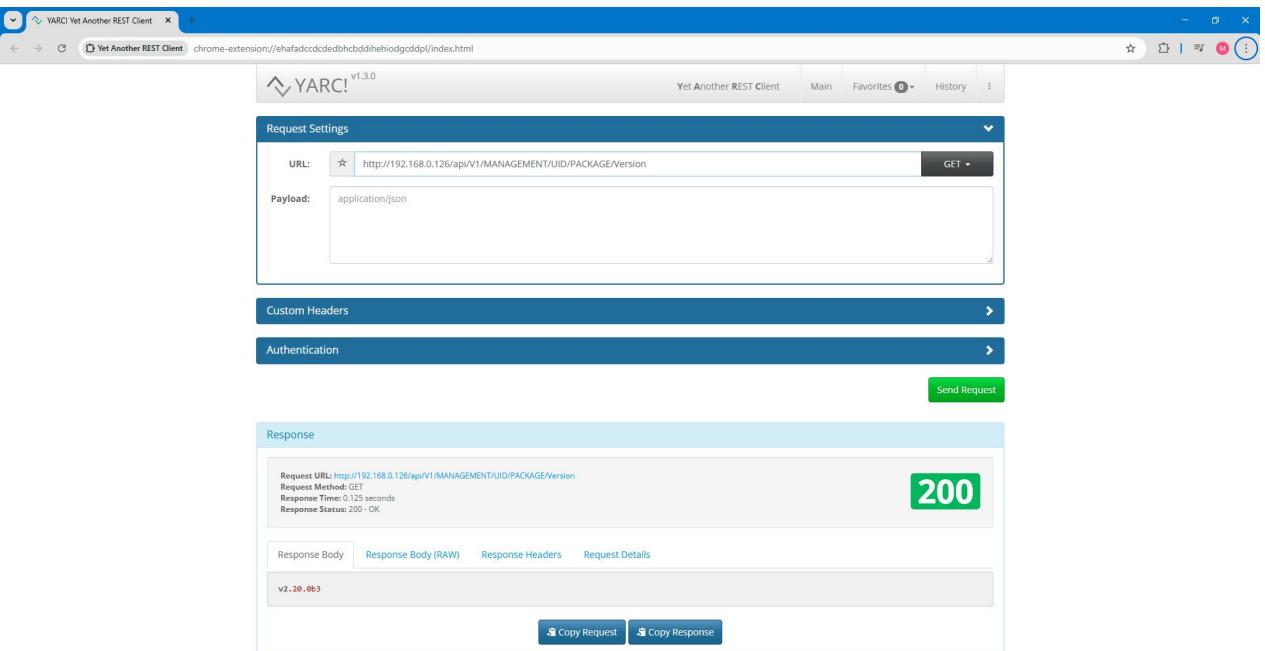

Yet Another REST Client for Google Chrome

7.2.2. Third-party API Platform

Postman is one of the numerous applications that can be used for sending REST API requests.

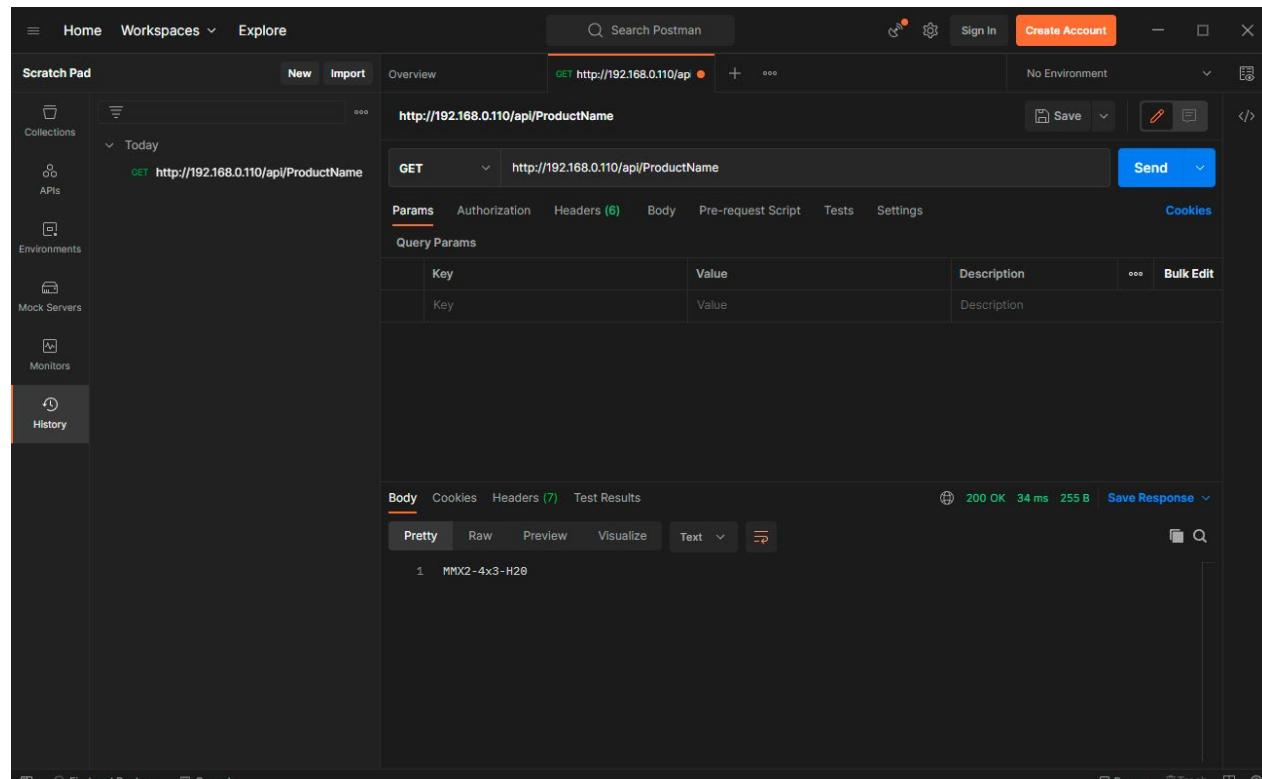

Postman – for REST API Usage

7.2.3. Terminal Application

The REST API requests can be applied to the switcher using a terminal application. You need to install one of them on your control device, for example, Putty, CLI or Curl. [#terminal](#)

Curl

Curl is a command line tool that can also connect to the Taurus REST SERVER and display communication in a terminal window. It supports data transferring with HTTP and HTTPS standards and handles the basic authentication (username and password) in Windows® and Linux operating systems. Multi-line commands are also accepted, so a script can be stored in a .txt file for future reference.

Check if the Curl package is installed on your system. Type into your console: curl. When the answer is 'curl: try 'curl --help' for more information', curl is installed.

Some web browser plugins (e.g. REST Client) display the curl version of the sent request.

Once the terminal window is opened, you can enter the commands. Some typical examples are listed in the following section.

```
Command Prompt
C:\Users\nikolett.keindl>curl -i -X GET http://192.168.0.110/api/V1/MEDIA/VIDEO/XP/I3/SignalPresent
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 4
ETag: W/"4-X/5T04MPCKAY0ipFgr6/IraRNs"
Date: Wed, 19 Mar 2025 12:50:57 GMT
Pragma: no-cache
Expires: 0
Cache-Control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Accept-Ranges: bytes
Server: Lightware webservice

true
C:\Users\nikolett.keindl>curl -X POST -i -H "Content-Type: text/plain" http://192.168.0.110/api/V1/MEDIA/GPIO/P1/interval --data Low;1
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 0
ETag: W/"0-2jmq715rSw0yVb/v1WAYkK/YBwk"
Date: Wed, 19 Mar 2025 12:52:25 GMT
Pragma: no-cache
Expires: 0
Cache-Control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Server: Lightware webservice

C:\Users\nikolett.keindl>
```

REST API communication in a command line window

GET Command Example

Query the Signal Presence

```
curl -i -X GET <ip>/api/<NodePath>/<PropertyName>
```

```
C:\Users\nikolett.keindl>curl -i -X GET http://192.168.0.110/api/V1/MEDIA/VIDEO/XP/I2/
SignalPresent
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 4
ETag: W/"4-X/5TO4MPCKAyY0ipFgr6/IraRNs"
Date: Wed, 19 March 2025 13:39:24 GMT
Pragma: no-cache
Expires: 0
Cache-control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Accept-Ranges: bytes
Server: Lightware webservice

true
```

POST Command Example 1.

Set the Mute State

```
curl -X POST -i -H "Content-Type: text/plain" <ip>/api/<NodePath>/<PropertyName> --data <value>
```

```
C:\Users\nikolett.keindl>curl -X POST -i -H "Content-Type: text/plain" http://192.168.0.110/
api/V1/MEDIA/VIDEO/XP/I2/Mute --data true
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 4
ETag: W/"4-X/5TO4MPCKAyY0ipFgr6/IraRNs"
Date: Wed, 19 March 2025 13:48:09 GMT
Pragma: no-cache
Expires: 0
Cache-control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Accept-Ranges: bytes
Server: Lightware webservice

true
```

POST Command Example 2.

Switch video crosspoint

```
curl -X POST -i -H "Content-Type: text/plain" <ip>/api/<NodePath>/<PropertyName> --data <value>
```

```
C:\Users\nikolett.keindl>curl -X POST -i -H "Content-Type: text/plain" http://192.168.0.110/
api/V1/MEDIA/VIDEO/XP/switch --data I2:01
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 0
ETag: W/"0-2jmq715rSw0iVb/v1WAYkK/YBwk"
Date: Wed, 19 March 2025 14:02:01 GMT
Pragma: no-cache
Expires: 0
Cache-control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Server: Lightware webservice
```

POST Command with Basic Authentication Example

Switch video crosspoint

```
curl --user <username>:<password> -X POST -H "Content-Type: text/plain" <ip>/
api/<NodePath>/<PropertyName> --data <value>
```

```
C:\Users\nikolett.keindl>curl --user admin:#password12 -X POST -H "Content-Type: text/plain"
http://192.168.0.110/api/V1/MEDIA/VIDEO/XP/switch --data I2:01
```

HTTPS Command Example 2.


Switch video crosspoint

```
curl -X POST -k -i -H "Content-Type: text/plain" <ip>/api/<NodePath>/<PropertyName> --data
<value>
```

```
C:\Users\nikolett.keindl>curl -X POST -k -i -H "Content-Type: text/plain" https://192.168.0.110/
api/V1/MEDIA/VIDEO/XP/switch --data I2:01
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 0
ETag: W/"0-2jmq715rSw0yVb/v1WAYkK/YBwk"
Date: Wed, 19 March 2025 12:28:20 GMT
Pragma: no-cache
Expires: 0
Cache-control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Strict-Transport-Security: max-age=31536000; includeSubDomains
Server: Lightware webservice
```

7.3. Protocol Rules

7.3.1. Command Structure Example

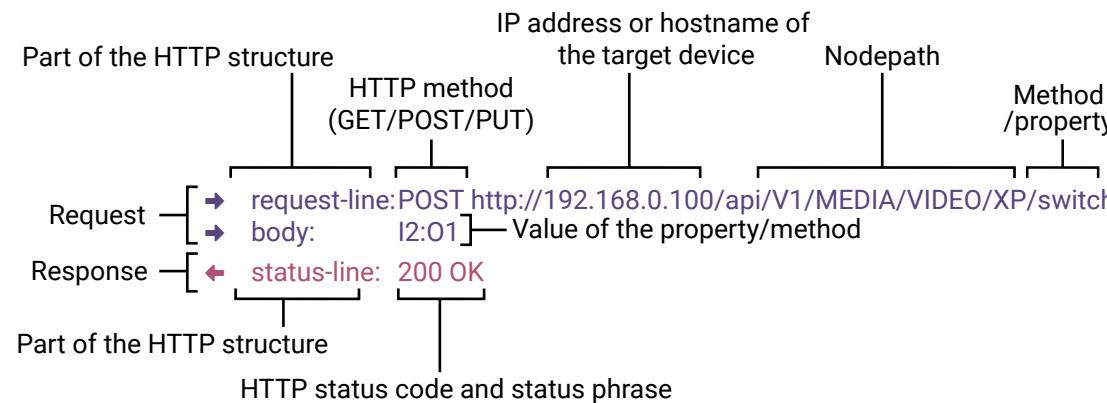

The examples below show how to apply the REST API in different environments:

Curl in Command Line Terminal

```
→ curl -X POST -i -H "Content-Type: text/plain" http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch
--data I2:01
```

REST API Client in Mozilla

Method: POST
URL: http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch
Body content type: text/plain
Body: I2:01

7.3.2. General Rules

- All names and parameters are case-insensitive.
- The methods, nodes and properties are separated by a slash ('/') character.
- The node name consists of letters of the English alphabet and numbers.
- All properties and methods are available HTTP(S) below /api as an URL.
- The HTTP server is available on port 80, the HTTPS server is available on port 443.
- GET / PUT / POST methods are supported.
- The request-line contains the IP address (or hostname) and the nodepath.
- Arguments and property values should be given in the HTTP request's body as a plain text.
- REST API - LW3 converter does escaping automatically.
- The node paths describe the exact location of the node, listing each parent node up to the root.
- The supported HTTP protocol: standard HTTP/1.1
- There is no maximum size or character length of the request.

7.3.3. Legend for the Control Commands

Command and Response – Example

→ request-line: GET <ip>/api/V1/MEDIA/VIDEO/<in>/SignalPresent

← body: <status code>

Format	Description
<ip>	IP address or hostname of the target device
<in>	Input port number
<out>	Output port number
<port>	Input or output port number
<loc>	Location number
<parameter>	Variable defined and described in the command
<expression>	Batched parameters: the underline means that more expressions or parameters can be placed by using a semicolon, e.g. I2;I3 or F27:E1;F47:E2
→	Sent request
←	Received response
.	Space character

Further, not listed <parameters> are defined at each command.

7.3.4. Lightware REST API vs. LW3 Protocol

All methods and properties of the LW3 tree structure appear below /api as a HTTP(s) URL. The separator character is always a slash ('/') character instead of point ('.') and colon (':'). The URL is case-insensitive.

Example

The LW3 property:

/V1/MEDIA/VIDEO/I2.ActiveResolution

Available in REST API:

192.168.0.1/api/V1/MEDIA/VIDEO/I1/ActiveResolution

192.168.0.1/API/v1/media/video/i1/activeresolution

The following features are implemented only in REST API, but not in LW3 protocol:

- [Sending a Message via RS-232](#)

The most important commands are listed in this chapter. Other commands can be inferred by the LW3 tree structure, where the read-only (eg. `pr /V1/MEDIA/VIDEO/I5.Connected`) and read-write properties (`pw /V1/MEDIA/VIDEO/I5.Name`) can be listed. For more details about the LW3 tree structure, see the [LW3 Programmers' Reference](#) section or the [Advanced View Window](#).

7.3.5. Method Types

GET Method

GET method can be used to get the value of a property. It works the same way as the LW3 GET command.

PUT/ POST Method

In this case, POST and PUT are equivalent, they are for modifying read-write properties and invoking methods. They replace the LW3 SET and CALL commands.

7.3.6. Supported Commands

Querying property value (GET)

The requested value is in the body of the response.

Protocol	Command
REST API	► request-line: GET-<ip>/api/<NODEPATH>/<PropertyName>
Example	► request-line: GET http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/SignalPresent
LW3	► GET-<NODEPATH>.<PropertyName>
Example	► GET /V1/MEDIA/VIDEO/XP/I2.SignalPresent

Setting property value (SET)

The desired property value should be given as a plain text in the body of the request. The new value is in the body of the response.

Protocol	Command
REST API	► request-line: POST-<ip>/api/<NODEPATH>/<PropertyName> ► body: <new_value>
Example	► request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/Mute ► body: false
LW3	► SET-<NODEPATH>.<PropertyName>=<new_value>
Example	► SET /V1/MEDIA/VIDEO/XP/I2.Mute=false

Invoking method (CALL)

The argument should be given in the body of the request.

Protocol	Command
REST API	► request-line: POST-<ip>/api/<NODEPATH>/<methodName> ► body: <new_value>
Example	► request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch ► body: I2:01
LW3	► CALL-<NODEPATH>:<methodName>(<value>)
Example	► CALL /V1/MEDIA/VIDEO/XP:switch(I2:01)

7.3.7. Not Supported Commands

Querying node (GET)

Protocol	Command	Note
REST API	Not supported	404 error code
LW3	► GET-<NODEPATH>	
Example	► GET /V1/MEDIA/VIDEO	

Subscribing to a node (OPEN)

Protocol	Command	Note
REST API	Not interpreted	Not supported
LW3	► OPEN-<NODEPATH>	
Example	► OPEN /V1/MEDIA/VIDEO	

Unsubscribing from a Node (CLOSE)

Protocol	Command	Note
REST API	Not interpreted	Not supported
LW3	► CLOSE-<NODEPATH>	
Example	► CLOSE /V1/MEDIA/VIDEO	

7.3.8. Status Codes, Error Messages

The standard HTTP response codes are defined to supply information about the response and the executed command like:

Error code		Description
200	OK	Standard response for successful HTTP request.
401	Unauthorized	
405	Method Not Allowed	A request method is not supported for the requested resource. This is the error code when trying to modify a read-only property.
404	Not Found	Invalid nodepath or property name.
406	Not Acceptable	LW3 server error response for POST and PUT method, equals the following LW3 error codes: pE: an error for the property mE: an error for a method
500	Internal Server Error	All other errors (Lw3ErrorCodes_InternalError).

7.3.9. Polling

Subscription and unsubscription features are not supported, they can be substituted with polling. It means that a custom user script sends a request for a detected property from time to time.

7.4. REST API Security

The REST API is designed with two security features: **Authentication** and **Encryption**. Both of them are optional and can be used independently of each other.

7.4.1. Authentication

Basic access authentication is designed to limit user access for the REST API server. It requires user authentication by using a password (username is fixed).

Follow the instructions below to set the password:

Step 1. Set the password.

→ request-line: POST <ip>/api/V1/MANAGEMENT/NETWORK/AUTHENTICATION/setPassword
→ body: <new_password>

Step 2. Enable the basic authentication on the chosen port (HTTP: 80 or HTTPS: 443).

→ request-line: POST <ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/AuthenticationEnabled
→ body: true

Step 3. Restart network services.

→ request-line: POST <ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/restart

ATTENTION: The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP.

For more details, see the [Basic Authentication](#) section.

7.4.2. Encryption (HTTPS)

There is no encryption when the REST API communication happens via HTTP, because the HTTP protocol is not encrypted. The REST API server is available via HTTPS on the 443 port. To avoid the data interception (e.g. stealing the password) HTTP should be disabled and HTTPS protocol should be used instead.

ATTENTION: Please ensure proper DCX time and date setting in DCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

HTTPS does not guarantee that the communication is secure. Make sure that the client communicates with the server directly, without any third-party element in the communication route (Man-in-the-middle attack).

For more details, see the [Encryption \(HTTPS, WSS\)](#) section.

7.5. System Commands

7.5.1. Setting the Device Label

INFO: The device label can be changed to a custom text in the [Status](#) tab of the LDC software.

Request and Response #devicelabel #label

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LABEL/DeviceLabel
→ body: <custom_name>
← status-line: 200·OK
← body: <custom_name>

The Device Label can be 49 characters long and ASCII characters are allowed. Longer names are truncated.

Example

→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/LABEL/DeviceLabel
→ body: DCX_Room1
← status-line: 200 OK
← body: DCX_Room1

7.5.2. Resetting the Device

The switcher can be restarted – the current connections will be terminated.

Request and Response #reboot #restart

→ request-line: POST http://<ip>/api/V1/SYS/restart
INFO: The body has to be empty, and the content type should be text/plain.
← status-line: 200 OK

Example

→ request-line: POST http://192.168.0.100/api/V1/SYS/restart
← status-line: 200 OK

7.5.3. Restoring the Factory Default Settings

Request and Response

→ request-line: POST http://<ip>/api/V1/SYS/factoryDefaults
INFO: The body has to be empty, and the content type should be text/plain.
← status-line: 200 OK

Example

→ request-line: POST http://192.168.0.100/api/V1/SYS/factoryDefaults
← status-line: 200 OK

The device is restarted, current connections are terminated, and the default settings are restored. See the complete list in the [Factory Default Settings](#) section. #factory

7.5.4. Querying the Firmware Package Version

Request and Response `#firmwareversion`

```
→ request-line: GET http://<ip>/api/V1/MANAGEMENT/UID/PACKAGE/Version
← status-line: 200·OK
← body: <firmware_version>
```

Example

```
→ request-line: GET http://192.168.0.100/api/V1/MANAGEMENT/UID/PACKAGE/Version
← status-line: 200 OK
← body: 1.0.0b2
```

7.5.5. Control Lock

Enable/disable the operation of the front panel buttons.

Request and Response `#lockbutton` `#buttonlock`

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/ControlLock
→ body: <lock_status>
← status-line: 200·OK
← body: <lock_status>
```

Parameters

Parameter	Parameter description	Values	Value description
<lock_status>	Front panel button locking status	None	None: all functions of the front panel button are enabled.
		locked	The front panel buttons are locked, and can be unlocked by a button combination (Control Lock).
		force locked	The front panel buttons are locked and cannot be unlocked by a button combination, only in LDC (on the Status tab) or using the LW3 command (or REST API).

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/UI/ControlLock
→ body: force locked
← status-line: 200 OK
← body: force locked
```

7.5.6. Setting the Current Time

Request and Response `#time`

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/DATETIME/setTime
→ body: <current_time>
← status-line: 200·OK
← body: OK
```

Parameters

<current_time>: The new router time in ISO 8601 date time format.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/DATETIME/setTime
→ body: 2034-05-06T14:47:25
← status-line: 200 OK
← body: OK
```

7.5.7. Identifying the Device

Calling the method makes the status LEDs blink for 10 seconds. The feature helps find the device physically.

Request and Response `#identifyme`

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/identifyMe
INFO: The body has to be empty, and the content type should be text/plain.
← status-line: 200 OK
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/UI/identifyMe
← status-line: 200 OK
```

7.5.8. Toggling the Dark Mode Setting

The LEDs of the device can be switched off if their light could be annoying. In Dark mode all the LEDs are switched off, except the LEDs of the RJ45 connectors (Ethernet and TPS IN). `#darkmode`

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Enable
→ body: <mode_state>
← status-line: 200 OK
← body: <mode_state>
```

Parameters

If the <mode_state> parameter is **true** (or **1**), the Dark mode function is **enabled**, if the parameter is **false** (or **0**), the function is **disabled**.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/UI/DARKMODE/Enable
→ body: true
← status-line: 200 OK
← body: true
```

7.5.9. Setting the Delay of the Dark Mode

The Dark mode can be enabled right away, or after a certain time. Thus, the mode is enabled if no buttons are pressed for a while. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. The delay time can be set with this command.

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Delay
→ body: <delay_time>
← status-line: 200 OK
← body: <delay_time>
```

Parameters

The `<delay_time>` parameter means seconds, and the default value is 0. If set to 0, no delay is applied, and the Dark mode can be enabled immediately by the **DarkModeEnable** property. This delay has an effect on the **wakeFromDarkMode** method as well.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/UI/DARKMODE/Delay
→ body: 10
← status-line: 200 OK
← body: 10
```

7.5.10. Enabling Remote System Logging**Request and Response**

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Enabled
→ body: <status>
← status-line: 200 OK
← body: <status>
```

Parameters

Parameter	Value	Value Description
<status>	true	The remote system logging is enabled.
	false	The remote system logging is disabled.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/Enabled
→ body: true
← status-line: 200 OK
← body: true
```

7.5.11. Setting the Remote Server Address**Request and Response**

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/ServerAddress
→ body: <server_address>
← status-line: 200 OK
← body: <server_address>
```

Parameters

Parameter	Value	Value Description
<server_address>	e.g. mycompany.com (domain) 192.168.0.1 (IPv4)	The server domain name (RFC1035) or IP address (IPv4) where the logs should be sent to.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/ServerAddress
→ body: 192.168.0.1
← status-line: 200 OK
← body: 192.168.0.1
```

7.5.12. Setting the Protocol for the Remote System Logging

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Protocol
→ body: <protocol>
← status-line: 200 OK
← body: <protocol>
```

Parameters

Parameter	Value	Value Description
<protocol>	TCP	The logs are forwarded using TCP protocol.
	UDP	The logs are forwarded using UDP protocol.
	TLS	The logs are forwarded using TLS protocol.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/Protocol
→ body: TLS
← status-line: 200 OK
← body: TLS
```

7.5.13. Setting the Format of the Remote System Logging

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/SyslogFormat
→ body: <format>
← status-line: 200 OK
← body: <format>
```

Parameters

Parameter	Value	Value Description
<format>	RFC3164	This is a simplified format for human readability.
	RFC5424	This is an all-encompassing format for analytical systems.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/SyslogFormat
→ body: RFC3164
← status-line: 200 OK
← body: RFC3164
```

7.5.14. Setting the Port for Remote System Logging

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/PortNumber
→ body: <port_number>
← status-line: 200 OK
← body: <port_number>
```

Parameters

Parameter	Value	Value Description
<port_number>	1-65535	The port number on the remote host to send log messages to.

INFO: The port number cannot be set to 0.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/PortNumber
→ body: 6514
← status-line: 200 OK
← body: 6514
```

7.6. Video Port Settings - General

7.6.1. Switching the Video Input

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/switch
→ body: <in>:01
← status-line: 200 OK
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch
→ body: I2:01
← status-line: 200 OK
```

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

7.6.2. Switching an Input to All Outputs

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/switchAll
→ body: <in>
← status-line: 200 OK
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switchAll
→ body: I1
← status-line: 200 OK
```

7.6.3. Locking the Video Port

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Lock
→ body: <locked_state>
← status-line: 200 OK
← body: <locked_state>
```

Parameters

Parameter	Parameter description	Values	Value description
<locked_state>	Locked state	true	The port is locked
		false	The port is unlocked

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/Lock
→ body: false
← status-line: 200 OK
← body: false
```

7.6.4. Muting the Video Port

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Mute
→ body: <muted_state>
← status-line: 200 OK
← body: <muted_state>
```

Parameters

Parameter	Parameter description	Values	Value description
<muted_state>	Muted state	true	The port is muted.
		false	The port is unmuted.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/Mute
→ body: false
← status-line: 200 OK
← body: false
```

7.6.5. Setting the Autoselect Policy

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/01/Policy
→ body: <autoselect_mode>
← status-line: 200 OK
← body: <autoselect_mode>
```

Parameters

Parameter	Parameter description	Values	Value description
<autoselect_mode>	The autoselect policy	Off	The autoselect function is disabled.
		Last Detect	It is always the last attached input that is automatically switched to the output.
		First Detect	The first active video input is selected.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/AUTOSELECT/01/Policy
→ body: First detect
← status-line: 200 OK
← body: First detect
```

7.6.6. Changing the Autoselect-Included Input Ports

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>/Included
→ body: <state>
← status-line: 200 OK
← body: <state>
```

Parameters

Parameter	Parameter description	Values	Value description
<state>	The chosen input is ignored in the autoselect process or not.	true	The port is included in autoselect.
		false	The autoselect function ignores that port.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/AUTOSELECT/01/I1/Included
→ body: false
← status-line: 200 OK
← body: false
```

7.6.7. Changing the Input Port Priority

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>/Priority
→ body: <prio_num>
← status-line: 200 OK
← body: <prio_num>
```

Parameters

The <prio> parameter means the priority number from 1 to 100, equal numbers are allowed. Inputs can have different priorities in relation with two or more outputs. Therefore the output port number is part of the node path of input port priorities.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/AUTOSELECT/01/I2/Priority
→ body: 51
← status-line: 200 OK
← body: 51
```

7.6.8. Querying the Connected Source

Request and Response

```
→ request-line: GET http://<ip>/api/V1/MEDIA/VIDEO/XP/01/ConnectedSource
← status-line: 200 OK
← body: <in>
```

Example

```
→ request-line: GET http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/01/ConnectedSource
← status-line: 200 OK
← body: I1
```

7.6.9. Query the Video Signal Presence

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/VIDEO/<port>/SignalPresent
 ← status-line: 200·OK
 ← body: <state>

Parameters

Parameter	Parameter description	Values	Value description
<state>	This property gives a feedback about the current signal presence of the port.	true false	The video signal is present. The video signal is not present.

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/VIDEO/I1/SignalPresent
 ← status-line: 200 OK
 ← body: true

7.6.10. HDCP Setting (Input Port)

HDCP capability can be set on the input ports, thus non-encrypted content can be seen on a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.

Request and Response #hdcpc

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/<in>/HDCP/AllowedHdcpcVersion
 → body: <allowed_hdcpc>
 ← status-line: 200 OK
 ← body: <allowed_hdcpc>

Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcpc>	The input port reports the HDCP capability.	HDCP 1.4 HDCP 2.2 Off	The input port reports HDCP 1.4 capability. The input port reports HDCP 2.2 capability. The input port reports non-HDCP compliance.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/I1/HDCP/AllowedHdcpcVersion
 → body: HDCP 1.4
 ← status-line: 200 OK
 ← body: HDCP 1.4

7.6.11. HdcpMode

HDCP capability can be set to Auto/Always on the output ports, thus non-encrypted content can be transmitted to a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

Request and Response #hdcpc

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/O1/HdcpMode
 → body: <hdcp_mode>
 ← status-line: 200 OK
 ← body: <hdcp_mode>

Parameters

Parameter	Parameter description	Values	Value description
<hdcp_mode>	HDCP encryption setting on the output port	Auto	The encryption is enabled on the output port if the signal on the input port is encrypted.
		Always	The outgoing signal is HDCP-encrypted.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/O1/HDCP/HdcpMode
 → body: Auto
 ← status-line: 200 OK
 ← body: Auto

7.6.12. Querying the Embedded Audio Presence

→ request-line: GET http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioPresent
 ← status-line: 200·OK
 ← body: <embedded_state>

Parameters

Parameter	Parameter description	Values	Value description
<embedded_state>	It shows if the video contains audio or not.	true	There is embedded audio in the video signal.
		false	There is no embedded audio in the video signal.

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/VIDEO/I2/EmbeddedAudioPresent
 ← status-line: 200 OK
 ← body: true

7.6.13. Muting the Embedded Audio

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioMute
 → body: <mute_state>
 ← status-line: 200 OK
 ← body: <mute_state>

Parameters

Parameter	Parameter description	Values	Value description
<mute_state>	It shows if the embedded audio is muted or not.	true	The embedded audio is muted.
		false	The embedded audio is unmuted.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/01/EmbeddedAudioMute
 → body: false
 ← status-line: 200 OK
 ← body: false

7.6.14. Setting the Output Signal Type

Request and Response #signaltypes

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/01/OutputSignalType
 → body: <signal_type>
 ← status-line: 200 OK
 ← body: <signal_type>

Parameters

Parameter	Parameter description	Values	Value description
<signal_type>	Signal type setting	Auto	The outgoing signal type is HDMI.
		DVI	The outgoing signal type is DVI.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/01/OutputSignalType
 → body: Auto
 ← status-line: 200 OK
 ← body: Auto

7.6.15. Turning on Output 5V

The 5V power towards the sink can be enabled or disabled as follows:

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/01/Output5VMode
 → body: <5V_pwr>
 ← status-line: 200 OK
 ← body: <5V_pwr>

Parameters

Parameter	Parameter description	Value	Value description
<5V_pwr>	5V power towards the sink	Auto	5V power is enabled when a sink is connected to the port
		On	Enable 5V power on HDMI port
		Off	Disable 5V power on HDMI port
		Follow signal present	5V power is only enabled if there is active video signal on the port

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/01/Output5VMode
 → body: On
 ← status-line: 200 OK
 ← body: On

7.7. Video Port Settings - USB-C Related Commands

7.7.1. Restarting the Link Training

This method is equal to pulling the USB-C connector out and plugging it in again.

Request and Response #linktraining

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/I1/DP/restartLinkTraining
 INFO: The body has to be empty, and the content type should be text/plain.
 ← status-line: 200 OK

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/I1/DP/restartLinkTraining
 ← status-line: 200 OK

7.8. CEC Command Sending

The device is able to send Consumer Electronics Control (CEC) commands. This feature is for remote controlling the source or sink device. CEC is a bi-directional communication via the HDMI cable.

ATTENTION: To have a successful CEC command processing, the connected HDMI device must support CEC. #cec

7.8.1. Simple CEC Code Sending

This command is for sending simple CEC commands to the connected sink device. In this case the <command> is sent in a CEC frame without any opcode. The command also allows sending many commands at once.

The commands can be sent by the following two formats – defined in the header:

- **text/plain:** hexa strings (as seen in the example)
- **application/octet-stream:** binary data that allows sending a file with the desired codes

Request and Response

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/01/CEC/send
 → body: <command>
 ← status-line: 200 OK
 ← body: <response>

Parameters

Parameter	Parameter description	Values	Value description
<command> *	Two-digit-long hexa code to control the sink device	04	Power on
		0D	Power off
		36	Standby
		821000	Select input 1
		822000	Select input 2
		823000	Select input 3

* The supported list of <commands> depends on the connected sink device.

The <response> can be:

<response>	HTTP code	Result
ACK	200	The transmission is successful
NACK	444	The command is not accepted
Timeout	408	Timeout
Internal Error	500	Other error

Example

→ request-line: POST·http://192.168.0.100/api/V1/MEDIA/VIDEO/01/CEC/send
 → body: 04
 ← status-line: 200 OK
 ← body: ACK

7.8.2. Remote Control Code Sending

This command is for sending the so-called 'push-button-commands'. There is a range within the CEC commands for this purpose, e.g. volume up/down. With this method one <command> is put between the 0x44 and 0x45 opcodes in the background.

Request and Response

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/01/CEC/sendUserControlClick
 → body: <command>
 ← status-line: 200 OK
 ← body: <response>

Parameters

Parameter	Parameter description	Values	Value description
<command> *	Two-digit-long hexa code to control the sink device	6D	Power on
		6C	Power off

* The supported list of <commands> depends on the connected sink device.

The <response> can be the same as written at the previous command.

Example

→ request-line: POST·http://192.168.0.100/api/V1/MEDIA/VIDEO/01/CEC/sendUserControlClick
 → body: 6D
 ← status-line: 200 OK
 ← body: ACK

7.9. Audio Port Settings

INFO: Audio port numbers may differ depending on the model. For more information, see the [Port Numbering](#) section.

7.9.1. Switching the Audio Input

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/XP/switch
 → body: <audio_in>:02
 ← status-line: 200 OK
 ← body: <audio_in>:02

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I3	Audio input port number

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/XP/switch
 → body: I2:02
 ← status-line: 200 OK
 ← body: I2:02

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

7.9.2. Querying the Connected Source

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/AUDIO/XP/02/ConnectedSource
 ← status-line: 200 OK
 ← body: <audio_in>

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I3	Audio input port number

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/AUDIO/XP/02/ConnectedSource
 ← status-line: 200 OK
 ← body: I2

7.9.3. Setting the Autoselect Operation Mode

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/02/Policy
 → body: <op_mode>
 ← status-line: 200 OK
 ← body: <op_mode>

Parameters

Parameter	Parameter description	Values	Value description
<op_mode>	Operation mode	Follow video	Follows the video crosspoint state automatically.
		Off	Autoselect function is disabled.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/AUTOSELECT/02/Policy
 → body: Follow video
 ← status-line: 200 OK
 ← body: Follow video

7.9.4. Locking the Audio Port

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Lock
 → body: <locked_state>
 ← status-line: 200 OK
 ← body: <locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	I1-I3 02	Audio input port number Audio output port number
<locked_state>	Locked state	true false	The port is locked The port is unlocked

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/XP/I2/Lock
 → body: false
 ← status-line: 200 OK
 ← body: false

7.9.5. Muting the Audio Port 1.

INFO: Suspends the connection of the chosen port (no signal is forwarded).

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Mute
 → body: <muted_state>
 ← status-line: 200 OK
 ← body: <muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	I1-I3 O2	Audio input port number Audio output port number
<muted_state>	Muted state	true false	The port is muted. The port is unmuted.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/XP/I2/Mute
 → body: false
 ← status-line: 200 OK
 ← body: false

INFO: All inputs and analog output ports have a mute property in the audio XP (e.g. http://<ip>/api/V1/MEDIA/AUDIO/XP/I1.Mute). Outputs have a separate mute function within the port node as well:

- http://<ip>/api/V1/MEDIA/VIDEO/XP/O1.EmbeddedAudioMute
- http://<ip>/api/V1/MEDIA/AUDIO/O2.Mute

7.9.6. Muting the Audio Port 2.

INFO: The volume of the analog audio output is set to low.

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/O2/Mute
 → body: <muted_state>
 ← status-line: 200 OK
 ← body: <muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	I1-I3 O2	Audio input port number Audio output port number
<muted_state>	Muted state	true false	The port is muted. The port is unmuted.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/O3/Mute
 → body: false
 ← status-line: 200 OK
 ← body: false

7.9.7. Querying the Audio Signal Presence

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/AUDIO/<audio_port>/SignalPresent
 ← status-line: 200 OK
 ← body: <signal_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	I1-I3 O2	Audio input port number Audio output port number
<signal_state>	Signal presence	true false	The audio signal is present. No audio signal is present.

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/AUDIO/I1/SignalPresent
 ← status-line: 200 OK
 ← body: false

7.9.8. Analog Audio Output Volume (dB) Setting

Request and Response #analogaudio #volume

```
→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/02/VolumedB
→ body: <level>
← status-line: 200 OK
← body: <level>
```

Parameter

The <level> parameter sets the output volume (attenuation) between -95.62 dB and 0 dB in step of -0.375 dB. The value is rounded up if necessary, to match with the step value.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/02/VolumedB
→ body: -15
← status-line: 200 OK
← body: -15
```

7.9.9. Analog Audio Output Volume Percent Setting

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/02/VolumePercent
→ body: <percent>
← status-line: 200 OK
← body: <percent>
```

Parameters

The <percent> parameter sets the output volume (attenuation) between 100% and 0%, in step of 1%. The value is rounded up if necessary, to match with the step value.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/02/VolumePercent
→ body: 50
← status-line: 200 OK
← body: 50
```

7.9.10. Setting the Balance

Request and Response #balance

```
→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/02/Balance
→ body: <level>
← status-line: 200 OK
← body: <level>
```

Parameters

The <level> parameter sets the balance; -100 means left balance, 100 means right balance, step is 1. Center is 0 (default).

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/02/Balance
→ body: 0
← status-line: 200 OK
← body: 0
```

7.9.11. Analog Audio Output Level Setting by Steps (dB)

Request and Response #analogaudio #volume

```
→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/02/stepVolumedB
→ body: <step>
← status-line: 200 OK
← body: <step>
```

Parameters

The volume is increased or decreased with the given <step> value in dB.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/02/stepVolumedB
→ body: -1
← status-line: 200 OK
← body: OK
```

The volume is decreased with 1 dB, the current volume is -1.95 dB, which means 77.84% in percent.

7.9.12. Analog Audio Output Level Setting by Steps in Percent

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/02/stepVolumePercent
→ body: <step>
← status-line: 200 OK
← body: <step>
```

Parameters

The volume is increased or decreased by the given <step> value in percent.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/02/stepVolumePercent
→ body: 5
← status-line: 200 OK
← body: OK
```

7.9.13. Analog Audio Output Balance Setting by Steps

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/02/stepBalance
→ body: <step>
← status-line: 200 OK
← body: <step>
```

Parameters

The volume is increased or decreased by the given <step> value.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/02/stepBalance
→ body: 5
← status-line: 200 OK
← body: OK
```

7.10. USB Port Settings - USB-C Related Commands

7.10.1. Setting the Displayport Alternate Mode Policy

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/USB/U1/DpAltModePolicy
→ body: <dp_policy>
← status-line: 200 OK
← body: <dp_policy>
```

Parameters

Parameter	Parameter description	Values	Value description
<dp_policy>	The preferred video or USB data transmission	Auto	Auto: Taurus offers both operation modes described below. A BYOD device can choose between the two. Neither USB3, nor 4 lane DP Alt mode operation (4K@60) is guaranteed. BYOD devices supporting USB3.x usually choose shared mode: USB3.1 and 2 lane DP.
Force C			Prefer video: all four lanes are reserved for video transmission, USB 3.1 data transmission does not operate.
Force D			Prefer USB 3.1: 2 lanes are reserved for USB 3.1, 2 lanes for video.

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/U1/DpAltModePolicy
→ body: Auto
← status-line: 200 OK
← body: Auto
```

ATTENTION: Changing DpAltModePolicy is recommended before connecting a computer to the input.

7.10.2. Querying the Host Alternate Mode Support

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/USB/U1/HostSupportsDpAltMode
 ← status-line: 200·OK
 ← body: <altmode_support>

Parameters

Parameter	Parameter description	Value	Value description
<altmode_support>		False	The host does not support the alternate mode.
		True	The host supports the alternate mode.

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/USB/U1/HostSupportsDpAltMode
 ← status-line: 200 OK
 ← body: true

7.10.3. Querying the Status of the Alternate Mode

Request and Response #dpaltmode #alternatemode #displayportalternatemode

→ request-line: GET http://<ip>/api/V1/MEDIA/USB/U1/ActiveAltMode
 ← status-line: 200·OK
 ← body: <altmode_state>

Parameters

Parameter	Parameter description	Value	Value description
<altmode_state>		N/A	The host is not connected
		None	DP Alt mode is not active
		DP	DP Alt mode is active.

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/USB/U1/ActiveAltMode
 ← status-line: 200 OK
 ← body: DP

7.10.4. Querying the Port Data Role

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/USB/U1/ActivePortDataRole
 ← status-line: 200·OK
 ← body: <data_role>

Parameters

Parameter	Parameter description	Values	Value description
<data_role>		N/A	No information about the data role.
		DFP	Downstream Facing Port (usually a Host / HUB ports) The port data role is configured as USB Host. This is for building up the connection (USB data transmission operates after the data role swap)
		UFP	Upstream Facing Port (usually a device)

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/USB/U1/ActivePortDataRole
 ← status-line: 200 OK
 ← body: UFP

7.10.5. Querying the Port Power Role

Request and Response #power

→ request-line: GET http://<ip>/api/V1/MEDIA/USB/U1/ActivePortPowerRole
 ← status-line: 200·OK
 ← body: <power_role>

Parameters

Parameter	Parameter description	Values	Value description
<power_role>		N/A	No information about the power role.
		Sink	The port is configured as a sink.
		Source	The port is configured as a source

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/USB/U1/ActivePortPowerRole
 ← status-line: 200 OK
 ← body: Source

7.10.6. Setting the Port Power Role

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/USB/U1/PortPowerRoleSetting
 → body: <power_role>
 ← status-line: 200 OK
 ← body: <power_role>

Parameters

Parameter	Parameter description	Values	Value description
<power_role>		Sink	The port is configured as a sink.
		Source	The port is configured as a source.
		Dual Role	The port is configured to be in Dual Power Role mode.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/U1/PortPowerRoleSetting
 → body: Dual Role
 ← status-line: 200 OK
 ← body: Dual Role

7.11. EDID Management

7.11.1. Querying the Emulated EDIDs

Request and Response #edid

→ request-line: GET http://<ip>/api/V1/EDID/EdidStatus
 ← status-line: 200.OK
 ← body: ["<source>:E1","<source>:E2","<source>:E3","<source>:E4"]

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDID

Example

→ request-line: GET http://192.168.0.100/api/V1/EDID/EdidStatus
 ← status-line: 200 OK
 ← body: ["F47:E1","F47:E2","F47:E3","F47:E4"]

Emulated EDID memory for input port is listed with the EDID number that is currently emulated on the input.

7.11.2. Querying the Validity of a Dynamic EDID

Request and Response

→ request-line: GET http://<ip>/api/V1/EDID/D/D1/Validity
 ← status-line: 200.OK
 ← body: <validity>

Parameters

If the <validity> parameter is **true**, the EDID is valid. If the parameter is **false**, the EDID is invalid.

Example

→ request-line: GET http://192.168.0.100/api/V1/EDID/D/D1/Validity
 ← status-line: 200 OK
 ← body: true

The 'Validity' property is true, valid EDID is stored in D1 memory place.

7.11.3. Querying the Preferred Resolution of a User EDID

Request and Response

→ request-line: GET http://<ip>/api/V1/EDID/U/<user_edid>/PreferredResolution
 ← status-line: 200.OK
 ← body: <preferred_resolution>

Example

→ request-line: GET http://192.168.0.100/api/V1/EDID/U/U2/PreferredResolution
 ← status-line: 200 OK
 ← body: 1920x1080p60.00Hz

INFO: Use the **Manufacturer** and **MonitorName** properties to query further information.

7.11.4. Emulating an EDID to an Input Port

Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/switch
 → body: <source>:<destination>
 ← status-line: 200 OK
 ← body: <source>:<destination>

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDID
<destination>	The emulated EDID memory of the desired input port	U1-U100	User EDIDs

Example

→ request-line: POST http://192.168.0.100/api/V1/EDID/switch
 → body: F49:E2
 ← status-line: 200 OK
 ← body: OK

7.11.5. Emulating an EDID to All Input Ports

Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/switchAll
 → body: <source>
 ← status-line: 200 OK
 ← body: OK

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDIDs

Example

→ request-line: POST http://192.168.0.100/api/V1/EDID/switchAll
 → body: F47
 ← status-line: 200 OK
 ← body: OK

7.11.6. Copying an EDID to User Memory

Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/copy
 → body: <source>:<destination>
 ← status-line: 200 OK
 ← body: OK

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDID
<destination>	The emulated EDID memory of the desired input port	U1-U100	User EDIDs

Example

→ request-line: POST http://192.168.0.100/api/V1/EDID/copy
 → body: F1:U2
 ← status-line: 200 OK
 ← body: OK

7.11.7. Deleting an EDID from User Memory

Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/delete
 → body: <user_edid>
 ← status-line: 200 OK
 ← body: OK

Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The emulated EDID memory of the desired input port.	U1-U100	User EDIDs

Example

→ request-line: POST http://192.168.0.100/api/V1/EDID/delete
 → body: U2
 ← status-line: 200 OK
 ← body: OK

7.11.8. Resetting the Emulated EDIDs

Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/reset
INFO: The body has to be empty, and the content type should be text/plain.
← status-line: 200 OK
← body: OK

Example

→ request-line: POST http://192.168.0.100/api/V1/EDID/reset
← status-line: 200 OK
← body: OK

Calling this method switches all emulated EDIDs to a factory default one. See the table in the [Factory EDID List](#) section.

7.12. Ethernet Port Configuration

7.12.1. Setting the DHCP State

ATTENTION: When you change a network property, the new value is stored, but the **applySettings** method must always be called to apply the new settings. When two or more network parameters are changed, the **applySettings** method is enough to be called once as a final step.

Request and Response #dhcp #network #ipaddress

→ request-line: POST http://<ip>/api/V1/MANAGEMENT-NETWORK/DhcpEnabled
→ body: <dhcp_status>
← status-line: 200 OK
← body: <dhcp_status>

Parameters

If the <dhcp_status> parameter is **true**, the current IP address setting is DHCP, if the parameter is **false**, the current IP address is static.

Example

→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT-NETWORK/DhcpEnabled
→ body: true
← status-line: 200 OK
← body: true
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT-NETWORK/applySettings
← status-line: 200 OK
← body: OK

INFO: The **applySettings** method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the [GET Method](#).

7.12.2. Changing the IP Address (Static)

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
→ body: <IP_address>
← status-line: 200 OK
← body: <IP_address>
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
→ body: 192.168.0.105
← status-line: 200 OK
← body: 192.168.0.105
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line: 200 OK
← body: OK
```

INFO: The **applySettings** method saves and applies the new value and it will reboot the device.
 INFO: The current setting can be queried by using the [GET Method](#).

7.12.3. Changing the Subnet Mask (Static)

Request and Response #ipaddress

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
→ body: <netmask>
← status-line: 200 OK
← body: <netmask>
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
→ body: 255.255.255.0
← status-line: 200 OK
← body: 255.255.255.0
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line: 200 OK
← body: OK
INFO: The applySettings method will save and apply the new value and it will reboot the device.
INFO: The current setting can be queried by using the GET Method.
```

7.12.4. Changing the Gateway Address (Static)

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
→ body: <gw_address>
← status-line: 200 OK
← body: <gw_address>
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
→ body: 192.168.0.1
← status-line: 200 OK
← body: 192.168.0.1
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line: 200 OK
← body: OK
INFO: The applySettings method will save and apply the new value and it will reboot the device.
INFO: The current setting can be queried by using the GET Method.
```

7.12.5. Applying the Network Settings

Request and Response

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/applySettings

INFO: The body has to be empty, and the content type should be text/plain.

← status-line: 200 OK

← body: OK

Example

→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings

← status-line: 200 OK

← body: OK

All network settings that were changed are applied and network interface restarts.

7.12.6. Setting the Hostname

The hostname is a property that can be used instead of the IP address when connecting to the device. It is also suitable for finding the device in the Device Discovery window of the LDC, see more details in the [Add New Favorite Device](#) section. Furthermore, it can be used to open the The Built-in Miniweb. If the IP address of the device is changing, the hostname can be used as a fixed property.

After hostname changing, restarting the network services is required. New SSL certificate will be generated.

Request and Response

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/HostName

→ body: <unique_name>

← status-line: 200 OK

← body: <unique_name>

Parameters

The <unique_name> can be 1-64 character(s) long and the following are allowed for naming: the elements of the English alphabet and numbers. Hyphen (-) and dot (.) are also accepted, except as last character.

Example

→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/HostName

→ body: room-switcher

← status-line: 200 OK

← body: room-switcher

7.13. Network Security

INFO: Ethernet port numbers may differ depending on the model. For more information, see the [Port Numbering](#) section.

7.13.1. Enabling/Disabling the Ethernet Port

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<ethernet_port>/Enabled

→ body: <status>

← status-line: 200 OK

← body: <status>

Parameters

Identifier	Parameter description	Parameter values
<ethernet_port>	Ethernet port number	P1-P3
<status>	The port is disabled.	false
	The port is enabled.	true

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/ETHERNET/P3/Enabled

→ body: false

← status-line: 200 OK

← body: false

7.13.2. Querying the Network Service Port Number

Request and Response #http #https

→ request-line: GET http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Port

← status-line: 200 OK

← body: <port_num>

Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP / HTTPS / LW3 / SERIAL1
<port_num>	Port number	80 / 443 / 6107 / 8001

Example

→ request-line: GET http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/Port

← status-line: 200 OK

← body: 80

7.13.3. Enabling/Disabling the Network Service Port

Request and Response

```
→ request-line: GET http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Enabled
→ body: <status>
← status-line: 200 OK
← body: <status>
```

Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP / HTTPS
<status>	The port is enabled.	true
	The port is disabled.	false

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/Enabled
→ body: false
← status-line: 200 OK
← body: false
```

7.13.4. Querying the Username for Authentication

INFO: DCX series deals with one user for authentication and the username (admin) can not be changed.

Request and Response

```
→ request-line: GET http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name
← status-line: 200 OK
← body: admin
```

Example

```
→ request-line: GET http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name
← status-line: 200 OK
← body: admin
```

7.13.5. Setting a Password for Authentication

ATTENTION: The minimum character requirement for the password is 10 characters, and it can contain any UTF-8 character.

INFO: Due to security reasons, the password is not stored in any property, so it can not be queried. No password is set by default, setting a password before authorizing the authentication is necessary.

Request and Response *#password*

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1 setPassword
→ body: <password>
← status-line: 200 OK
← body: <password>
```

Parameters

Identifier	Parameter description	Value description
<password>	User defined password for authentication.	min. character length: 10 max. character length: 100 accepted characters: UTF-8 characters

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/AUTH/USER1 setPassword
→ body: #password12
← status-line: 200 OK
← body: #password12
```

7.13.6. Enabling the Authentication

INFO: Set the password before enabling the authentication, because no password is set by default. Restarting the HTTP(S) services is required to apply the authentication settings.

Request and Response

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/AuthenticationEnabled
 → body: <status>
 ← status-line: 200 OK
 ← body: <status>

Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP / HTTPS
<status>	Authentication enabled	true
	Authentication disabled	false

Example

→ request-line: POST http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/AuthenticationEnabled
 → body: false
 ← status-line: 200 OK
 ← body: false

7.14. Advanced Ethernet Security

7.14.1. Setting the VLAN Membership

DIFFERENCE: This command is available from firmware package v2.9.0.

ATTENTION: Changing the VLAN membership of the Control Ethernet port will cause loss of the connection to the device. Please make sure you are changing the correct settings.

With this command the Ethernet ports can be arranged into separate networks in any setup desired.

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<port_number>.VlanMembership
 → body: <vlan_membership>
 ← status-line: 200 OK
 ← body: <vlan_membership>

Parameters

Parameter	Parameter description	Values	Value description
<vlan_membership>	VLAN membership number	1-8	The ports with the same membership number are part of the same network.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/ETHERNET/P3.VlanMembership
 → body: 3
 ← status-line: OK
 ← body: 3

7.14.2. Setting the VLAN ID

You can create separate networks by setting different VLAN IDs for the Ethernet ports. You can create any number of setups for limiting access to the corporate or management network or providing separate networks for each user. Default VLAN ID is 1 for all of the ports.

DIFFERENCE: From FW version v2.20.0, VLAN ID 2000 is reserved for the Room LAN.

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
→ body: <vlan_id>
← status-line: 200 OK
← body: <vlan_id>
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/ETHERNET/P1/VlanMembership
→ body: 2
← status-line: 200 OK
← body: 2
```

Enabling the Room LAN on an Ethernet Port

Request and Response

```
→ request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
→ body: 2000
← status-line: 200 OK
← body: 2000
```

Example

```
→ request-line: POST http://192.168.0.100/api/V1/MEDIA/ETHERNET/P1/VlanMembership
→ body: 2000
← status-line: 200 OK
← body: 2000
```

7.14.3. Setting the Static IP Address for the Room LAN

In case there is no DHCP server on the Room LAN, a static IP address is needed to be set before enabling the function, so that it remains available.

Request and Response

```
→ request-line: POST http://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/
  IPV4/STATIC/ConfiguredIpAddress
→ body: <static_management_ip>
← status-line: 200 OK
← body: <static_management_ip>
```

Example

```
→ request-line: POST http://192.168.0.100/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/
  ROOM/IPV4/STATIC/ConfiguredIpAddress
→ body: 10.10.128.34
← status-line: 200 OK
← body: 10.10.128.34
```

7.14.4. Setting the Gateway for Static IP on the Room LAN

Request and Response

```
→ request-line: POST http://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/
  IPV4/STATIC/ConfiguredGatewayAddress
→ body: <static_management_gateway>
← status-line: 200 OK
← body: <static_management_gateway>
```

Example

```
→ request-line: POST http://192.168.0.100/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/
  ROOM/IPV4/STATIC/ConfiguredGatewayAddress
→ body: 10.10.128.1
← status-line: 200 OK
← body: 10.10.128.1
```

7.15. Serial Port Configuration

DIFFERENCE: Only the DCX-3x1-HC20 model has a serial port.

7.15.1. BAUD Rate Setting

Request and Response #rs-232 #rs232

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/Baudrate
 → body: <baudrate>
 ← status-line: 200 OK
 ← body: <baudrate>

Parameters

Identifier	Parameter description	Parameter values
<baudrate>	Baud rate value	9600 19200 38400 57600 115200

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/SERIAL/P1/Baudrate
 → body: 19200
 ← status-line: 200 OK
 ← body: 19200

7.15.2. Stop Bits Setting

Request and Response #rs232 #rs-232 #serial

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/StopBits
 → body: <stopbits>
 ← status-line: 200 OK
 ← body: <stopbits>

Parameters

Identifier	Parameter description	Parameter values
<stopbits>	Stop bit value	1 2

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/SERIAL/P1/StopBits
 → body: 1
 ← status-line: 200 OK
 ← body: 1

7.15.3. Querying the Data Bits

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/SERIAL/P1/DataBits
 ← status-line: 200 OK
 ← body: <databits>

Parameters

Identifier	Parameter description	Parameter values
<databits>	DataBits value	8 9

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/SERIAL/P1/DataBits
 ← status-line: 200 OK
 ← body: 8

7.15.4. Parity Setting

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/Parity
 → body: <parity>
 ← status-line: 200 OK
 ← body: <parity>

Parameters

Identifier	Parameter description	Parameter values
<parity>	Parity value	None Odd Even

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/SERIAL/P1/Parity
 → body: None
 ← status-line: 200 OK
 ← body: None

7.15.5. Querying the Serial over IP Port Number

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Port
 ← status-line: 200·OK
 ← body: 8001

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Port
 ← status-line: 200 OK
 ← body: 8001

7.15.6. Enabling the Serial over IP Port

Request and Response #rs232 #rs-232 #serial

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Enabled
 → body: <state>
 ← status-line: 200 OK
 ← body: <state>

Parameters

Identifier	Parameter description	Parameter values
<state>		true false

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Enabled
 → body: false
 ← status-line: 200 OK
 ← body: false

7.16. Serial Port Messaging

7.16.1. Sending a Message via RS-232

ATTENTION: Serial message sending is implemented only via Lightware REST API. This function is not available with LW3 protocol command. #message

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/send
 → body: <message>
 ← status-line: 200 OK

Parameters

Identifier	Parameter description	Parameter values
<message>	Serial message	Any format is acceptable (text, binary, hexadecimal etc.), maximum message size is 100K. Escaping is unnecessary.

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/SERIAL/P1/send
 → body: PWR0
 ← status-line: 200 OK

The 'PWR0' message is sent out via the P1 serial port.

INFO: Taurus can receive a serial message in a special way. When a message is sent from the Taurus, the response from the connected device is accepted within 100 ms. The communication is closed after that time interval.

7.17. GPIO Port Configuration

7.17.1. Setting the Direction of a GPIO Pin

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/Direction
 → body: <dir>
 ← status-line: 200 OK
 ← body: <dir>

Parameters

Parameter	Parameter description	Value	Value description
<dir>	The direction of the GPIO pin.	Input	input
		Output	output

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/GPIO/P1/Direction
 → body: Input
 ← status-line: 200 OK
 ← body: Input

7.17.2. Setting the Output Level of a GPIO Pin

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/Output
 → body: <state>
 ← status-line: 200 OK
 ← body: <state>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	High	high level
		Low	low level

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/GPIO/P1/Output
 → body: High
 ← status-line: 200 OK
 ← body: High

7.17.3. Setting the Output Level for a Specified Time

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/interval
 → body: <value>;<time>
 ← status-line: 200 OK
 ← body: <value>;<time>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	High	high level
		Low	low level
<time>	Duration of the desired value in seconds.	1-120	second(s)

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/GPIO/P1/interval
 → body: Low;1
 ← status-line: 200 OK
 ← body: OK

7.17.4. Toggling the Level of a GPIO Pin

The output level can be changed from high to low and from low to high with the command below.

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/toggle
 INFO: The body has to be empty, and the content type should be text/plain.
 ← status-line: 200 OK
 ← body: OK

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/GPIO/P1/toggle
 ← status-line: 200 OK
 ← body: OK

7.18. OCS Port Configuration

7.18.1. Querying the Input Level of an OCS Pin

Request and Response #ocs

→ request-line: GET http://<ip>/api/V1/MEDIA/OCS/P1/InputLevel
 ← status-line: 200·OK
 ← body: <value>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The input value of the OCS pin.	High	high level
		Low	low level

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/OCS/P1/InputLevel
 ← status-line: 200 OK
 ← body: Low

7.18.2. Setting the Sensor Type

Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/OCS/P1/SensorType:
 → body: <sensor_type>
 ← status-line: 200 OK
 ← body: <sensor_type>

Parameters

Parameter	Parameter description	Value	Value description
<sensor_type>	It defines whether the low or high input level means the occupancy.	Active low	Occupancy status is 'Occupied' when the input level is low.
		Active high	Occupancy status is 'Occupied' when the input level is high (default value).

Example

→ request-line: POST http://192.168.0.100/api/V1/MEDIA/OCS/P1/SensorType
 → body: Active low
 ← status-line: 200 OK
 ← body: Active low

7.18.3. Querying the Reported OCS State

Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/OCS/P1/State
 ← status-line: 200·OK
 ← body: <status>

Parameters

Parameter	Parameter description	Value	Value description
<status>	It reports the occupancy state of the room depending on the sensor type.	Free	When the SensorType=Active high and the Inputlevel=Low or when SensorType=Active low and Inputlevel=High
		Occupied	When the SensorType=Active high and the Inputlevel=High or when SensorType=Active low and Inputlevel=Low

Example

→ request-line: GET http://192.168.0.100/api/V1/MEDIA/OCS/P1/State
 ← status-line: 200 OK
 ← body: Free

7.19. Updating the Device via REST API

7.19.1. Querying the Update REST API Version

Request and Response

→ request: GET http://<ip>/api/V1/MANAGEMENT/UPDATE/Version

← response: <standard_response>

← body: <major>.<minor>

Parameters

Parameter	Parameter description	Values	Value description
<ip>	The IP address of the device separated with dots.		e.g.: 192.168.0.100
<standard_response>	Standard HTTP response	200 OK	The request has succeeded.
		400 Bad request	The request cannot be processed.
<major>	REST API major version number		
<minor>	REST API minor version number		

Example


→ request: GET http://192.168.0.100/api/V1/MANAGEMENT/UPDATE/Version

← response: 200 OK

← body: 1.1

7.19.2. The Updating Process

The API allows the device to update itself with an **LFP2 FW** package. This new approach means there is no need to run a software on the connected PC (in case of LDU2) for updating the Lightware device.

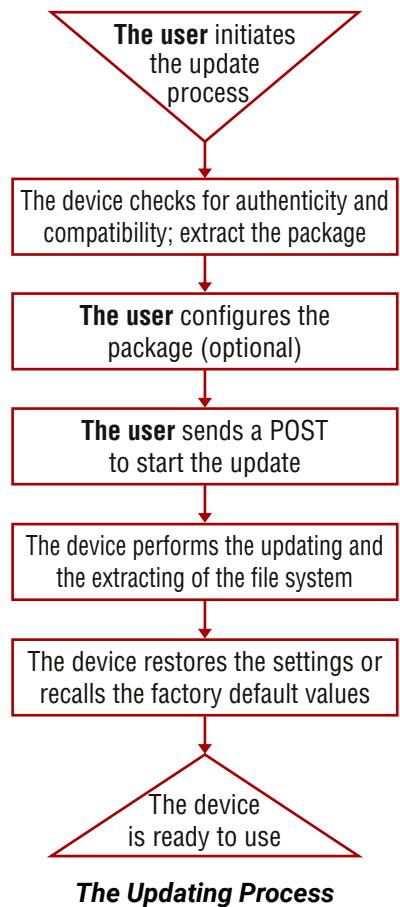

The Updating Steps

1. The **User uploads the package** to a dedicated URL.
 - The package is being unpacked during the uploading process.
 - The package is checked by the device to see if they are compatible with each other.
2. The **User can set the uploaded package**.
 - The factory default settings can be recalled (this is the default setting of the package) or the current settings of the device can be restored (optional).
3. The **User starts the self-updating process** by sending a POST method.
 - The device performs the operations in connection with the update (e.g. file system replacement).
 - The device restores the previous settings to the new system, if it was set to.

4. The device is ready to use.

7.19.3. Uploading the Package

This step may take up to one or two minutes to finish as the size of the LFP2 package is approx. 100-150 MB (depends on the device and FW version).

Request and Response

→ request: POST `http://<ip/host>/api/V1/MANAGEMENT/UPDATE/Package`
 → body: <LFP2 file>
 → content-type: application/octet-stream
 ← response: <standard_response>
 ← body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<standard_response>	Standard HTTP response	200 OK 400 Bad request 500 Internal Server Error	<p><message>: OK The request has succeeded; the whole package is extracted and the basic checks are done.</p> <p><message>: Package incompatible: Incompatible partnumber: [...] The request cannot be processed; error during the uploading/checking. e.g. the package is not compatible with the device. The <message> is in text/plain format.</p> <p><message>: Socket timeout The package uploading was not successful. Please try it again.</p>

Example

→ request: POST `http://192.168.0.100/api/V1/MANAGEMENT/UPDATE/Package`
 → body: (the LFP2 file)
 ← response: 200 OK
 ← body: OK

7.19.4. Configuration Parameters – Keep the Current Settings

ATTENTION: Restoring the device settings is not allowed if the firmware is **downgraded** to a previous version or the existing (=running) FW package of the device is **v1.x**. In those cases, recalling the factory default settings is a must.

This is an **optional step** that allows keeping the current settings of the device. The **default setting** of an update is to **recall the factory default** values. If you want to keep the current settings of the device, delete the '**dofactoryreset**' file from the uploaded package as follows:

Request and Response

→ request: `DELETE http://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset`
 ← response: <standard_response>
 ← body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<standard_response>	Standard HTTP response	200 OK 405 Method not allowed 500 Internal Server Error	<p>200 OK "Deleted"</p> <p>405 Method not allowed LFP2 package was not uploaded to the device.</p> <p>500 Internal Server Error The file does not exist in the uploaded package (e.g. it was deleted previously). Continue the update process.</p>

Example

→ request: `DELETE http://192.168.0.100/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset`
 ← response: 200 OK
 ← body: Deleted

7.19.5. Executing the Update

The command is for installing the uploaded package in place of the current system. This step may take up to 7 minutes.

Request and Response

→ request: POST http://<ip/host>/api/V1/MANAGEMENT/UPDATE/update
 → body: <payload>
 → content-type: text/plain
 ← response: <standard_response>
 ← body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<payload>	optional	force	The update can be forced to run in Package incompatible error state, but the security check cannot be bypassed (Package untrusted state).
<standard_response>	Standard HTTP response	200 OK 400 Bad request	The request has succeeded; the update process finished successfully. The request cannot be processed. It may happen that the uploaded package is not compatible with the device (Package incompatible error state) and the force payload was not used.

ATTENTION: Please note that running a **forced update** can make the device inoperable.

Example

→ request: POST http://192.168.0.100/api/V1/MANAGEMENT/UPDATE/update
 ← response: 200 OK
 ← body: OK

When the 'force' payload is used:

→ request: POST http://192.168.0.100/api/V1/MANAGEMENT/UPDATE/update
 → body: force
 → content-type: RAW (JSON)
 ← response: 200 OK
 ← body: OK

7.19.6. Querying the State of the Updating Process

This command is for querying the current state of the updating process.

Request and Response

→ request: GET http://<ip/host>/api/V1/MANAGEMENT/UPDATE>Status
 ← response: <standard_response>
 ← body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<standard_response>	Standard HTTP response	200 OK 400 Bad Request	The request has succeeded. <message> states: Idle : not active, update has not started yet. Package uploading : updating and checking is in progress. Package ready : uploading is done, checking is successful. The request cannot be processed. <message> states: Package incompatible : the uploaded package is not compatible with the device. Package untrusted : the uploaded package is not secure. Failed : the update is not successful.

INFO: Please note that while the new firmware is being programmed in the device, it cannot send a response for a request. Thus the current state cannot be requested either.

After the firmware update is finished successfully, the device would send the 'Idle' response when requesting its status with this command.

Example

→ request: GET http://192.168.0.100/api/V1/MANAGEMENT/UPDATE>Status
 ← response: 200 OK
 ← body: Package uploading

7.20. Lightware REST API Quick Summary

System Commands

Setting the Device Label

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LABEL/DeviceLabel
→ body: <custom_name>

Resetting the Device

→ request-line: POST http://<ip>/api/V1/SYS/restart

Restoring the Factory Default Settings

→ request-line: POST http://<ip>/api/V1/SYS/factoryDefaults

Querying the Firmware Package Version

→ request-line: GET http://<ip>/api/V1/MANAGEMENT/UID/PACKAGE/Version

Control Lock

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/ControlLock
→ body: <lock_status>

Setting the Current Time

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/DATETIME/setTime
→ body: <current_time>

Identifying the Device

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/identifyMe

Toggling the Dark Mode Setting

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Enable
→ body: <mode_state>

Setting the Delay of the Dark Mode

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Delay
→ body: <delay_time>

Enabling Remote System Logging

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Enabled
→ body: <status>

Setting the Remote Server Address

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/ServerAddress
→ body: <server_address>

Setting the Protocol for the Remote System Logging

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Protocol
→ body: <protocol>

Setting the Format of the Remote System Logging

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/SyslogFormat
→ body: <format>

Setting the Port for Remote System Logging

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/PortNumber
→ body: <port_number>

Video Port Settings - General

Switching the Video Input

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/switch
→ body: <in>:01

Switching an Input to All Outputs

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/switchAll
→ body: <in>

Locking the Video Port

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Lock
→ body: <locked_state>

Muting the Video Port

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Mute
→ body: <muted_state>

Setting the Autoselect Policy

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/01/Policy
→ body: <autoselect_mode>

Changing the Autoselect-Included Input Ports

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>/Included
→ body: <state>

Changing the Input Port Priority

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>/Priority
→ body: <prio_num>

Querying the Connected Source

→ request-line: GET http://<ip>/api/V1/MEDIA/VIDEO/XP/01/ConnectedSource

Query the Video Signal Presence

→ request-line: GET http://<ip>/api/V1/MEDIA/VIDEO/<port>/SignalPresent

HDCP Setting (Input Port)

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/<in>/HDCP/AllowedHdcpVersion
→ body: <allowed_hdcp>

HdcpMode

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/01/HdcpMode
 → body: <hdcp_mode>

Querying the Embedded Audio Presence

→ request-line: GET·http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioPresent

Muting the Embedded Audio

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioMute
 → body: <muted_state>

Setting the Output Signal Type

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/01/OutputSignalType
 → body: <signal_type>

Turning on Output 5V

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/01/Output5VMode
 → body: <5V_pwr>

Video Port Settings - USB-C Related Commands

Restarting the Link Training

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/I1/DP/restartLinkTraining

CEC Command Sending

Simple CEC Code Sending

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/01/CEC/send
 → body: <command>

Remote Control Code Sending

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/01/CEC/sendUserControlClick
 → body: <command>

Audio Port Settings

Switching the Audio Input

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/XP/switch
 → body: <audio_in>:02

Querying the Connected Source

→ request-line: GET·http://<ip>/api/V1/MEDIA/AUDIO/XP/02/ConnectedSource

Setting the Autoselect Operation Mode

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/02/Policy
 → body: <op_mode>

Locking the Audio Port

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Lock
 → body: <locked_state>

Muting the Audio Port 1.

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Mute
 → body: <muted_state>

Muting the Audio Port 2.

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/02/Mute
 → body: <muted_state>

Querying the Audio Signal Presence

→ request-line: GET·http://<ip>/api/V1/MEDIA/AUDIO/<audio_port>/SignalPresent

Analog Audio Output Volume (dB) Setting

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/02/VolumedB
 → body: <level>

Analog Audio Output Volume Percent Setting

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/02/VolumePercent
 → body: <percent>

Setting the Balance

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/02/Balance
 → body: <level>

Analog Audio Output Level Setting by Steps (dB)

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/02/stepVolumedB
 → body: <step>

Analog Audio Output Level Setting by Steps in Percent

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/02/stepVolumePercent
 → body: <step>

Analog Audio Output Balance Setting by Steps

→ request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/02/stepBalance
 → body: <step>

USB Port Settings - USB-C Related Commands

Setting the Displayport Alternate Mode Policy

→ request-line: POST·http://<ip>/api/V1/MEDIA/USB/U1/DpAltModePolicy
 → body: <dp_policy>

Querying the Host Alternate Mode Support

→ request-line: GET·http://<ip>/api/V1/MEDIA/USB/U1/HostSupportsDpAltMode

Querying the Status of the Alternate Mode

→ request-line: GET·http://<ip>/api/V1/MEDIA/USB/U1/ActiveAltMode

Querying the Port Data Role

→ request-line: GET·http://<ip>/api/V1/MEDIA/USB/U1/ActivePortDataRole

Querying the Port Power Role

→ request-line: GET·http://<ip>/api/V1/MEDIA/USB/U1/ActivePortPowerRole

Setting the Port Power Role

→ request-line: POST·http://<ip>/api/V1/MEDIA/USB/U1/PortPowerRoleSetting

→ body: <power_role>

EDID Management

Querying the Emulated EDIDs

→ request-line: GET·http://<ip>/api/V1/EDID/EdidStatus

Querying the Validity of a Dynamic EDID

→ request-line: GET·http://<ip>/api/V1/EDID/D/D1/Validity

Querying the Preferred Resolution of a User EDID

→ request-line: GET·http://<ip>/api/V1/EDID/U/<user_edid>/PreferredResolution

Emulating an EDID to an Input Port

→ request-line: POST·http://<ip>/api/V1/EDID/switch

→ body: <source>:<destination>

Emulating an EDID to All Input Ports

→ request-line: POST·http://<ip>/api/V1/EDID/switchAll

→ body: <source>

Copying an EDID to User Memory

→ request-line: POST·http://<ip>/api/V1/EDID/copy

→ body: <source>:<destination>

Deleting an EDID from User Memory

→ request-line: POST·http://<ip>/api/V1/EDID/delete

→ body: <user_edid>

Resetting the Emulated EDIDs

→ request-line: POST·http://<ip>/api/V1/EDID/reset

Ethernet Port Configuration

Setting the DHCP State

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/DhcpEnabled

→ body: <dhcp_status>

Changing the IP Address (Static)

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticIpAddress

→ body: <IP_address>

Changing the Subnet Mask (Static)

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask

→ body: <netmask>

Changing the Gateway Address (Static)

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress

→ body: <gw_address>

Applying the Network Settings

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/applySettings

Setting the Hostname

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/HostName

→ body: <unique_name>

Network Security

Enabling/Disabling the Ethernet Port

→ request-line: POST·http://<ip>/api/V1/MEDIA/ETHERNET/<ethernet_port>/Enabled

→ body: <status>

Querying the Network Service Port Number

→ request-line: GET·http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Port

Enabling/Disabling the Network Service Port

→ request-line: GET·http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Enabled

→ body: <status>

Querying the Username for Authentication

→ request-line: GET·http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name

Setting a Password for Authentication

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/setPassword

→ body: <password>

Enabling the Authentication

→ request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/AuthenticationEnabled

→ body: <status>

Advanced Ethernet Security

Setting the VLAN Membership

→ request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<port_number>.VlanMembership
 → body: <vlan_membership>

Setting the VLAN ID

→ request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
 → body: <vlan_id>
 → request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
 → body: 2000

Setting the Static IP Address for the Room LAN

→ request-line: POST http://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC/ConfiguredIpAddress
 → body: <static_management_ip>

Setting the Gateway for Static IP on the Room LAN

→ request-line: POST http://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC/ConfiguredGatewayAddress
 → body: <static_management_gateway>

Serial Port Configuration

BAUD Rate Setting

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/Baudrate
 → body: <baudrate>

Stop Bits Setting

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/StopBits
 → body: <stopbits>

Querying the Data Bits

→ request-line: GET http://<ip>/api/V1/MEDIA/SERIAL/P1/DataBits

Parity Setting

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/Parity
 → body: <parity>

Querying the Serial over IP Port Number

→ request-line: GET http://<ip>/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Port

Enabling the Serial over IP Port

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Enabled
 → body: <state>

Serial Port Messaging

Sending a Message via RS-232

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/P1/send
 → body: <message>

GPIO Port Configuration

Setting the Direction of a GPIO Pin

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/Direction
 → body: <dir>

Setting the Output Level of a GPIO Pin

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/Output
 → body: <state>

Setting the Output Level for a Specified Time

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/interval
 → body: <value>,<time>

Toggling the Level of a GPIO Pin

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<port>/toggle

OCS Port Configuration

Querying the Input Level of an OCS Pin

→ request-line: GET http://<ip>/api/V1/MEDIA/OCS/P1/InputLevel

Setting the Sensor Type

→ request-line: POST http://<ip>/api/V1/MEDIA/OCS/P1/SensorType
 → body: <sensor_type>

Querying the Reported OCS State

→ request-line: GET http://<ip>/api/V1/MEDIA/OCS/P1/State

Updating the Device via REST API

Querying the Update REST API Version

→ request: GET http://<ip>/api/V1/ MANAGEMENT/UPDATE/Version

Uploading the Package

→ request: POST http://<ip/host>/api/V1/ MANAGEMENT/UPDATE/Package
 → body: <LFP2 file>
 → content-type: application/octet-stream

Configuration Parameters – Keep the Current Settings

→ request: DELETE http://<ip/host>/api/V1/ MANAGEMENT/UPDATE/CONFIG/dofactoryreset

Executing the Update

→ request: POST `http://<ip/host>/api/V1/MANAGEMENT/UPDATE/update`
→ body: <payload>
→ content-type: text/plain

Querying the State of the Updating Process

→ request: GET `http://<ip/host>/api/V1/MANAGEMENT/UPDATE/Status`

8

LW3 Programmers' Reference

The device can be controlled through Lightware 3 (LW3) protocol commands to ensure the compatibility with other Lightware products. The supported LW3 commands are described in this chapter.

▶ Overview	115
▶ Instructions for the Terminal Application Usage	115
▶ Websocket (WS) or Secured Websocket (WSS) Usage	115
▶ Protocol Rules	116
▶ System Commands	119
▶ Video Port Settings - General	122
▶ Video Port Settings - USB-C Related Commands	125
▶ CEC Command Sending	126
▶ Audio Port Settings	128
▶ USB Port Settings - USB-C Related Commands	131
▶ EDID Management	132
▶ Ethernet Port Configuration	134
▶ Network Security	136
▶ Advanced Ethernet Security	137
▶ Serial Port Configuration	138
▶ Sending a Message via RS-232	139
▶ GPIO Port Configuration	139
▶ OCS Port Configuration	140
▶ LW3 Commands - Quick Summary	142

8.1. Overview

The Lightware Protocol #3 (LW3) is implemented in almost all new Lightware devices (matrix switchers, signal extenders and distribution amplifiers) since 2012. The protocol is ASCII-based and all commands are terminated with a carriage return (Cr, '\r') and line feed (Lf, '\n') pair. It is organized as a tree structure that provides outstanding flexibility and user-friendly handling with 'nodes', 'properties' and 'methods'. The [Advanced View](#) of the Lightware Device Controller software is the perfect tool for browsing and learning how the LW3 protocol can be used in practice.

8.2. Instructions for the Terminal Application Usage

Terminal Application


The LW3 protocol commands can be applied to the switcher using a terminal application. You need to install one of them on your control device, for example [Putty](#) or [CLI](#). [#terminal](#)

Establishing Connection

Follow the steps to establish connection to the switcher:

- Step 1. Connect the device to a LAN over Ethernet.
- Step 2. Open the terminal application (e.g. Putty).
- Step 3. Add the **IP address** of the device (default: DHCP) and the **port number (6107)**.
- Step 4. Select the **Raw** connection type, and open the connection.

Once the terminal window is opened, you can enter the LW3 protocol commands, which are listed in the following sections.

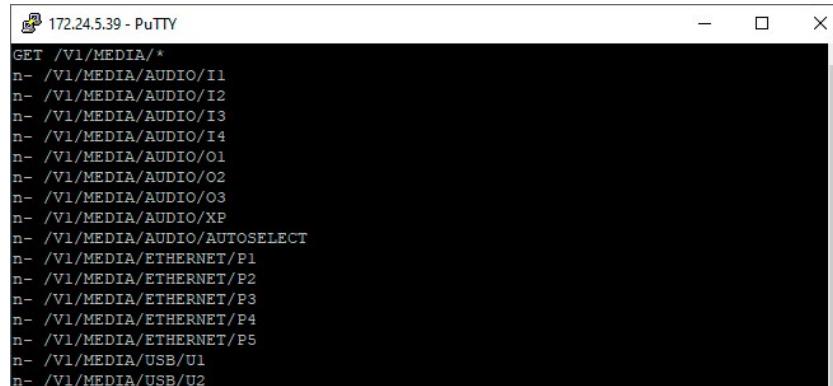

LW3 protocol command communication in a terminal window

8.3. Websocket (WS) or Secured Websocket (WSS) Usage

DCX series switcher provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands. For more details about the websocket, see the [Setting Up the Room LAN](#) section.

The LW3 node tree is available after opening a session with the device on the following path:


- ws://<ip>/lw3
- wss://<ip>/lw3

WebSocket Client Application

Establishing Connection


Follow the steps to establish connection to the switcher:

- Step 1. Connect the receiver to a LAN over Ethernet.
- Step 2. Open the websocket client (e.g. Simple websocket Client).
- Step 3. Add the **IP address** of the device (default: DHCP): ws://<ip>/lw3 or wss://<ip>/lw3
- Step 4. Press the open/connect button.
- Step 5. Once connected, enter a message and press the Send button.
- Step 6. Press the Close/Disconnect button to end the session.

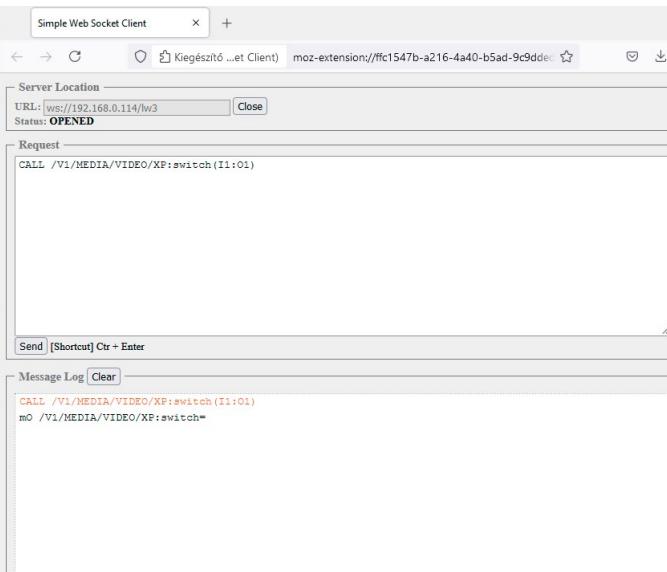

8.4. Protocol Rules

8.4.1. LW3 Tree Structure and Command Structure (examples)

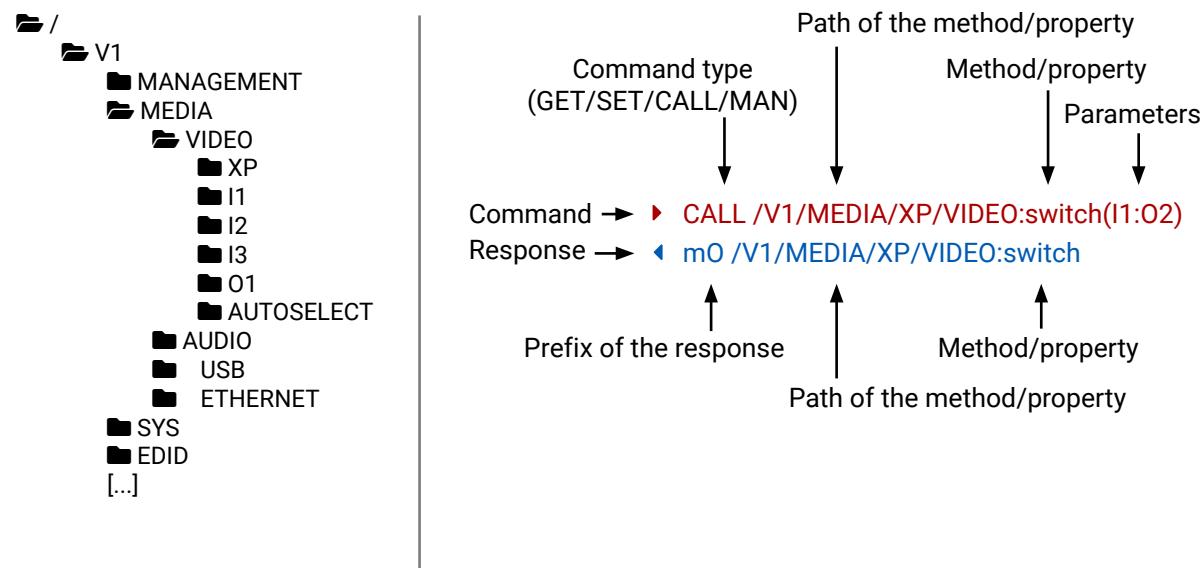

8.4.2. General Rules

- Up to FW version v2.9.0, all names and parameters are **case-sensitive**.
- The nodes are separated by a slash ('/') character.
- The node name can contain the elements of the English alphabet and numbers.
- Use the **TCP port no. 6107** when using LW3 protocol over Ethernet.
- The 80 port can be used for WS (instead of HTTP)
- The 443 port can be used for WSS (instead of HTTPS)
- When a command is issued by the device, the received response cannot be processed by the CPU.
- The node paths describe the exact location of the node, listing each parent node up to the root.
- The **length of a line** (command/response, command type / prefix, path, method/property and parameters together) can be **max. 800 bytes**.
- The command lines have to be closed by **Carriage Return and Line Feed** (CrLf)
- It can manage 18 connected clients in total simultaneously for WS (80), WSS (443) and LW3 (6107) ports.

8.4.3. Legend for the Control Commands

Command and Response – Example

- ▶ GET·/V1/MEDIA/VIDEO/I2.SignalPresent
- ◀ pr·/V1/MEDIA/VIDEO/I2.SignalPresent=<signal_present>

Format	Description
<in>	Input port number
<out>	Output port number
<port>	Input or output port number
<loc>	Location number
<parameter>	Variable defined and described in the command
<expression>	Batched parameters: the underline means that more expressions or parameters can be placed by using a semicolon, e.g. I2;I4;I5 or F27:E1;F47:E2
▶	Sent command
◀	Received response
.	Space character

Further not listed <parameters> are defined at each command.

8.4.4. Command Types

GET Command

The **GET** command can be used to get the child nodes, properties and methods of a specific node. It can also be used to get the value of a property. Use the dot character (.) when addressing a property:

- ▶ **GET** /.SerialNumber
- ◀ **pr** /.SerialNumber=87654321

GETALL Command

The **GETALL** command can be used to get all child nodes, properties and methods of a node with one command.

- ▶ **GETALL** /V1/MEDIA/ETHERNET
- ◀ **n-** /V1/MEDIA/ETHERNET/P1
- ◀ **n-** /V1/MEDIA/ETHERNET/P2
- ◀ **n-** /V1/MEDIA/ETHERNET/P3

SET Command

The **SET** command can be used to modify the value of a property. Use the dot character (.) when addressing the property:

- ▶ **SET** /V1/MEDIA/VIDEO/I2/HDCP.AllowedHdcpVersion=Off
- ◀ **pw** /V1/MEDIA/VIDEO/I2/HDCP.AllowedHdcpVersion=Off

CALL Command

A method can be invoked by the **CALL** command. Use the colon character (:) when addressing the method:

- ▶ **CALL** /V1/EDID:switchAll(F49)
- ◀ **mO** /V1/EDID:switchAll

MAN Command

The manual is a human readable text that describes the syntax and provides a hint on how to use the primitives. For every node, property and method in the tree there is a manual; type the **MAN** command to get the manual:

- ▶ **MAN** /V1/MEDIA/VIDEO/O1.Output5VMode
- ◀ **pm** /V1/MEDIA/VIDEO/O1.Output5VMode ["On" | "Auto" | "Off"] Enables/disables power 5V output

8.4.5. Prefix Summary

DEFINITION: The prefix is a 2-character-long code that describes the type of the response.

The following prefixes are defined in the LW3 protocol:

Prefix	Description
n-	a node
nE	an error for a node
nm	a manual for a node
ns	a child node of a node
pr	a read-only property
pw	read-write property
pE	an error for the property

Prefix	Description
pm	a manual for the property
m-	a method
mO	a response after a successful method execution
mF	a response after a failed method execution
mE	an error for a method
mm	a manual for a method

8.4.6. Error Messages

There are several error messages defined in the LW3 protocol, all of them have a unique error number.

- ▶ **CALL** /MEDIA/VIDEO/XP:lock(IA)
- ◀ **mE** /MEDIA/VIDEO/XP:lock %E002:Not exist

8.4.7. Escaping

DEFINITION: An escape sequence is a sequence of characters that does not represent itself when used inside a character or string literally, but is translated into another character or a sequence of characters.

Property values and method parameters can contain characters that are used as control characters in the protocol. They must be escaped. The escape character is the backslash ('\') and escaping means injecting a backslash before the character that should be escaped (like in C language).

Control characters are the following: \{} # % () \r \n \t

8.4.8. Signature

DEFINITION: The signature is a 4-digit-long hexadecimal value that can be optionally placed before every command to keep a command and the corresponding responses together as a group.

Each line is terminated with Carriage Return (Cr, '\r') and Line Feed (Lf, '\n') characters. In several cases the number of the lines in the response cannot be determined in advance, e.g. the client intends to receive the whole response and also wants to be sure that the received lines belong together and to the same command. In these cases, a special feature, the 'signature' can be used. The response to that particular command will also be preceded by the signature, and the corresponding lines will be between brackets:

```
▶ 1700#GET /V1/EDID.*
◀ {1700
◀ pr /V1/EDID.EdidStatus=F49:E1;F49:E2;F49:E3;F49:E4
◀ m- /V1/EDID:copy
◀ m- /V1/EDID:delete
◀ m- /V1/EDID:reset
◀ m- /V1/EDID:switch
◀ m- /V1/EDID:switchAll
◀ }
```

INFO: The lines of the signature are also Cr and Lf terminated.

8.4.9. Subscription

DEFINITION: Subscription to a node means that the user will get a notification if a property of the node changes.

A user can subscribe to any node. These notifications are asynchronous messages and are useful to keep the client application up to date, without having to periodically poll the node to detect a changed property. When the user does not want to be informed about the changes anymore, he can simply unsubscribe from the node.

DIFFERENCE: From firmware version v2.11.0, subscription to a nonexistent path is possible, and thus there will be no error message upon mistyping a path.

ATTENTION: The subscriptions are handled separately for connections. Hence, if the connection is terminated, all registered subscriptions are deleted. After reopening a connection all subscribe commands have to be sent in order to get the notifications of the changes on that connection.

Subscribe to a Node

```
▶ OPEN /V1/MEDIA/VIDEO
◀ o- /V1/MEDIA/VIDEO
```

Get the Active Subscriptions

```
▶ OPEN
◀ o- /V1/MANAGEMENT/LABEL
◀ o- /V1/MEDIA/VIDEO/XP/01/SWITCHABLE
◀ o- /V1/MEDIA/VIDEO/XP/I2
```

Subscribe to Multiple Nodes

```
▶ OPEN /V1/MEDIA/VIDEO/*
◀ o- /V1/MEDIA/VIDEO/*
```

Unsubscribe from a Node

```
▶ CLOSE /V1/MEDIA/VIDEO
◀ c- /V1/MEDIA/VIDEO
```

Unsubscribe from Multiple Nodes

```
▶ CLOSE /V1/MEDIA/VIDEO/*
◀ c- /V1/MEDIA/VIDEO/*
```

8.4.10. Notifications about the Changes of the Properties

When the value of a property is changed, and the user is subscribed to the node that the property belongs to, an asynchronous notification is generated. This notification is called the 'change message'. The format of such a message is very similar to the response for the **GET** command:

```
◀ CHG /EDID.EdidStatus=F48:E1
```

A Short Example of How to Use the Subscription

There are two independent users controlling the device through two independent connections (**Connection #1** and **Connection #2**). The events in the rows occur after each other.

▶ OPEN /V1/MEDIA/AUDIO/02	connection #1
◀ o- /V1/MEDIA/AUDIO/02	
▶ GET /V1/MEDIA/AUDIO/02.VolumePercent	connection #2
◀ pm /V1/MEDIA/AUDIO/02.VolumePercent=100.00	
▶ GET /V1/MEDIA/AUDIO/02.VolumePercent	connection #1
◀ pw /V1/MEDIA/AUDIO/02.VolumePercent=100.00	
◀ SET /V1/MEDIA/AUDIO/02.VolumePercent=50.00	connection #2
◀ pw /V1/MEDIA/AUDIO/02.VolumePercent=50.00	
◀ CHG /V1/MEDIA/AUDIO/02.VolumePercent=50.00	connection #1

The first user (**Connection #1**) set a subscription to a node. Later the other user (**Connection #2**) made a change, and thanks to the subscription, the first user got a notification about the change.

8.5. System Commands

8.5.1. Setting the Device Label

INFO: The device label can be changed to a custom text in the [Status](#) tab of the LDC software.

Command and Response #devicelabel #label

- ▶ SET /V1/MANAGEMENT/LABEL.DeviceLabel=<custom_name>
- ◀ pw /V1/MANAGEMENT/LABEL.DeviceLabel=<custom_name>

The Device Label can be 49 characters long and ASCII characters are allowed. Longer names are truncated.

Example

- ▶ SET /V1/MANAGEMENT/LABEL.DeviceLabel=DCX_Room1
- ◀ pw /V1/MANAGEMENT/LABEL.DeviceLabel=DCX_Room1

8.5.2. Resetting the Device

The switcher can be restarted – the current connections will be terminated.

Command and Response #reboot #restart

- ▶ CALL /V1/SYS:restart()
- ◀ m0 /V1/SYS:restart=

Example

- ▶ CALL /V1/SYS:restart()
- ◀ m0 /V1/SYS:restart=

8.5.3. Restoring the Factory Default Settings

Command and Response

- ▶ CALL /V1/SYS:factoryDefaults()
- ◀ m0 /V1/SYS:factoryDefaults=

Example

- ▶ CALL /V1/SYS:factoryDefaults()
- ◀ m0 /V1/SYS:factoryDefaults=

The device is restarted, current connections are terminated, and the default settings are restored. See the complete list in the [Factory Default Settings](#) section.

#factory

8.5.4. Querying the Firmware Package Version

Command and Response #firmwareversion

- ▶ GET /V1/MANAGEMENT/UID/PACKAGE.Version
- ◀ pr /V1/MANAGEMENT/UID/PACKAGE.Version=<firmware_version>

Example

- ▶ GET /V1/MANAGEMENT/UID/PACKAGE.Version
- ◀ pr /V1/MANAGEMENT/UID/PACKAGE.Version=2.4.0b2

8.5.5. Control Lock

Enable/disable the operation of the front panel buttons.

Command and Response #lockbutton #buttonlock

- ▶ SET /V1/MANAGEMENT/UI.ControlLock=<lock_status>
- ◀ pw /V1/MANAGEMENT/UI.ControlLock=<lock_status>

Parameters

Parameter	Parameter description	Values	Value description
<lock_status>	Front panel button locking status	None	All functions of the front panel button are enabled.
		Locked	The front panel buttons are locked and can be unlocked by button combination (Control Lock).
		Force locked	The front panel buttons are locked and cannot be unlocked by button combination, only in LDC (on the Status tab) or using the LW3 command.

Example

- ▶ SET /V1/MANAGEMENT/UI.ControlLock=force locked
- ◀ pw /V1/MANAGEMENT/UI.ControlLock=force locked

8.5.6. Setting the Current Time

Command and Response #time

- ▶ CALL /V1/MANAGEMENT/DATETIME:setTime(<current_time>)
- ◀ m0 /V1/MANAGEMENT/DATETIME:setTime=

Parameters

<current_time>: The new router time in ISO 8601 date time format.

Example

- ▶ CALL /V1/MANAGEMENT/DATETIME:setTime(2024-11-01T04:39:54.000Z)
- ◀ m0 /V1/MANAGEMENT/DATETIME:setTime=

8.5.7. Identifying the Device

Calling the method makes the status LEDs blink for 10 seconds. The feature helps find the device physically.

Command and Response `#identifyme`

- ▶ CALL /V1/MANAGEMENT/UI:identifyMe()
- ◀ m0 /V1/MANAGEMENT/UI:identifyMe=

Example

- ▶ CALL /V1/MANAGEMENT/UI:identifyMe()
- ◀ m0 /V1/MANAGEMENT/UI:identifyMe=

8.5.8. Toggling the Dark Mode Setting

The LEDs of the device can be switched off if their light could be annoying. In Dark mode, all LEDs are switched off, except for the LEDs of the RJ45 connectors. `#darkmode`

Command and Response

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Enable=<mode_state>
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Enable=<mode_state>

Parameters

If the `<mode_state>` parameter is **true** (or 1), the Dark mode function is **enabled**, if the parameter is **false** (or 0), the function is **disabled**.

Example

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Enable=true
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Enable=true

8.5.9. Setting the Delay of the Dark Mode Setting

The Dark mode can be enabled right away, or after a certain time. Thus, the mode is enabled if no buttons are pressed for a while. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. The delay time can be set by this command.

Command and Response

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Delay=<delay_time>
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Delay=<delay_time>

Parameters

The `<delay_time>` parameter means seconds, and the default value is 60. If set to 0, no delay is applied, and the Dark mode can be enabled immediately by the **DarkModeEnable** property. This delay affects the **wakeFromDarkMode** method as well.

Example

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Delay=10
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Delay=10

8.5.10. Enabling Remote System Logging

Request and Response

- ▶ SET /V1/MANAGEMENT/LOG/REMOTE.Enabled=<status>
- ◀ pw /V1/MANAGEMENT/LOG/REMOTE.Enabled=<status>

Parameters

Parameter	Value	Value Description
<status>	true	The remote system logging is enabled.
	false	The remote system logging is disabled.

Example

- ▶ SET /V1/MANAGEMENT/LOG/REMOTE.Enabled=true
- ◀ pw /V1/MANAGEMENT/LOG/REMOTE.Enabled=true

8.5.11. Setting the Remote Server Address

Request and Response

- ▶ SET /V1/MANAGEMENT/LOG/REMOTE.ServerAddress=<server_address>
- ◀ pw /V1/MANAGEMENT/LOG/REMOTE.ServerAddress=<server_address>

Parameters

Parameter	Value	Value Description
<server_address>	e.g. mycompany.com (domain) 192.168.0.1 (IPv4)	The server domain name (RFC1035) or IP address (IPv4) where the logs should be sent to.

Example

- ▶ SET /V1/MANAGEMENT/LOG/REMOTE.ServerAddress=192.168.0.1
- ◀ pw /V1/MANAGEMENT/LOG/REMOTE.ServerAddress=192.168.0.1

8.5.12. Setting the Protocol for the Remote System Logging

Request and Response

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.Protocol=<protocol>`
- ◀ `pw /V1/MANAGEMENT/LOG/REMOTE.Protocol=<protocol>`

Parameters

Parameter	Value	Value Description
<protocol>	TCP	The logs are forwarded using TCP protocol.
	UDP	The logs are forwarded using UDP protocol.
	TLS	The logs are forwarded using TLS protocol.

Example

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.Protocol=TLS`
- ◀ `pw /V1/MANAGEMENT/LOG/REMOTE.Protocol=TLS`

8.5.13. Setting the Format of the Remote System Logging

Request and Response

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=<format>`
- ◀ `pw /V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=<format>`

Parameters

Parameter	Value	Value Description
<format>	RFC3164	This is a simplified format for human readability.
	RFC5424	This is an all-encompassing format for analytical systems.

Example

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=RFC3164`
- ◀ `pw /V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=RFC3164`

8.5.14. Setting the Port for Remote System Logging

Request and Response

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.PortNumber=<port_number>`
- ◀ `pw /V1/MANAGEMENT/LOG/REMOTE.PortNumber=<port_number>`

Parameters

Parameter	Value	Value Description
<port_number>	1-65535	The port number on the remote host to send log messages to.

INFO: The port number cannot be set to 0.

Example

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.PortNumber=6514`
- ◀ `pw /V1/MANAGEMENT/LOG/REMOTE.PortNumber=6514`

8.6. Video Port Settings - General

8.6.1. Switching Video Input

Command and Response

- ▶ CALL·/V1/MEDIA/VIDEO/XP:switch(<in>:01)
- ◀ m0·/V1/MEDIA/VIDEO/XP:switch=

Example

- ▶ CALL /V1/MEDIA/VIDEO/XP:switch(12:01)
- ◀ m0 /V1/MEDIA/VIDEO/XP:switch=

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

8.6.2. Locking the Video Port

Command and Response

- ▶ SET·/V1/MEDIA/VIDEO/XP/<port>.Lock=<locked_state>
- ◀ pw·/V1/MEDIA/VIDEO/XP/<port>.Lock=<locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<locked_state>	Locked state	true	The port is locked
		false	The port is unlocked

Example

- ▶ SET /V1/MEDIA/VIDEO/XP/I2.Lock=false
- ◀ pw /V1/MEDIA/VIDEO/XP/I2.Lock=false

8.6.3. Muting the Video Port

Command and Response

- ▶ SET·/V1/MEDIA/VIDEO/XP/<port>.Mute=<muted_state>
- ◀ pw·/V1/MEDIA/VIDEO/XP/<port>.Mute=<muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<muted_state>	Muted state	true	The port is muted.
		false	The port is unmuted.

Example

- ▶ SET /V1/MEDIA/VIDEO/XP/I2.Mute=false
- ◀ pw /V1/MEDIA/VIDEO/XP/I2.Mute=false

8.6.4. Setting the Autoselect Policy

Command and Response

- ▶ SET·/V1/MEDIA/VIDEO/AUTOSELECT/01.Policy=<autoselect_mode>
- ◀ pw·/V1/MEDIA/VIDEO/AUTOSELECT/01.Policy=<autoselect_mode>

Parameters

Parameter	Parameter description	Values	Value description
<autoselect_mode>	The autoselect policy	Off	The autoselect function is disabled.
		Last Detect	It is always the last attached input that is automatically switched to the output..
		First Detect	The first active video input is selected.

Example

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/01.Policy=First detect
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/01.Policy=First detect

8.6.5. Changing the Autoselect Included Input Ports

Command and Response

- ▶ SET·/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>.Included=<state>
- ◀ pw·/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>.Included=<state>

Parameters

Parameter	Parameter description	Values	Value description
<state>	The chosen input is ignored in the autoselect process or not.	true	The port is included in autoselect.
		false	The autoselect function ignores that port.

Example

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/01/I1.Included=false
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/01/I1.Included=false

8.6.6. Changing the Input Port Priority

Command and Response

- ▶ SET·/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>.Priority=<prio_num>
- ◀ pw·/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>.Priority=<prio_num>

Parameters

The <prio> parameter means the priority number from 1 to 100, equal numbers are allowed. Inputs can have different priorities in relation to two or more outputs. Therefore, the output port number is part of the node path of input port priorities.

Example

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/01/I2.Priority=51
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/01/I2.Priority=51

8.6.7. Querying the Connected Source

Command and Response

- ▶ GET·/V1/MEDIA/VIDEO/XP/01.ConnectedSource
- ◀ pw·/V1/MEDIA/VIDEO/XP/01.ConnectedSource=<in>

Example

- ▶ GET /V1/MEDIA/VIDEO/XP/01.ConnectedSource
- ◀ pw /V1/MEDIA/VIDEO/XP/01.ConnectedSource=I2

8.6.8. Querying the Video Signal Presence

Command and Response

- ▶ GET·/V1/MEDIA/VIDEO/<port>.SignalPresent
- ◀ pr·/V1/MEDIA/VIDEO/<port>.SignalPresent=<state>

Parameters

Parameter	Parameter description	Values	Value description
<state>	This property gives a feedback about the current signal presence of the port.	true	The video signal is present.
		false	The video signal is not present.

Example

- ▶ GET /V1/MEDIA/VIDEO/I1.SignalPresent
- ◀ pr /V1/MEDIA/VIDEO/I1.SignalPresent=false

8.6.9. HDCP Setting (Input Port)

HDCP capability can be set on the input ports, thus non-encrypted content can be seen on a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.

Command and Response #hdcp

- ▶ SET·/V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed_hdcp>
- ◀ pw·/V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed_hdcp>

Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The input port reports the HDCP capability.	HDCP 1.4	The input port reports HDCP 1.4 capability.
		HDCP 2.2	The input port reports HDCP 2.2 capability.
		Off	The input port reports non-HDCP compliance.

Example

- ▶ SET /V1/MEDIA/VIDEO/I1/HDCP.AllowedHdcpVersion=HDCP 1.4
- ◀ pw /V1/MEDIA/VIDEO/I1/HDCP.AllowedHdcpVersion=HDCP 1.4

8.6.10. HdcpMode

HDCP capability can be set to Auto/Always on the output ports, thus non-encrypted content can be transmitted to a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

Command and Response #hdcpc

- ▶ SET·/V1/MEDIA/VIDEO/01.HdcpMode=<hdcp_mode>
- ◀ pw·/V1/MEDIA/VIDEO/01.HdcpMode=<hdcp_mode>

Parameters

Parameter	Parameter description	Values	Value description
<hdcp_mode>	HDCP encryption setting on the output port	Auto	The encryption is enabled on the output port if the signal on the input port is encrypted.
		Always	The outgoing signal is HDCP-encrypted.

Example

- ▶ SET /V1/MEDIA/VIDEO/01/HDCP.HdcpMode=Auto
- ◀ pw /V1/MEDIA/VIDEO/01/HDCP.HdcpMode=Auto

8.6.11. OutputSignalType

Command and Response #signaltype

- ▶ SET·/V1/MEDIA/VIDEO/01.OutputSignalType=<signal_type>
- ◀ pw·/V1/MEDIA/VIDEO/01.OutputSignalType=<signal_type>

Parameters

Parameter	Parameter description	Values	Value description
<signal_type>	Signal type setting	Auto	The outgoing signal type is HDMI.
		DVI	The outgoing signal type is DVI.

Example

- ▶ SET /V1/MEDIA/VIDEO/01.OutputSignalType=Auto
- ◀ pw /V1/MEDIA/VIDEO/01.OutputSignalType=Auto

8.6.12. EmbeddedAudioPresent

- ▶ GET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent
- ◀ pr·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent=<embedded_state>

Parameters

Parameter	Parameter description	Values	Value description
<embedded_state>	It shows if the video contains audio or not.	true	There is embedded audio in the video signal.
		false	There is no embedded audio in the video signal.

Example

- ▶ GET /V1/MEDIA/VIDEO/I2.EmbeddedAudioPresent
- ◀ pr /V1/MEDIA/VIDEO/I2.EmbeddedAudioPresent=false

8.6.13. EmbeddedAudioMute

- ▶ SET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute_state>
- ◀ pw·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute_state>

Parameters

Parameter	Parameter description	Values	Value description
<mute_state>	It shows if the embedded audio is muted or not.	true	The embedded audio is muted.
		false	The embedded audio is unmuted.

Example

- ▶ SET /V1/MEDIA/VIDEO/01.EmbeddedAudioMute=false
- ◀ pw /V1/MEDIA/VIDEO/01.EmbeddedAudioMute=false

8.6.14. Output5VMode

The 5V power towards the sink can be enabled or disabled as follows:

Command and Response

- ▶ SET·/V1/MEDIA/VIDEO/01.Output5VMode=<5V_pwr>
- ◀ pw·/V1/MEDIA/VIDEO/01.Output5VMode=<5V_pwr>

Parameters

Parameter	Parameter description	Value	Value description
<5V_pwr>	5V power towards the sink	Auto	5V power is enabled when a sink is connected to the port
		On	Enable 5V power on HDMI port
		Off	Disable 5V power on HDMI port
		Follow signal present	5V power is only enabled if there is active video signal on the port

Example

- ▶ SET /V1/MEDIA/VIDEO/01.Output5VMode=On
- ◀ pw /V1/MEDIA/VIDEO/01.Output5VMode=On

8.6.15. HDCP Capability (Output Port)

HDCP capability of the connected sink device can be queried at each output port. See more information in the [HDCP Management](#) section.

Command and Response #hdcp

- ▶ GET·/V1/MEDIA/VIDEO/01/HDCP/SinkMaxHdcpVersion=<hdcp_ver>
- ◀ pr·/V1/MEDIA/VIDEO/01/HDCP/SinkMaxHdcpVersion=<hdcp_ver>

Parameters

Parameter	Parameter description	Values	Value description
<hdcp_ver>	The HDCP capability is reported from the sink.	N/A	Sink is not connected or the HDCP-capability cannot be determined.
		None	The connected sink is non-HDCP compliant.
		HDCP 1.4	The connected sink supports HDCP 1.4 capability.
		HDCP 2.2	The connected sink supports HDCP 2.2 capability.

Example

- ▶ GET /V1/MEDIA/VIDEO/01/HDCP/SinkMaxHdcpVersion=HDCP 1.4
- ◀ pr /V1/MEDIA/VIDEO/01/HDCP/SinkMaxHdcpVersion=HDCP 1.4

8.6.16. HDCP Setting (Output Port)

The maximum allowed HDCP encryption can be queried at each output port. See more information in the [HDCP Management](#) section.

ATTENTION: HDCP 2.2 signal handling is limited when 3 outputs are available: O1 and O2 ports support up to HDCP 2.2, O3 port supports HDCP 1.4.

Command and Response `#hdcp`

- ▶ GET·/V1/MEDIA/VIDEO/O1/HDCP.AllowedHdcpVersion=<allowed_hdcp>
- ◀ pr·/V1/MEDIA/VIDEO/O1/HDCP.AllowedHdcpVersion=<allowed_hdcp>

Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The maximum allowed HDCP encryption on the output port	HDCP 1.4	HDCP 1.4 is supported.
		HDCP 2.2	HDCP 2.2 and HDCP 1.4 are supported.

Example

- ▶ GET /V1/MEDIA/VIDEO/O1/HDCP/AllowedHdcpVersion=HDCP 1.4
- ◀ pr /V1/MEDIA/VIDEO/O1/HDCP/AllowedHdcpVersion=HDCP 1.4

8.7. Video Port Settings - USB-C Related Commands

8.7.1. Restarting the Link Training

This method is equal to pulling the USB-C connector out and plugging it in again.

Command and Response `#linktraining`

- ▶ CALL·/V1/MEDIA/VIDEO/<in>/DP:restartLinkTraining()
- ◀ m0·/V1/MEDIA/VIDEO/<in>/DP:restartLinkTraining=

Example

- ▶ CALL /V1/MEDIA/VIDEO/I1/DP:restartLinkTraining()
- ◀ m0 /V1/MEDIA/VIDEO/I1/DP:restartLinkTraining=

8.8. CEC Command Sending

The device is able to send Consumer Electronics Control (CEC) commands. This feature is for remote controlling the source or sink device. CEC is a bi-directional communication via the HDMI cable.

ATTENTION: To have a successful CEC command processing, the connected HDMI device must support CEC. `#cec`

8.8.1. Simple CEC Code Sending

This command is for sending simple CEC commands to the connected sink device.

The commands can be sent by the following two formats – defined in the header:

- `text/plain`: hexa strings (as seen in the example)
- `application/octet-stream`: binary data that allows sending a file with the desired codes

Command and Response

- ▶ `CALL /V1/MEDIA/VIDEO/01/CEC:send(<command>)`
- ◀ `m0 /V1/MEDIA/VIDEO/01/CEC:send=OK`

Parameters

Parameter	Parameter description	Values	Value description
<code><command></code> *	Two-digit-long hexa code to control the sink device	<code>446D</code>	Power on
		<code>446C</code>	Power off
		<code>36</code>	Standby
		<code>446901</code>	Select input 1
		<code>446902</code>	Select input 2
		<code>446903</code>	Select input 3

* The supported list of `<commands>` depends on the connected sink device.

INFO: For the full list of commands supported by the DCX switcher, please see the next page.

Example

- ▶ `CALL /V1/MEDIA/VIDEO/01/CEC:send(446D)`
- ◀ `m0 /V1/MEDIA/VIDEO/01/CEC:send=OK`

8.8.2. Remote Control Code Sending

This command is for sending the so-called 'push-button-commands'. There is a range within the CEC commands for this purpose, e.g. volume up/down. With this method one `<command>` is put between the 0x44 and 0x45 opcodes in the background.

Request and Response

- ▶ `CALL /V1/MEDIA/VIDEO/01/CEC:sendUserControlClick(<command>)`
- ◀ `m0 /V1/MEDIA/VIDEO/01/CEC:sendUserControlClick=OK`

Parameters

Parameter	Parameter description	Values	Value description
<code><command></code> *	A hexa code to control the sink device	<code>446D</code>	Power on
		<code>446C</code>	Power off

* The supported list of `<commands>` depends on the connected sink device.

INFO: For the full list of commands supported by the DCX switcher, please see the next page.

Example

- ▶ `CALL /V1/MEDIA/VIDEO/01/CEC:sendUserControlClick(446D)`
- ◀ `m0 /V1/MEDIA/VIDEO/01/CEC:sendUserControlClick=OK`

Command List

Command	Hexa	Binary
Ok	4400	0100010000000000
Up	4401	0100010000000001
Down	4402	0100010000000010
Left	4403	0100010000000011
Right	4404	01000100000000100
Root menu	4409	0100010000001001
Setup menu	440A	0100010000001010
Contents menu	440B	0100010000001011
Favorite menu	440C	0100010000001100
Back	440D	0100010000001101
Media top menu	4410	01000100000010000
Media context menu	4411	01000100000010001
Number 0	4420	0100010000100000
Number 1	4421	0100010000100001
Number 2	4422	0100010000100010
Number 3	4423	0100010000100011
Number 4	4424	0100010000100100
Number 5	4425	0100010000100101
Number 6	4426	0100010000100110
Number 7	4427	0100010000100111
Number 8	4428	0100010000101000
Number 9	4429	0100010000101001
Dot	442A	0100010000101010
Enter	442B	0100010000101011
Clear	442C	0100010000101100
Channel up	4430	0100010000000000
Channel down	4431	0100010000110001
Sound select	4433	0100010000110011
Input select	4434	0100010000110100
Display info	4435	0100010000110101
Page up	4437	0100010000110111
Page down	4438	0100010000111000
Power legacy	4440	0100010001000000
Volume up	4441	0100010001000001
Volume down	4442	0100010001000010
Mute toggle	4443	0100010001000011
Play	4444	0100010001000100
Stop	4445	0100010001000101
Pause	4446	0100010001000110

Command	Hexa	Binary
Record	4447	0100010001000111
Rewind	4448	0100010001001000
Fast forward	4449	0100010001001001
Eject	444A	0100010001001010
Skip forward	444B	0100010001001011
Skip backward	444C	0100010001001100
3D mode	445A	0100010001011010
Stop record	444D	0100010001001101
Play forward	446024	010001000110000000100100
Play reverse	446020	010001000110000000100000
Stop function	4464	0100010001100100
Mute	4465	0100010001100101
Unmute	4466	0100010001100110
Select next media	446800	010001000110100000000000
Select media 1	446801	010001000110100000000001
Select media 2	446802	010001000110100000000010
Select media 3	446803	010001000110100000000011
Select media 4	446804	0100010001101000000000100
Select media 5	446805	0100010001101000000000101
Select next input	446900	010001000110100100000000
Select input 1	446901	010001000110100100000001
Select input 2	446902	010001000110100100000010
Select input 3	446903	010001000110100100000011
Select input 4	446904	0100010001101001000000100
Select input 5	446905	0100010001101001000000101
Power toggle	446B	0100010001101011
Power on	446D	0100010001101101
Power off	446C	0100010001101100
Standby	36	00110110
Image view on	04	00000100
Text view on	0D	00001101
F1	4471	0100010001110001
F2	4472	0100010001110010
F3	4473	0100010001110011
F4	4474	0100010001110100
Clear OSD	6480	0110010010000000
Get CEC version	9F	10011111

8.9. Audio Port Settings

INFO: Audio port numbers may differ depending on the model. For more information, see the [Port Numbering](#) section.

8.9.1. Switching the Audio Input

Command and Response

- ▶ CALL·/V1/MEDIA/AUDIO/XP:switch(<audio_in>:02)
- ◀ m0·/V1/MEDIA/AUDIO/XP:switch=

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I3	Audio input port number

Example

- ▶ CALL /V1/MEDIA/AUDIO/XP:switch(I2:02)
- ◀ m0 /V1/MEDIA/AUDIO/XP:switch=

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

8.9.2. Querying the Connected Source

Command and Response

- ▶ GET·/V1/MEDIA/AUDIO/XP/02.ConnectedSource
- ◀ pw·/V1/MEDIA/AUDIO/XP/02.ConnectedSource=<audio_in>

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I3	Audio input port number

Example

- ▶ GET /V1/MEDIA/AUDIO/XP/02.ConnectedSource
- ◀ pw /V1/MEDIA/AUDIO/XP/02.ConnectedSource=I2

8.9.3. Querying the Connected Destinations

Command and Response

- ▶ GET·/V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations
- ◀ pr·/V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations=

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I3	Audio input port number

Example

- ▶ GET /V1/MEDIA/AUDIO/XP/I3.ConnectedDestinations
- ◀ pr /V1/MEDIA/AUDIO/XP/I3.ConnectedDestinations=

8.9.4. Setting the Autoselect Operation Mode

Command and Response

- ▶ SET·/V1/MEDIA/AUDIO/AUTOSELECT/01.Policy=<op_mode>
- ◀ pw·/V1/MEDIA/AUDIO/AUTOSELECT/01.Policy=<op_mode>

Parameters

Parameter	Parameter description	Values	Value description
<op_mode>	Operation mode	Follow video	Follows the video crosspoint state automatically.
		Off	Autoselect function is disabled.

Example

- ▶ SET /V1/MEDIA/AUDIO/AUTOSELECT/01.Policy=Follow video
- ◀ pw /V1/MEDIA/AUDIO/AUTOSELECT/01.Policy=Follow video

8.9.5. Setting the Followed Video Port to Autoselect

Command and Response

- ▶ SET·/V1/MEDIA/AUDIO/AUTOSELECT/01.VideoFollowPort=<out>
- ◀ pw·/V1/MEDIA/AUDIO/AUTOSELECT/01.VideoFollowPort=<out>

Example

- ▶ SET /V1/MEDIA/AUDIO/AUTOSELECT/01.VideoFollowPort=01
- ◀ pw /V1/MEDIA/AUDIO/AUTOSELECT/01.VideoFollowPort=01

8.9.6. Muting the Audio Port 1.

INFO: Suspends the connection of the chosen port (no signal is forwarded).

Command and Response

- ▶ SET /V1/MEDIA/AUDIO/XP/<audio_port>.Mute=<muted_state>
- ◀ pw /V1/MEDIA/AUDIO/XP/<audio_port>.Mute=<muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	I1-I3	Audio input port number
		O2	Audio output port number
<muted_state>	Muted state	true	The port is muted.
		false	The port is unmuted.

Example

- ▶ SET /V1/MEDIA/AUDIO/XP/I2.Mute=false
- ◀ pw /V1/MEDIA/AUDIO/XP/I2.Mute=false

INFO: All inputs and analog output ports have a mute property in the audio XP (e.g. /V1/MEDIA/AUDIO/XP/I1.Mute). Outputs have a separate mute function within the port node as well:

- /V1/MEDIA/VIDEO/XP/O1.EmbeddedAudioMute
- /V1/MEDIA/AUDIO/O2.Mute

8.9.7. Muting the Audio Port 2.

INFO: The volume of the analog audio output is set to low.

Command and Response

- ▶ SET /V1/MEDIA/AUDIO/O2.Mute=<muted_state>
- ◀ pw /V1/MEDIA/AUDIO/O2.Mute=<muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<muted_state>	Muted state	true	The port is muted.
		false	The port is unmuted.

Example

- ▶ SET /V1/MEDIA/AUDIO/O2.Mute=true
- ◀ pw /V1/MEDIA/AUDIO/O2.Mute=true

8.9.8. Querying the Audio Signal Presence

Command and Response

- ▶ GET /V1/MEDIA/AUDIO/<audio_port>.SignalPresent
- ◀ pr /V1/MEDIA/AUDIO/<audio_port>.SignalPresent=<signal_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	I1-I3 O2	Audio input port number Audio output port number
<signal_state>	Signal presence	true false	The audio signal is present. No audio signal is present.

Example

- ▶ GET /V1/MEDIA/AUDIO/I1.SignalPresent
- ◀ pr /V1/MEDIA/AUDIO/I1.SignalPresent=false

8.9.9. Analog Audio Output Volume (dB) Setting

Command and Response #analogaudio #volume

- ▶ SET /V1/MEDIA/AUDIO/O2.VolumedB=<level>
- ◀ pw /V1/MEDIA/AUDIO/O2.VolumedB=<level>

Parameter

The <level> parameter sets the output volume (attenuation) between -95.62 dB and 0 dB in step of -0.375 dB. The value is rounded up if necessary, to match with the step value.

Example

- ▶ SET /V1/MEDIA/AUDIO/O2.VolumedB=-15
- ◀ pw /V1/MEDIA/AUDIO/O2.VolumedB=-15.00

8.9.10. Analog Audio Output Volume Percent Setting

Command and Response

- ▶ SET /V1/MEDIA/AUDIO/O2.VolumePercent=<percent>
- ◀ pw /V1/MEDIA/AUDIO/O2.VolumePercent=<percent>

Parameters

The <percent> parameter sets the output volume (attenuation) between 100% and 0%, in step of 1%. The value is rounded up if necessary, to match with the step value.

Example

- ▶ SET /V1/MEDIA/AUDIO/O2.VolumePercent=50
- ◀ pw /V1/MEDIA/AUDIO/O2.VolumePercent=50.00

8.9.11. Setting the Balance

Command and Response `#balance`

- ▶ `SET·/V1/MEDIA/AUDIO/O2.Balance=<level>`
- ◀ `pw·/V1/MEDIA/AUDIO/O2.Balance=<level>`

Parameters

The `<level>` parameter sets the balance; -100 means left balance, 100 means right balance, step is 1. Center is 0 (default).

Example

- ▶ `SET /V1/MEDIA/AUDIO/O2.Balance=0`
- ◀ `pw /V1/MEDIA/AUDIO/O2.Balance=0`

8.9.12. Analog Audio Output Level Setting by Steps (dB)

Command and Response `#analogaudio #volume`

- ▶ `CALL·/V1/MEDIA/AUDIO/O2:stepVolumedB(<step>)`
- ◀ `m0·/V1/MEDIA/AUDIO/O2:stepVolumedB=`

Parameters

The volume is increased or decreased with the given `<step>` value in dB.

Example

- ▶ `CALL /V1/MEDIA/AUDIO/O2:stepVolumedB(-1)`
- ◀ `m0 /V1/MEDIA/AUDIO/O2:stepVolumedB=`

The volume is decreased with 1 dB, the current volume is -1.95 dB, which means 77.84% in percent.

8.9.13. Analog Audio Output Level Setting by Steps in Percent

Command and Response

- ▶ `CALL·/V1/MEDIA/AUDIO/O2:stepVolumePercent(<step>)`
- ◀ `m0·/V1/MEDIA/AUDIO/O2:stepVolumePercent=`

Parameters

The volume is increased or decreased by the given `<step>` value in percent.

Example

- ▶ `CALL /V1/MEDIA/AUDIO/O2:stepVolumePercent(5)`
- ◀ `m0 /V1/MEDIA/AUDIO/O2:stepVolumePercent=`

The volume is increased with 5%, the current volume is -1.52 dB, which means 82.84% in percent.

8.9.14. Analog Audio Output Balance Setting by Steps

Command and Response

- ▶ `CALL·/V1/MEDIA/AUDIO/O2:stepBalance(<step>)`
- ◀ `m0·/V1/MEDIA/AUDIO/O2:stepBalance=`

Parameters

The volume is increased or decreased by the given `<step>` value.

Example

- ▶ `CALL /V1/MEDIA/AUDIO/O2:stepBalance(-5)`
- ◀ `m0 /V1/MEDIA/AUDIO/O2:stepBalance=`

8.10. USB Port Settings - USB-C Related Commands

8.10.1. Setting the Displayport Alternate Mode Policy

Command and Response

- ▶ `SET /V1/MEDIA/USB/U1.DpAltModePolicy=<dp_policy>`
- ◀ `pr /V1/MEDIA/USB/U1.DpAltModePolicy=<dp_policy>`

Parameters

Parameter	Parameter description	Values	Value description
<dp_policy>	The preferred video or USB data transmission	Auto	Auto: Taurus offers both operation modes described below. A BYOD device can choose between the two. Neither USB3, nor 4 lane DP Alt mode operation (4K@60) is guaranteed. BYOD devices supporting USB3.x usually choose shared mode: USB3.1 and 2 lane DP.
		Force C	Prefer video: all the four lanes are reserved for video transmission, USB 3.1 data transmission does not operate.
		Force D	Prefer USB 3.1: 2 lanes are reserved for USB 3.1, 2 lanes for video.

Example

- ▶ `SET /V1/MEDIA/USB/U1.DpAltModePolicy=Auto`
- ◀ `pr /V1/MEDIA/USB/U1.DpAltModePolicy=Auto`

ATTENTION: Changing DpAltModePolicy is recommended before connecting a computer to the input.

8.10.2. Querying the Host Alternate Mode Support

Command and Response

- ▶ `GET /V1/MEDIA/USB/U1.HostSupportsDpAltMode`
- ◀ `pr /V1/MEDIA/USB/U1.HostSupportsDpAltMode=<altmode_support>`

Parameters

Parameter	Parameter description	Value	Value description
<altmode_support>		False	The host does not support the alternate mode.
		True	The host supports the alternate mode.

Example

- ▶ `GET /V1/MEDIA/USB/U1.HostSupportsDpAltMode`
- ◀ `pr /V1/MEDIA/USB/U1.HostSupportsDpAltMode=true`

8.10.3. Querying the Status of the Alternate Mode

Command and Response `#dpaltmode #alternatemode #displayportalternatemode`

- ▶ `GET /V1/MEDIA/USB/U1.ActiveAltMode`
- ◀ `pr /V1/MEDIA/USB/U1.ActiveAltMode=<altmode_state>`

Parameters

Parameter	Parameter description	Value	Value description
<altmode_state>		N/A	The host is not connected
		None	DP Alt mode is not active
		DP	DP Alt mode is active.

Example

- ▶ `GET /V1/MEDIA/USB/U1.ActiveAltMode`
- ◀ `pr /V1/MEDIA/USB/U1.ActiveAltMode=DP`

8.10.4. Querying the Port Data Role

Command and Response

- ▶ `GET /V1/MEDIA/USB/U1.ActivePortDataRole`
- ◀ `pr /V1/MEDIA/USB/U1.ActivePortDataRole=<data_role>`

Parameters

Parameter	Parameter description	Values	Value description
<data_role>		N/A	No information about the data role.
		DFP	Downstream Facing Port (usually a Host / HUB ports) The port data role is configured as USB Host. This is for building up the connection (USB data transmission operates after the data role swap)
		UFP	Upstream Facing Port (usually a device)

Example

- ▶ `GET /V1/MEDIA/USB/U1.ActivePortDataRole`
- ◀ `pr /V1/MEDIA/USB/U1.ActivePortDataRole=UFP`

8.10.5. Querying the Port Power Role

Command and Response `#power`

- ▶ `GET /V1/MEDIA/USB/U1.ActivePortPowerRole`
- ◀ `pr /V1/MEDIA/USB/U1.ActivePortPowerRole=<power_role>`

Parameters

Parameter	Parameter description	Values	Value description
<power_role>		N/A	No information about the power role.
		Sink	The port is configured as a sink.
		Source	The port is configured as a source.

Example

- ▶ `GET /V1/MEDIA/USB/U1.ActivePortPowerRole`
- ◀ `pr /V1/MEDIA/USB/U1.ActivePortPowerRole=Source`

8.10.6. Setting the Port Power Role

Command and Response

- ▶ `SET /V1/MEDIA/USB/U1.PortPowerRoleSetting=<power_role>`
- ◀ `pw /V1/MEDIA/USB/U1.PortPowerRoleSetting=<power_role>`

Parameters

Parameter	Parameter description	Values	Value description
<power_role>		Sink	The port is configured as a sink.
		Source	The port is configured as a source.
		Dual Role	The port is configured to be in Dual Power Role mode.

Example

- ▶ `SET /V1/MEDIA/USB/U1.PortPowerRoleSetting=Dual Role`
- ◀ `pw /V1/MEDIA/USB/U1.PortPowerRoleSetting=Dual Role`

8.11. EDID Management

8.11.1. Querying the Emulated EDIDs

Command and Response `#edid`

- ▶ `GET /V1/EDID.EdidStatus`
- ◀ `pr /V1/EDID.EdidStatus=<source>:E1;<source>:E2; <source>:E3`

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDID

Example

- ▶ `GET /V1/EDID.EdidStatus`
- ◀ `pr /V1/EDID.EdidStatus=F89:E1;D1:E2`

Emulated EDID memory for input port is listed with the EDID number that is currently emulated on the input.

8.11.2. Querying the Validity of a Dynamic EDID

Command and Response

- ▶ `GET /V1/EDID/D/D1.Validity`
- ◀ `pr /V1/EDID/D/D1.Validity=<validity>`

Parameters

If the `<validity>` parameter is `true`, the EDID is valid. If the parameter is `false`, the EDID is invalid.

Example

- ▶ `GET /V1/EDID/D/D1.Validity`
- ◀ `pr /V1/EDID/D/D1.Validity=true`

The 'Validity' property is true, valid EDID is stored in D1 memory place.

8.11.3. Querying the Preferred Resolution of a User EDID

Command and Response

- ▶ `GET /V1/EDID/U/<user_edid>.PreferredResolution`
- ◀ `pr /V1/EDID/U/<user_edid>.PreferredResolution=<preferred_resolution>`

Example

- ▶ `GET /V1/EDID/U/U2.PreferredResolution`
- ◀ `pr /V1/EDID/U/U2.PreferredResolution=1920x1080p60.00Hz`

INFO: Use the `Manufacturer` and `MonitorName` properties to query further information.

8.11.4. Emulating an EDID to an Input Port

Command and Response

- ▶ CALL·/V1/EDID:switch(<source>:<destination>)
- ◀ m0·/V1/EDID:switch

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDID
<destination>	The emulated EDID memory of the desired input port	U1-U100	User EDIDs

Example

- ▶ CALL /V1/EDID:switch(F49:E2)
- ◀ m0 /V1/EDID:switch

8.11.5. Emulating an EDID to All Input Ports

Command and Response

- ▶ CALL·/V1/EDID:switchAll(<source>)
- ◀ m0·/V1/EDID:switchAll

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDID

Example

- ▶ CALL /V1/EDID:switchAll(F47)
- ◀ m0 /V1/EDID:switchAll

8.11.6. Copying an EDID to User Memory

Command and Response

- ▶ CALL·/V1/EDID:copy(<source>:<destination>)
- ◀ m0·/V1/EDID:copy

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F159	Factory EDIDs
		U1-U100	User EDIDs
		D1	Dynamic EDID
<destination>	The emulated EDID memory of the desired input port	U1-U100	User EDIDs

Example

- ▶ CALL /V1/EDID:copy(F1:U2)
- ◀ m0 /V1/EDID:copy

8.11.7. Deleting an EDID from User Memory

Command and Response

- ▶ CALL·/V1/EDID:delete(<user_edid>)
- ◀ m0·/V1/EDID:delete

Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The emulated EDID memory of the desired input port.	U1-U100	User EDIDs

Example

- ▶ CALL /V1/EDID:delete(U2)
- ◀ m0 /V1/EDID:delete

8.11.8. Resetting the Emulated EDIDs

Command and Response

- ▶ CALL·/V1/EDID:reset()
- ◀ m0·/V1/EDID:reset

Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The emulated EDID memory of the desired input port.	U1-U100	User EDIDs

Example

- ▶ CALL /V1/EDID:reset()
- ◀ m0 /V1/EDID:reset

Calling this method switches all emulated EDIDs to a factory default one. See the table in the [Factory EDID List](#) section.

8.12. Ethernet Port Configuration

8.12.1. Setting the DHCP State

ATTENTION: When you change a network property, the new value is stored, but the **applySettings** method must always be called to apply the new settings. When two or more network parameters are changed, the **applySettings** method is enough to be called once as a final step; it will reboot the device.

Command and Response #dhcp #network #ipaddress

- ▶ SET·/V1/MANAGEMENT-NETWORK.DhcpEnabled=<dhcp_status>
- ◀ pw·/V1/MANAGEMENT-NETWORK.DhcpEnabled=<dhcp_status>

Parameters

If the <dhcp_status> parameter is **true**, the current IP address setting is DHCP; if the parameter is **false**, the current IP address is static.

Example

- ▶ SET /V1/MANAGEMENT-NETWORK.DhcpEnabled=true
- ◀ pw /V1/MANAGEMENT-NETWORK.DhcpEnabled=true
- ▶ CALL /V1/MANAGEMENT-NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT-NETWORK:applySettings

INFO: The **applySettings** method will save and apply the new value, and it will reboot the device.

INFO: The current setting can be queried by using the **GET Command**.

8.12.2. Changing the IP Address (Static)

Command and Response

- ▶ SET·/V1/MANAGEMENT-NETWORK.StaticIpAddress=<IP_address>
- ◀ pw·/V1/MANAGEMENT-NETWORK.StaticIpAddress=<IP_address>

Example

- ▶ SET /V1/MANAGEMENT-NETWORK.StaticIpAddress=192.168.0.85
- ◀ pw /V1/MANAGEMENT-NETWORK.StaticIpAddress=192.168.0.85
- ▶ CALL /V1/MANAGEMENT-NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT-NETWORK:applySettings

INFO: The **applySettings** method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the **GET Command**.

8.12.3. Changing the Subnet Mask (Static)

Command and Response `#ipaddress`

- ▶ `SET /V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>`
- ◀ `pw /V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>`

Example

▶ `SET /V1/MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0`

◀ `pw /V1/MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0`

▶ `CALL /V1/MANAGEMENT/NETWORK:applySettings()`

◀ `m0 /V1/MANAGEMENT/NETWORK:applySettings`

INFO: The `applySettings` method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the [GET Command](#).

8.12.4. Changing the Gateway Address (Static)

Command and Response

- ▶ `SET /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>`
- ◀ `pw /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>`

Example

▶ `SET /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5`

◀ `pw /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5`

▶ `CALL /V1/MANAGEMENT/NETWORK:applySettings()`

◀ `m0 /V1/MANAGEMENT/NETWORK:applySettings`

INFO: The `applySettings` method will save and apply the new value, and it will reboot the device.

INFO: The current setting can be queried by using the [GET Command](#).

8.12.5. Applying the Network Settings

Command and Response

- ▶ `CALL /V1/MANAGEMENT/NETWORK:applySettings()`
- ◀ `m0 /V1/MANAGEMENT/NETWORK:applySettings`

Example

▶ `CALL /V1/MANAGEMENT/NETWORK:applySettings()`

◀ `m0 /V1/MANAGEMENT/NETWORK:applySettings`

All network settings that were changed are applied and network interface restarts.

8.12.6. Setting the Host Name

The host name is a property that can be used instead of the IP address when connecting to the device. It is also suitable for finding the device in the Device Discovery window of the LDC, see more details in the [Add New Favorite Device](#) section. If the IP address of the device is changing, the host name can be used as a fixed property.

Restarting HTTP(S) Services is required after the host name changed. A new certificate is generated after modifying the host name.

Command and Response

- ▶ `SET /V1/MANAGEMENT/NETWORK.HostName=<unique_name>`
- ◀ `pw /V1/MANAGEMENT/NETWORK.HostName=<unique_name>`

Parameters

The `<unique_name>` can be 1-64 character(s) long, and the following are allowed for naming: the elements of the English alphabet and numbers. Hyphen (-) is also accepted, except as last character.

DIFFERENCE: Prior to firmware version v2.2.3b4, a bug may occur if the first character of the host name is a number, which causes the device to revert to factory default settings upon reboot. From firmware version v2.2.3b4, this is fixed.

Example

- ▶ `SET /V1/MANAGEMENT/NETWORK.HostName=room-switcher`
- ◀ `pw /V1/MANAGEMENT/NETWORK.HostName=room-switcher`

8.13. Network Security

INFO: Ethernet port numbers may differ depending on the model. For more information, see the [Port Numbering](#) section.

8.13.1. Enabling/Disabling the Ethernet Port

Command and Response

- ▶ SET·/V1/MEDIA/ETHERNET/<ethernet_port>.Enabled=<status>
- ◀ pw·/V1/MEDIA/ETHERNET/<ethernet_port>.Enabled=<status>

Parameters

Parameter	Parameter description	Values	Value description
<ethernet_port>	Ethernet port number	P1-P3	
		true	The port is enabled.
		false	The port is disabled.

Example

- ▶ SET /V1/MEDIA/ETHERNET/P3.Enabled=true
- ◀ pw /V1/MEDIA/ETHERNET/P3.Enabled=true

8.13.2. Querying the Service Port Number

Command and Response

- ▶ GET·/V1/ MANAGEMENT/NETWORK/SERVICES/<port>.Port
- ◀ pr·/V1/ MANAGEMENT/NETWORK/SERVICES/<port>.Port=<port_num>

Parameters

Parameter	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS LW3 UART1
<port_num>	Port number	80 443 6107 8001

Example

- ▶ GET /V1/ MANAGEMENT/NETWORK/SERVICES/HTTP.Port
- ◀ pr /V1/ MANAGEMENT/NETWORK/SERVICES/HTTP.Port=80

8.13.3. Enabling/Disabling the Service Port

Command and Response #http #https

- ▶ SET·/V1/ MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>
- ◀ pw·/V1/ MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>

Parameters

Parameter	Parameter description	Values	Value description
<port>	Port type	HTTP HTTPS	
<status>		true false	The port is enabled. The port is disabled.

Example

- ▶ SET /V1/ MANAGEMENT/NETWORK/SERVICES/HTTP.Enabled=true
- ◀ pw /V1/ MANAGEMENT/NETWORK/SERVICES/HTTPEnabled=true

8.13.4. Querying the Username for Authentication

INFO: DCX series deal with one user for authentication and the username (admin) can not be changed.

Command and Response

- ▶ GET·/V1/ MANAGEMENT/NETWORK/AUTH/USER1.Name
- ◀ pr·/V1/ MANAGEMENT/NETWORK/AUTH/USER1.Name=admin

Example

- ▶ GET /V1/ MANAGEMENT/NETWORK/AUTH/USER1.Name
- ◀ pr /V1/ MANAGEMENT/NETWORK/AUTH/USER1.Name=admin

8.13.5. Setting a Password for Authentication

DIFFERENCE: Password setting is only available through REST API.

8.13.6. Enabling the Authentication

INFO: Set the password before enabling the authentication, because no password is set by default.

Command and Response

- ▶ SET /V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- ◀ pw /V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

Parameters

Parameter	Parameter description	Values	Value description
<port>	Port type	HTTP HTTPS	
<status>		true	The authentication is enabled.
		false	The authentication is disabled.

Example

- ▶ SET /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.AuthenticationEnabled=true
- ◀ pw /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.AuthenticationEnabled=true
- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

INFO: Restart HTTP(S) Services is required after the authentication settings changed.

8.13.7. Restarting the Network Services

Command and Response #http #https

- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart=

Parameters

Parameter	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS

Example

- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

8.14. Advanced Ethernet Security

8.14.1. Setting the VLAN Membership

DIFFERENCE: This command is available from firmware package v2.9.0.

ATTENTION: Changing the VLAN membership of the Control Ethernet port will cause loss of the connection to the device. Please make sure you are changing the correct settings.

With this command the Ethernet ports can be arranged into separate networks in any setup desired.

Command and Response

- ▶ SET /V1/MEDIA/ETHERNET/<port_number>.VlanMembership=<vlan_membership>
- ◀ pw /V1/MEDIA/ETHERNET/<port_number>.VlanMembership=<vlan_membership>

Parameters

Parameter	Parameter description	Values	Value description
<vlan_membership>	VLAN membership number	1-8	The ports with the same membership number are part of the same network.

Example

- ▶ SET /V1/MEDIA/ETHERNET/P3.VlanMembership=3
- ◀ pw /V1/MEDIA/ETHERNET/P3.VlanMembership=3

8.14.2. Setting the VLAN ID

You can create separate networks by setting different VLAN IDs for the Ethernet ports. You can create any number of setups for limiting access to the corporate or management network or providing separate networks for each user. Default VLAN ID is 1 for all of the ports.

DIFFERENCE: From FW version v2.20.0, VLAN ID 2000 is reserved for the Room LAN.

Command and Response

- ▶ SET /V1/MEDIA/ETHERNET/<port>.VlanMembership=<vlan_id>
- ◀ pw /V1/MEDIA/ETHERNET/<port>.VlanMembership=<vlan_id>

Example

- ▶ SET /V1/MEDIA/ETHERNET/P1.VlanMembership=2
- ◀ pw /V1/MEDIA/ETHERNET/P1.VlanMembership=2

Enabling the Room LAN on an Ethernet Port

Request and Response

- ▶ SET /V1/MEDIA/ETHERNET/<port>.VlanMembership=2000
- ◀ pw /V1/MEDIA/ETHERNET/<port>.VlanMembership=2000

Example

- ▶ SET /V1/MEDIA/ETHERNET/P1.VlanMembership=2000
- ◀ pw /V1/MEDIA/ETHERNET/P1.VlanMembership=2000

8.14.3. Setting the Static IP Address for the Room LAN

In case there is no DHCP server on the Room LAN, a static IP address is needed to be set before enabling the function, so that it remains available.

Request and Response

- ▶ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC.
ConfiguredIpAddress=<static_management_ip>
- ◀ pw /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC.
ConfiguredIpAddress=<static_management_ip>

Example

- ▶ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC.
ConfiguredIpAddress=10.10.128.1
- ◀ pw /EXPERIMENTAL/MANAGEMENT/NETWORK/INTERFACES/ROOM/IPv4/STATIC.
ConfiguredIpAddress=10.10.128.1

8.14.4. Setting the Gateway for Static IP on the Room LAN

Request and Response

- ▶ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC.
ConfiguredGatewayAddress=<static_management_gateway>
- ◀ pw /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC.
ConfiguredGatewayAddress=<static_management_gateway>

Example

- ▶ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC.
ConfiguredGatewayAddress=10.10.128.1
- ◀ pw /EXPERIMENTAL/MANAGEMENT/NETWORK/INTERFACES/ROOM/IPv4/STATIC.
ConfiguredGatewayAddress=10.10.128.1

8.15. Serial Port Configuration

DIFFERENCE: Only the DCX-3x1-HC20 model has a serial port.

8.15.1. BAUD Rate Setting

Command and Response #rs-232 #rs232

- ▶ SET /V1/MEDIA/SERIAL/P1.Baudrate=<baudrate>
- ◀ pw /V1/MEDIA/SERIAL/P1.Baudrate=<baudrate>

Parameters

Identifier	Parameter description	Parameter values
<baudrate>	Baud rate value	9600 19200 38400 57600 115200

Example

- ▶ SET /V1/MEDIA/SERIAL/P1.Baudrate=19200
- ◀ pw /V1/MEDIA/SERIAL/P1.Baudrate=19200

8.15.2. Stop Bits Setting

Command and Response #rs-232 #rs232

- ▶ SET /V1/MEDIA/SERIAL/P1.StopBits=<stopbits>
- ◀ pw /V1/MEDIA/SERIAL/P1.StopBits=<stopbits>

Parameters

Identifier	Parameter description	Parameter values
<stopbits>	Stop bit value	1 2

Example

- ▶ SET /V1/MEDIA/SERIAL/P1.StopBits=1
- ◀ pw /V1/MEDIA/SERIAL/P1.StopBits=1

8.15.3. Querying the Data Bits

Command and Response #rs-232 #rs232

- ▶ GET·/V1/MEDIA/SERIAL/P1.DataBits
- ◀ pr·/V1/MEDIA/SERIAL/P1.DataBits=<.databits>

Parameters

Identifier	Parameter description	Parameter values
<databits>	DataBits value	8 9

Example

- ▶ GET /V1/MEDIA/SERIAL/P1.DataBits
- ◀ pr /V1/MEDIA/SERIAL/P1.DataBits=8

8.15.4. Parity Setting

Command and Response #rs-232 #rs232

- ▶ SET·/V1/MEDIA/SERIAL/P1.Parity=<parity>
- ◀ pw·/V1/MEDIA/SERIAL/P1.Parity=<parity>

Parameters

Identifier	Parameter description	Parameter values
<parity>	Parity value	None Odd Even

Example

- ▶ SET /V1/MEDIA/SERIAL/P1.Parity=None
- ◀ pw /V1/MEDIA/SERIAL/P1.Parity=None

8.16. Sending a Message via RS-232

ATTENTION: Serial message sending is implemented only via Lightware REST API. This function is not available with LW3 protocol command. For more details, see [Serial Port Messaging](#).

8.17. GPIO Port Configuration

8.17.1. Querying the Direction of a GPIO Pin

Command and Response #gpio

- ▶ GET·/V1/MEDIA/GPIO/<port>.Direction
- ◀ pw·/V1/MEDIA/GPIO/<port>.Direction(<dir>)

Parameters

Parameter	Parameter description	Value	Value description
<dir>	The direction of the GPIO pin.	Input	input
		Output	output

Example

- ▶ GET /V1/MEDIA/GPIO/P1.Direction
- ◀ pw /V1/MEDIA/GPIO/P1.Direction=Input

8.17.2. Setting the Direction of a GPIO Pin

Command and Response

- ▶ SET·/V1/MEDIA/GPIO/<port>.Direction(<dir>)
- ◀ pw·/V1/MEDIA/GPIO/<port>.Direction(<dir>)

Parameters

See the previous section.

Example

- ▶ SET /V1/MEDIA/GPIO/P1.Direction=Input
- ◀ pw /V1/MEDIA/GPIO/P1.Direction=Input

8.17.3. Querying the Output Level of a GPIO Pin

Command and Response

- ▶ GET·/V1/MEDIA/GPIO/<port>.Output
- ◀ pw·/V1/MEDIA/GPIO/<port>.Output(<value>)

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	High	high level
		Low	low level

Example

- ▶ GET /V1/MEDIA/GPIO/P1.Output
- ◀ pw /V1/MEDIA/GPIO/P1.Output=Low

8.17.4. Setting the Output Level of a GPIO Pin

Command and Response

- ▶ SET·/V1/MEDIA/GPIO/<port>.Output(<value>)
- ◀ pw·/V1/MEDIA/GPIO/<port>.Output(<value>)

Parameters

See the previous section.

Example

- ▶ SET /V1/MEDIA/GPIO/P1.Output=High
- ◀ pw /V1/MEDIA/GPIO/P1.Output=High

8.17.5. Setting the Output Level for a Specified Time

Command and Response

- ▶ CALL·/V1/MEDIA/GPIO/<port>:interval(<value>;<time>)
- ◀ m0·/V1/MEDIA/GPIO/<port>:interval=

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	High	high level
		Low	low level
<time>	Duration of the desired value in seconds.	1-120	second(s)

Example

- ▶ CALL /V1/MEDIA/GPIO/P1:interval(Low;1)
- ◀ m0 /V1/MEDIA/GPIO/P1:interval=

8.17.6. Toggling the Level of a GPIO Pin

The output level can be changed from high to low and from low to high by the command below.

Command and Response

- ▶ CALL·/V1/MEDIA/GPIO/<port>:toggle()
- ◀ m0·/V1/MEDIA/GPIO/<port>:toggle

Example

- ▶ CALL /V1/MEDIA/GPIO/P1:toggle()
- ◀ m0 /V1/MEDIA/GPIO/P1:toggle

8.18. OCS Port Configuration

8.18.1. Querying the Input Level of an OCS Pin

Command and Response #ocs

- ▶ GET·/V1/MEDIA/OCS/P1.InputLevel
- ◀ pr·/V1/MEDIA/OCS/P1.InputLevel=<value>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The input value of the OCS pin.	High	high level
		Low	low level

Example

- ▶ GET /V1/MEDIA/OCS/P1.InputLevel
- ◀ pr /V1/MEDIA/OCS/P1.InputLevel=Low

8.18.2. Setting the Sensor Type

Command and Response

- ▶ SET·/V1/MEDIA/OCS/P1.SensorType=<sensor_type>
- ◀ pw·/V1/MEDIA/OCS/P1.SensorType=<sensor_type>

Parameters

Parameter	Parameter description	Value	Value description
<sensor_type>	It defines whether the low or high input level means the occupancy.	Active low	Occupancy status is 'Occupied' when the input level is low.
		Active high	Occupancy status is 'Occupied' when the input level is high (default value).

Example

- ▶ SET /V1/MEDIA/OCS/P1.SensorType=Active low
- ◀ pw /V1/MEDIA/OCS/P1.SensorType=Active low

8.18.3. Querying the Reported OCS State

Command and Response

- ▶ GET·/V1/MEDIA/OCS/P1.State
- ◀ pr·/V1/MEDIA/OCS/P1.State=<status>

Parameters

Parameter	Parameter description	Value	Value description
<status>	It reports the occupancy state of the room depending on the sensor type.	Free	When the SensorType=Active high and the Inputlevel=Low or when SensorType=Active low and Inputlevel=High
		Occupied	When the SensorType=Active high and the Inputlevel=High or when SensorType=Active low and Inputlevel=Low

Example

- ▶ GET /V1/MEDIA/OCS/P1.State
- ◀ pr /V1/MEDIA/OCS/P1.State=Free

8.19. LW3 Commands - Quick Summary

System Commands

Setting the Device Label

- ▶ `SET·/V1/MANAGEMENT/LABEL.DeviceLabel=<custom_name>`

Resetting the Device

- ▶ `CALL·/V1/SYS:restart()`

Restoring the Factory Default Settings

- ▶ `CALL·/V1/SYS:factoryDefaults()`

Querying the Firmware Package Version

- ▶ `GET·/V1/MANAGEMENT/UID/PACKAGE.Version`

Control Lock

- ▶ `SET·/V1/MANAGEMENT/UI.ControlLock=<lock_status>`

Setting the Current Time

- ▶ `CALL·/V1/MANAGEMENT/DATETIME:setTime(<current_time>)`

Identifying the Device

- ▶ `CALL /V1/MANAGEMENT/UI:identifyMe()`

Toggling the Dark Mode Setting

- ▶ `SET·/V1/MANAGEMENT/UI/DARKMODE.Enable=<mode_state>`

Setting the Delay of the Dark Mode Setting

- ▶ `SET·/V1/MANAGEMENT/UI/DARKMODE.Delay=<delay_time>`

Enabling Remote System Logging

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.Enabled=<status>`

Setting the Remote Server Address

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.ServerAddress=<server_address>`

Setting the Protocol for the Remote System Logging

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.Protocol=<protocol>`

Setting the Format of the Remote System Logging

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=<format>`

Setting the Port for Remote System Logging

- ▶ `SET /V1/MANAGEMENT/LOG/REMOTE.PortNumber=<port_number>`

Video Port Settings - General

Switching Video Input

- ▶ `CALL·/V1/MEDIA/VIDEO/XP:switch(<in>:01)`

Locking the Video Port

- ▶ `SET·/V1/MEDIA/VIDEO/XP/<port>.Lock=<locked_state>`

Muting the Video Port

- ▶ `SET·/V1/MEDIA/VIDEO/XP/<port>.Mute=<muted_state>`

Setting the Autoselect Policy

- ▶ `SET·/V1/MEDIA/VIDEO/AUTOSELECT/01.Policy=<autoselect_mode>`

Changing the Autoselect Included Input Ports

- ▶ `SET·/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>.Included=<state>`

Changing the Input Port Priority

- ▶ `SET·/V1/MEDIA/VIDEO/AUTOSELECT/01/<in>.Priority=<prio_num>`

Querying the Connected Source

- ▶ `GET·/V1/MEDIA/VIDEO/XP/01.ConnectedSource`

Querying the Video Signal Presence

- ▶ `GET·/V1/MEDIA/VIDEO/<port>.SignalPresent`

HDCP Setting (Input Port)

- ▶ `SET·/V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed_hdcp>`

HdcpMode

- ▶ `SET·/V1/MEDIA/VIDEO/01.HdcpMode=<hdcp_mode>`

OutputSignalType

- ▶ `SET·/V1/MEDIA/VIDEO/01.OutputSignalType=<signal_type>`

EmbeddedAudioPresent

- ▶ `GET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent`

EmbeddedAudioMute

- ▶ `SET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute_state>`

Output5VMode

- ▶ `SET·/V1/MEDIA/VIDEO/01.Output5VMode=<5V_pwr>`

HDCP Capability (Output Port)

- ▶ `GET·/V1/MEDIA/VIDEO/01/HDCP/SinkMaxHdcpVersion=<hdcp_ver>`

HDCP Setting (Output Port)

- ▶ `GET·/V1/MEDIA/VIDEO/01/HDCP.AllowedHdcpVersion=<allowed_hdcp>`

Video Port Settings - USB-C Related Commands

Restarting the Link Training

- ▶ CALL·/V1/MEDIA/VIDEO/<in>/DP:restartLinkTraining()

CEC Command Sending

Simple CEC Code Sending

- ▶ CALL /V1/MEDIA/VIDEO/01/CEC:send(<command>)

Remote Control Code Sending

- ▶ CALL·/V1/MEDIA/VIDEO/01/CEC:sendUserControlClick(<command>)

Audio Port Settings

Switching the Audio Input

- ▶ CALL·/V1/MEDIA/AUDIO/XP:switch(<audio_in>:02)

Querying the Connected Source

- ▶ GET·/V1/MEDIA/AUDIO/XP/02.ConnectedSource

Querying the Connected Destinations

- ▶ GET·/V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations

Setting the Autoselect Operation Mode

- ▶ SET·/V1/MEDIA/AUDIO/AUTOSELECT/01.Policy=<op_mode>

Setting the Followed Video Port to Autoselect

- ▶ SET·/V1/MEDIA/AUDIO/AUTOSELECT/01.VideoFollowPort=<out>

Muting the Audio Port 1.

- ▶ SET·/V1/MEDIA/AUDIO/XP/<audio_port>.Mute=<muted_state>

Muting the Audio Port 2.

- ▶ SET·/V1/MEDIA/AUDIO/02.Mute=<muted_state>

Querying the Audio Signal Presence

- ▶ GET·/V1/MEDIA/AUDIO/<audio_port>.SignalPresent

Analog Audio Output Volume (dB) Setting

- ▶ SET·/V1/MEDIA/AUDIO/02.VolumedB=<level>

Analog Audio Output Volume Percent Setting

- ▶ SET·/V1/MEDIA/AUDIO/02.VolumePercent=<percent>

Setting the Balance

- ▶ SET·/V1/MEDIA/AUDIO/02.Balance=<level>

Analog Audio Output Level Setting by Steps (dB)

- ▶ CALL·/V1/MEDIA/AUDIO/02:stepVolumedB(<step>)

Analog Audio Output Level Setting by Steps in Percent

- ▶ CALL·/V1/MEDIA/AUDIO/02:stepVolumePercent(<step>)

Analog Audio Output Balance Setting by Steps

- ▶ CALL·/V1/MEDIA/AUDIO/02:stepBalance(<step>)

USB Port Settings - USB-C Related Commands

Setting the Displayport Alternate Mode Policy

- ▶ SET·/V1/MEDIA/USB/U1.DpAltModePolicy=<dp_policy>

Querying the Host Alternate Mode Support

- ▶ GET·/V1/MEDIA/USB/U1.HostSupportsDpAltMode

Querying the Status of the Alternate Mode

- ▶ GET·/V1/MEDIA/USB/U1.ActiveAltMode

Querying the Port Data Role

- ▶ GET·/V1/MEDIA/USB/U1.ActivePortDataRole

Querying the Port Power Role

- ▶ GET·/V1/MEDIA/USB/U1.ActivePortPowerRole

Setting the Port Power Role

- ▶ SET·/V1/MEDIA/USB/U1.PortPowerRoleSetting=<power_role>

EDID Management

Querying the Emulated EDIDs

- ▶ GET·/V1/EDID.EdidStatus

Querying the Validity of a Dynamic EDID

- ▶ GET·/V1/EDID/D/D1.Validity

Querying the Preferred Resolution of a User EDID

- ▶ GET·/V1/EDID/U/<user_edid>.PreferredResolution

Emulating an EDID to an Input Port

- ▶ CALL·/V1/EDID:switch(<source>:<destination>)

Emulating an EDID to All Input Ports

- ▶ CALL·/V1/EDID:switchAll(<source>)

Copying an EDID to User Memory

- ▶ CALL·/V1/EDID:copy(<source>:<destination>)

Deleting an EDID from User Memory

- ▶ CALL·/V1/EDID:delete(<user_edid>)

Resetting the Emulated EDIDs

- ▶ CALL·/V1/EDID:reset()

Ethernet Port Configuration**Setting the DHCP State**

- ▶ SET·/V1/MANAGEMENT/NETWORK.DhcpEnabled=<dhcp_status>

Changing the IP Address (Static)

- ▶ SET·/V1/MANAGEMENT/NETWORK.StaticIpAddress=<IP_address>

Changing the Subnet Mask (Static)

- ▶ SET·/V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>

Changing the Gateway Address (Static)

- ▶ SET·/V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>

Applying the Network Settings

- ▶ CALL·/V1/MANAGEMENT/NETWORK:applySettings()

Setting the Host Name

- ▶ SET·/V1/MANAGEMENT/NETWORK.HostName=<unique_name>

Network Security**Enabling/Disabling the Ethernet Port**

- ▶ SET·/V1/MEDIA/ETHERNET/<ethernet_port>.Enabled=<status>

Querying the Service Port Number

- ▶ GET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Port

Enabling/Disabling the Service Port

- ▶ SET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>

Querying the Username for Authentication

- ▶ GET·/V1/MANAGEMENT/NETWORK/AUTH/USER1.Name

Enabling the Authentication

- ▶ SET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- ▶ CALL·/V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()

Restarting the Network Services

- ▶ CALL·/V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart()

Advanced Ethernet Security**Setting the VLAN Membership**

- ▶ SET·/V1/MEDIA/ETHERNET/<port_number>.VlanMembership=<vlan_membership>

Setting the VLAN ID

- ▶ SET /V1/MEDIA/ETHERNET/<port>.VlanMembership=<vlan_id>
- ▶ SET /V1/MEDIA/ETHERNET/<port>.VlanMembership=2000

Setting the Static IP Address for the Room LAN

- ▶ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC. ConfiguredIpAddress=<static_management_ip>

Setting the Gateway for Static IP on the Room LAN

- ▶ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/ROOM/IPv4/STATIC. ConfiguredGatewayAddress=<static_management_gateway>

Serial Port Configuration**BAUD Rate Setting**

- ▶ SET·/V1/MEDIA/SERIAL/P1.Baudrate=<baudrate>

Stop Bits Setting

- ▶ SET·/V1/MEDIA/SERIAL/P1.StopBits=<stopbits>

Querying the Data Bits

- ▶ GET·/V1/MEDIA/SERIAL/P1.DataBits

Parity Setting

- ▶ SET·/V1/MEDIA/SERIAL/P1.Parity=<parity>

GPIO Port Configuration**Querying the Direction of a GPIO Pin**

- ▶ GET·/V1/MEDIA/GPIO/<port>.Direction

Setting the Direction of a GPIO Pin

- ▶ SET·/V1/MEDIA/GPIO/<port>.Direction(<dir>)

Querying the Output Level of a GPIO Pin

- ▶ GET·/V1/MEDIA/GPIO/<port>.Output

Setting the Output Level of a GPIO Pin

- ▶ SET·/V1/MEDIA/GPIO/<port>.Output(<value>)

Setting the Output Level for a Specified Time

- ▶ CALL·/V1/MEDIA/GPIO/<port>:interval(<value>);<time>)

Toggling the Level of a GPIO Pin

- ▶ CALL·/V1/MEDIA/GPIO/<port>:toggle()

OCS Port Configuration

Querying the Input Level of an OCS Pin

- ▶ GET·/V1/MEDIA/OCS/P1.InputLevel

Setting the Sensor Type

- ▶ SET·/V1/MEDIA/OCS/P1.SensorType=<sensor_type>

Querying the Reported OCS State

- ▶ GET·/V1/MEDIA/OCS/P1.State

9

Firmware Update

This chapter is meant to help customers perform firmware updates on our products by giving a few tips on how to start and by explaining the features of the Lightware Device Updater v2 (LDU2) software. The latest software and firmware pack can be downloaded from www.lightware.com.

▶ Introduction	147
▶ Preparation	147
▶ Running the Software	148
▶ Updating Via GUI	149
▶ Command Line Interface (CLI)	151
▶ CLI Commands	151
▶ Updating via REST API	155
▶ If the Update is not successful	155

ATTENTION: While the firmware is being updated, the normal operation mode is suspended, as the transmitter is switched to bootload mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the device and restart the process.

9.1. Introduction

Lightware Device Updater v2 (LDU2) software is the second generation of the LFP-based (Lightware Firmware Package) firmware update process.



LDU2

9.2. Preparation

Most Lightware devices can be controlled over several interfaces (e.g. Ethernet, USB, RS-232). But the firmware can be updated usually over one dedicated interface, which is the Ethernet in most cases.

If you want to update the firmware of one or more devices, you need the following:

- **LFP2 file**,
- **LDU2 software** installed on your PC or Mac.

Both can be downloaded from www.lightware.com.

Optionally, you can download the **release notes** file in HTML format.

9.2.1. About the Firmware Package (LFP2 File)

All the necessary tools and binary files are packed into the LFP2 package file. You only need this file to do the update on your device.

- This allows the use of the same LFP2 package for different devices.
- The package contains all the necessary components, binary, and other files.
- The release notes is included in the LFP2 file, which is displayed in the window where you select the firmware package file in LDU2.

INFO: The size of the LFP2 file is more than 200 MB due to the components of the package. That is not a fault: Taurus runs embedded Linux inside that is necessary for the complex functions and features of the device.

9.2.2. LDU2 Installation

ATTENTION: Minimum system requirement: 2 GB RAM. The minimum display resolution is 1600x900.

INFO: The Windows and the Mac applications have the same look and functionality.

Download the software from www.lightware.com.

Installation in case of Windows OS

Run the installer. If the User Account Control displays a pop-up message, click **Yes**.



Installation Modes

Normal install	Snapshot install
Available for Windows, MacOS and Linux	Available for Windows
The installer can update only this instance	Cannot be updated
One updateable instance may exist for all users	Many different versions can be installed for all users

ATTENTION: Using the default Normal install is highly recommended.

INFO: If you have a previously installed version, you will be prompted to remove the old version before installing the new one.

Installation in case of macOS

Mount the DMG file by double clicking on it, and drag the LDU2 icon over the Applications icon to copy the program into the Applications folder. If you want to copy LDU2 into another location, just drag the icon over the desired folder.



ATTENTION: Please check the firewall settings on the macOS device. LDC needs to be added to the exceptions of the blocked software for the proper operation.

INFO: This type of installer is equal to the **Normal install** of Windows.

Installation in case of Linux

Step 1. Download the **archive file** (tar.gz) from www.lightware.com and unpack it to a temp folder.

Step 2. Run the **install_ldu2.sh** file in the temp folder. The script will install LDU2 into the following folder: HOME/.local/share/lightware/ldu2.

Step 3. The folder above will contain this file: **LightwareDeviceUpdaterV2.sh**, which can be used to start LDU2.




9.3. Running the Software

You have two options:

- Starting the LDU2 by double-clicking on the shortcut/program file, or
- Double-clicking on an **LFP2 file**.


LDU2 Auto-Update

At startup, the software checks if a newer version is available on the web.

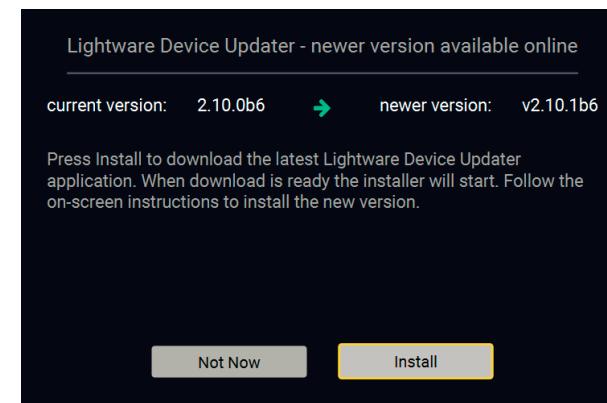

Main Screen

When the software is started by the shortcut, the device discovery screen appears. Press the **Discover devices** button to start finding the Lightware devices:

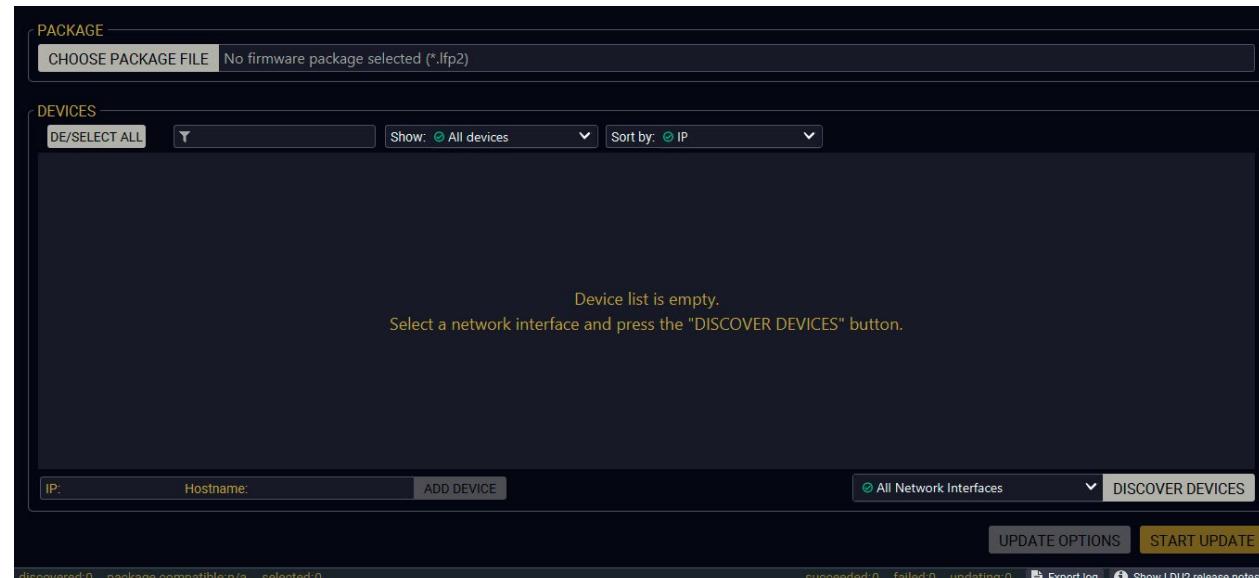

Devices may also be added manually by typing the IP address in the box near the bottom of the screen. From LDU2 version v2.16.1, manual addition of devices can also be done using the host name.


ATTENTION: If the device cannot be added by the host name, please use the IP address.

If you start the software by double-clicking on the LFP2 file, the firmware will be loaded. Press the **Search for devices** button; all the devices will be listed that are compatible with the selected firmware pack.

INFO: If you press the **Choose package file** button, the release notes of the LFP2 file will be displayed in the right panel; see the [Step 1. Select the Firmware Package](#) section.

Device List

When the discovery has completed, the devices available on the network are listed in the application.

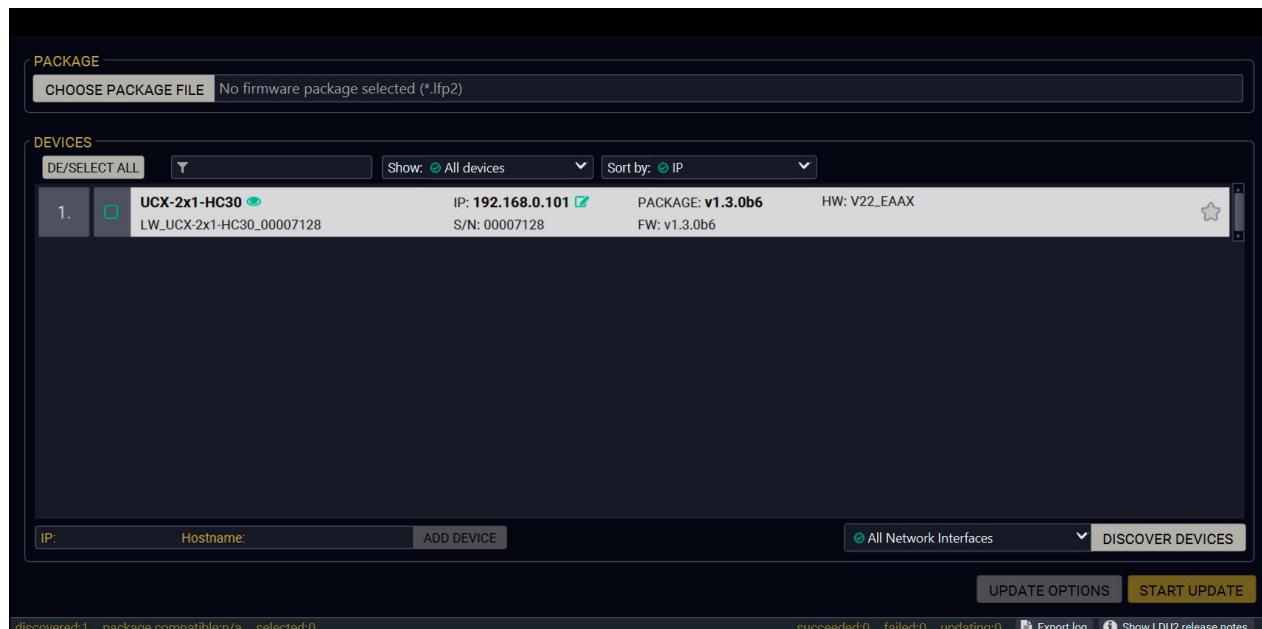

Legend of the Icons

	IP address editor	The IP address of the device can be changed in the pop-up window.
	Identify me	Clicking on the icon makes the front panel LEDs blink for 10 seconds, which helps identify the device physically.
	Authentication required	The password-protection is enabled. You have to enter the password to perform the firmware update in the pop-up window at the beginning of the update.
	Favorite device	The device has been marked, thus the IP address is stored. When a device is connected with that IP address, the star will be highlighted in that line.
	Further information available	Device is unreachable. Change the IP address using the front panel LCD menu or the IP address editor of the LDU2.

9.4. Updating Via GUI

To update the desired device(s) via the Graphical User Interface, follow these steps.

ATTENTION: The computer that runs LDU2 and the target device (that will be updated) must be in the same subnet. The update cannot be performed from behind a firewall or gateway.


ATTENTION: Updating with firmware version v2.0 or earlier will call factory reset on the device and all user settings will be lost. Upwards of firmware package v2.0, device configuration can be kept.

ATTENTION: While the firmware is being updated, the normal operation mode is suspended, as the device is switched to bootload mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the unit and restart the process.


[Device Cloning – Configuration Backup and Restore](#) feature supports copying all the settings from one device to another, but cloning is only possible between devices using the same firmware. Uploading of the firmware package happens on http (80) and https (443) ports, so one of them has to be enabled.

Step 1. Select the Firmware Package.

Click on the **Choose package file** button and navigate to the location where the LFP2 file was saved. When you click on the name of the package, the preview of the release notes is displayed in the right panel.

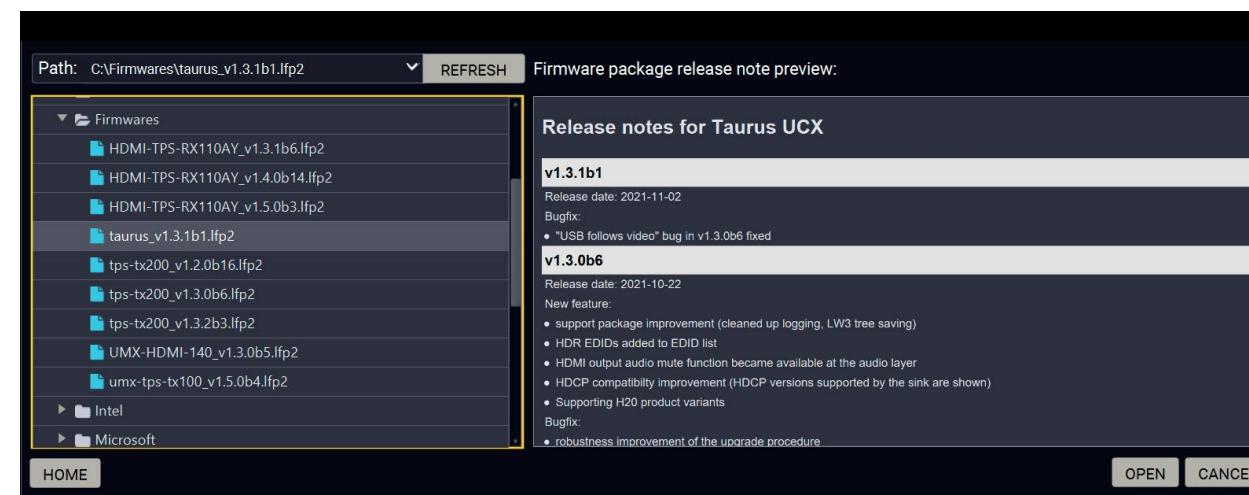


After the package file is loaded, the list is filtered to show the compatible devices only. The current firmware version of the device is highlighted in orange if it is different from the version of the package loaded.

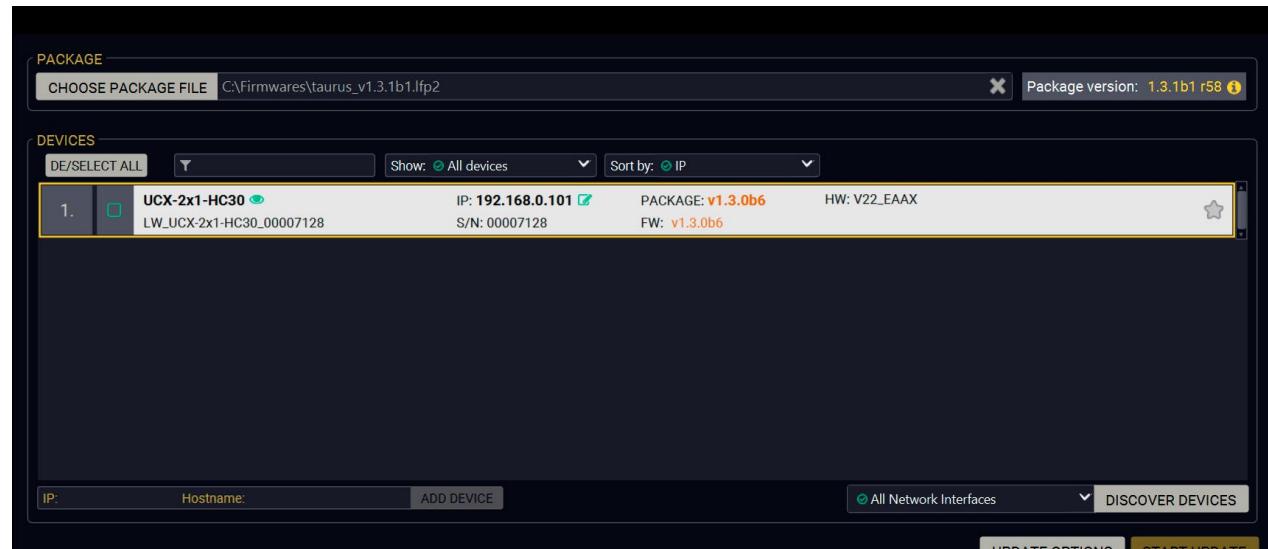

If you start the update by double-clicking on the LFP file, the screen above will be loaded right away.

INFO: The -LCC models have the same values as non-LCC models.

The Meaning of the Symbols

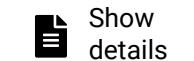


The log about the updating process of the device can be displayed in a new window.



The device is in bootload mode. Backup and restore cannot be performed in this case.

Step 2. Select the desired devices for updating


Select the devices for updating; the selected line will be highlighted in green.

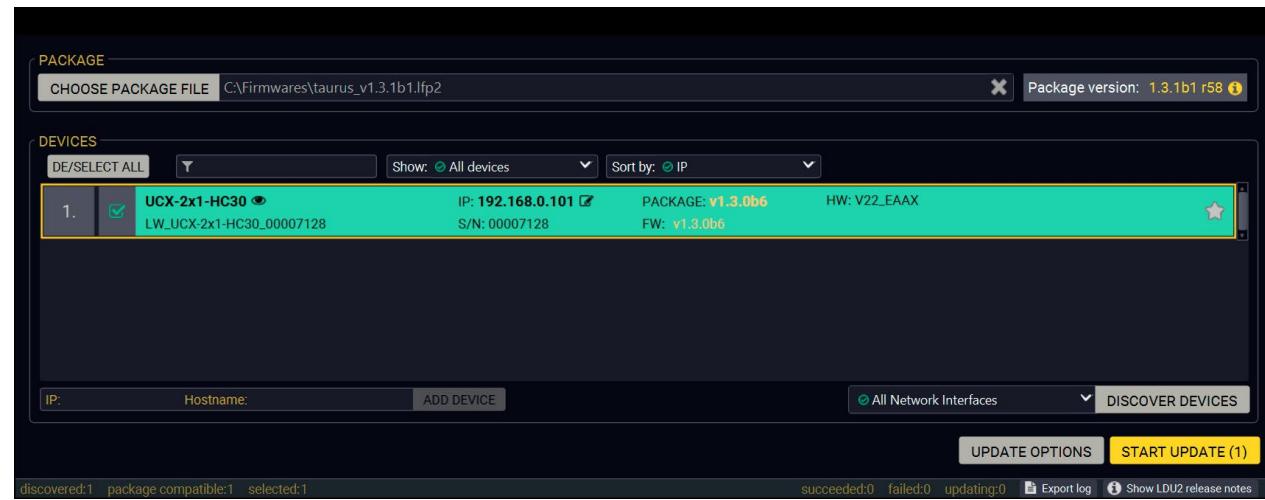

Step 3. Start the update and wait until it is finished.


Click on the **Start Update** button to start the procedure. The status is shown in percent in the right side of the device line and the overall process in the bottom progress bar. The device might reboot during the firmware update procedure.

START UPDATE (1)

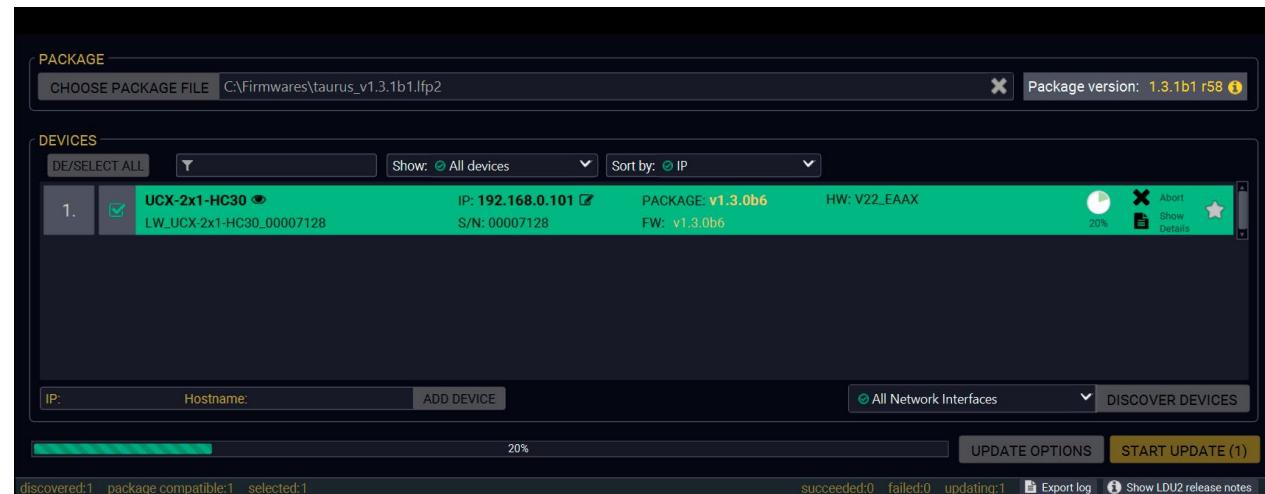


When the progress bar reaches 100% (**Done** is displayed at all devices), the update of all devices are finished successfully and a message appears; you can close the software.

Step 4. Wait until the unit reboots with the new firmware.

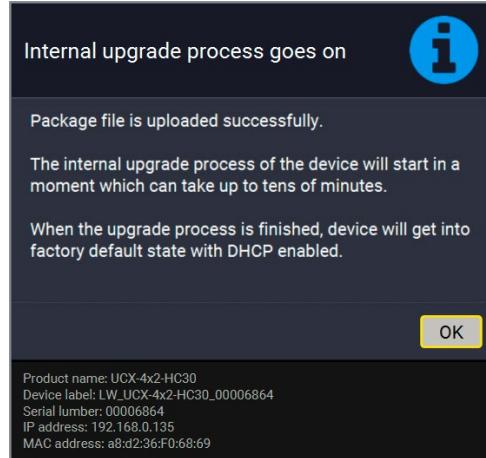

Once the firmware update procedure is completed, the device is rebooted with the new firmware. Shutting down and restarting the device is recommended.

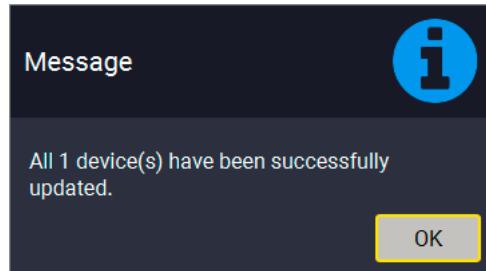

9.5. Command Line Interface (CLI)

The CLI of the LDU2 software is a simple tool for creating scriptable device updates without the need of human interactions. It allows batch updating just like in case of GUI usage.

9.5.1. How to Run

Running under Windows® OS

The installer of LDU2 puts the following file into the installation folder:


`LightwareDeviceUpdaterV2_CLI.cmd`

CLI is available via this file, the exe is not suitable for that purpose. Open a command line window to execute or test the features directly.

Step 1. Open an Explorer window where the cmd file is located, the default is:

`c:\Program Files (x86)\Lightware\Lightware Device Updater V2\LightwareDeviceUpdaterV2_CLI.cmd`.

Step 2. Click on the address line (highlighted in blue in the picture), type `cmd.exe` and press enter. The command interpreter window of Windows is opened at the path of the LDU2 install folder.

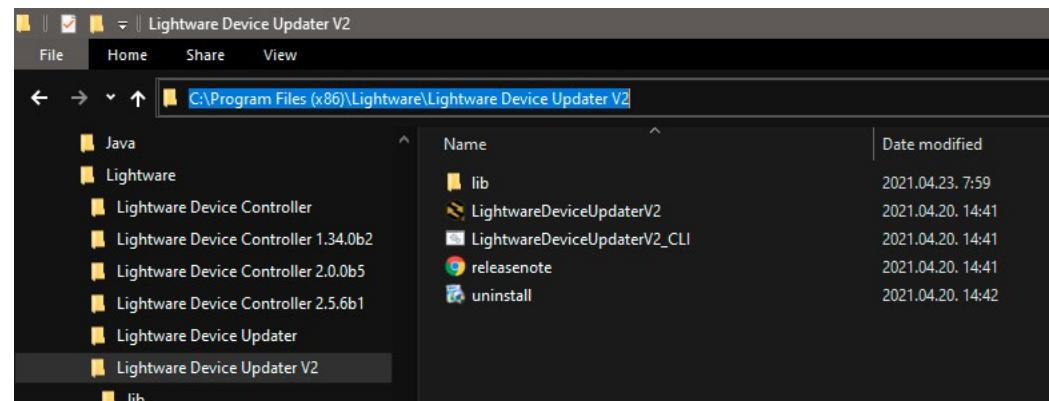

Step 3. Now you can use the `LightwareDeviceUpdaterV2_CLI.cmd` file with the commands and options, which are described in the coming sections:

Running under Linux

The Command Line Interface under Linux Operating Systems can be run by the following:

`LightwareDeviceUpdaterV2.sh`.

Running an update:

```
bash LightwareDeviceUpdaterV2.sh update --ip 172.24.5.27 --package ~/Downloads/taurus_v1.2.0b9.1fp2
```

The commands and options are the same under Windows® and Linux, too. Following sections contain examples with `LightwareDeviceUpdaterV2_CLI.cmd`.

9.5.2. How to Use

Command Structure

The commands can be run over CLI in the following way:

`LightwareDeviceUpdaterV2_CLI.cmd [command] [options]`

[Command]: a certain command described in the coming sections; only one command can be run at a time

[Options]: mandatory and/or optional parameters of the command, if any. Optional parameters have a default value, which can be found at each affected command. You only have to define the parameter if you want to apply a different value. The **order of the options** is arbitrary.

Important Notes

- CLI is **case-sensitive** (including commands, options and other parameters).
- There is **no limit** regarding the number of the devices to update. At most 20 devices are updated simultaneously, when one of them is finished, the following (21st) will be started automatically.
- If an update is failed, the IP address of the affected device(s) are listed at the end.
- The computer that runs LDU2 and the target device (that will be updated) must be in the same subnet. The update cannot be performed from behind a firewall or gateway.

9.6. CLI Commands

INFO: The commands and options described in the following sections are the same under Windows® and Linux, too. The examples contain `LightwareDeviceUpdaterV2_CLI.cmd`.

About the Examples

- Sent command is in **blue**, response is in **grey**.
- If the response in practice is **longer than listed** in the example, this symbol can be seen: [...].

9.6.1. Help

The defined commands and options can be listed by the `help` command.

Command

`LightwareDeviceUpdaterV2_CLI.cmd help`

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd help

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar help
Command line usage:
  Win: LightwareDeviceUpdaterV2_CLI.cmd [command] [options]
  Linux: LightwareDeviceUpdaterV2.sh [command] [options]

Commands:
  * help
  * version
  * update
  * deviceInfo
  * restore
  * packageOptions
[...]
```

9.6.2. LDU2 Version

The response shows the version of the LDU2 and the version of the Script API (the Application Programming Interface that is used by the LDU2 and the script).

Command

```
LightwareDeviceUpdaterV2_CLI.cmd version
```

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd version

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar version
LDU2 version: 2.10.0b6
Script API version: 1.3.10
```

9.6.3. Check For New LDU2 Version

The following command can be used to check if an update of LDU2 is available. This is just a request, since the CLI is not suitable for handling the complete installer of the software.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates
```

Example 1

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar checkForUpdates
Current LDU2 version: 2.10.0b6
LDU2 is up-to-date
```

Example 2

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar checkForUpdates
Current LDU2 version: 2.9.1b1
New version is available online: 2.10.0b6
Download URL: http://update.lightware.hu/ldu2/lwr/v2.10.0b6/install_LDU2_v2.10.0b6.exe
```

9.6.4. Device Info

The most important information about the selected device is displayed; see the example for more details.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd deviceInfo [options]
```

Options

Option	Description	Required?
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-v or --packageVersion	Shows installed package version only	optional

Example 1

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd deviceInfo --ip 192.168.0.100

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar deviceInfo --ip 192.168.0.100
Product name: UCX-4x2-HC30
IP address: 192.168.0.100
Serial number: 00006864
MAC address: a8:d2:36:F0:68:69
Part number: 91310081
Device label: LW_UCX-4x2-HC30_00006864
Package version: v1.2.0b1
CPU FW version: v1.2.0b1
HW version: V20_AXAX
Operation mode: Application mode
```

Example 2

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd deviceInfo --ip 192.168.1.7 --packageVersion

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar deviceInfo --ip 192.168.0.100 --packageVersion
v1.2.0b1
```

9.6.5. Update

This command can be used to update the firmware of the devices.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd update [options]
```

Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-r or --reportProgress	Report update progress in percentage form. Default: false	optional
Package-specific options	Certain LFP2 packages have features that can be applied at this command; see the Stop Bits Setting section.	optional

ATTENTION: The configuration is restored automatically if the factory default option is not applied in the **update** command. In that case, there is no need to run the **restore** command after the update.

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip 192.168.0.52 --package f:\!!!!LIGHTWARE\firmware\taurus_v1.2.0b7.lfp2 --reportProgress

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip 192.168.0.52 --package f:\!!!!LIGHTWARE\firmware\taurus_v1.2.0b7.lfp2 --reportProgress

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update --ip 192.168.0.52 --package f:\!!!!LIGHTWARE\firmware\taurus_v1.2.0b7.lfp2 --reportProgress
[2021-06-17 08:53:01.250] [ INFO] [main] - Device IPs: [192.168.0.52]
[2021-06-17 08:53:09.075] [ INFO] [main] - All the selected devices are accessible over the network.
[2021-06-17 08:53:11.097] [ INFO] [main] - All the selected devices are compatible with the specified package.
[2021-06-17 08:53:15.067] [ INFO] [ 192.168.0.52] - Taurus UCX update process started
[2021-06-17 08:53:15.074] [ INFO] [ 192.168.0.52] - Update parameters: deviceIp: 192.168.0.52, factoryDefault: true
[2021-06-17 08:53:15.185] [ INFO] [ 192.168.0.52] - Update API version: 1.0
[2021-06-17 08:53:15.222] [ INFO] [ 192.168.0.52] - Update protocol: http://
[2021-06-17 08:53:15.223] [ INFO] [ 192.168.0.52] - Authentication type: BASIC
[2021-06-17 08:53:15.415] [ INFO] [ 192.168.0.52] - Device info: Product name: UCX-4x2-HC30, Device label: LW_UCX-4x2-HC30_00006869, Serial number: 00006869, Mac address: a8:d2:36:F0:68:69, Ip address: 192.168.0.52, Host name: , Package version: v1.2.0b6, Part number: 91310081, Hw version: V20_AXAX
[2021-06-17 08:53:15.450] [ INFO] [ 192.168.0.52] - Uploading firmware package.
[2021-06-17 08:53:16.108] [ INFO] [ProgressReporter] - Progress: 2%...
[...]
```

The lines containing "ProgressReporter" can be enabled optionally. If it is enabled, the current state is displayed every 5 seconds.

9.6.6. Package Options

Shows package-specific update options.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd packageOptions [options]
```

Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes

Example

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd packageOptions
--package f:\!!!LIGHTWARE\firmware\taurus_v1.2.0b7.lfp2
```

```
Login options:
--user : HTTP(s) basic authentication user (Default: empty string)
--pw : HTTP(s) basic authentication password (Default: empty string)
```

Package option example can be seen in the following section.

9.6.7. Complex Example

The following options applied:

- Firmware is updated
- Authentication enabled

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip
192.168.0.52 --package f:\!!!LIGHTWARE\firmware\taurus_v1.2.0b9.lfp2 --user admin --pw 4x2 --reportProgress

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update --ip
192.168.0.52 --package f:\!!!LIGHTWARE\firmware\taurus_v1.2.0b9.lfp2 --user admin --pw 4x2 --reportProgress
[2021-07-01 08:35:23.421] [ INFO] [           main] - Device IPs: [192.168.0.52]
[2021-07-01 08:35:31.547] [ INFO] [           main] - All the selected devices are accessible over the network.
[2021-07-01 08:35:33.715] [ INFO] [           main] - All the selected devices are compatible with the specified
package.
[2021-07-01 08:35:37.675] [ INFO] [ 192.168.0.52] - Taurus UCX update process started
[2021-07-01 08:35:37.682] [ WARN] [ 192.168.0.52] - This update will call factory reset on the device. All user
settings will be lost.
[2021-07-01 08:35:37.688] [ INFO] [ 192.168.0.52] - Update parameters: deviceIp: 192.168.0.52, factoryDefault:
true
[2021-07-01 08:35:38.505] [ INFO] [ 192.168.0.52] - Update API version: 1.0
[2021-07-01 08:35:38.774] [ INFO] [ 192.168.0.52] - Update protocol: http://
[2021-07-01 08:35:38.776] [ INFO] [ 192.168.0.52] - Authentication type: BASIC
[2021-07-01 08:35:40.660] [ INFO] [ 192.168.0.52] - Device info: Product name: UCX-4x2-HC30, Device label:
LW_UCX-4x2-HC30_00006869, Serial number: 00006869, Mac address: a8:d2:36:F0:68:69, Ip address: 192.168.0.52, Host
name: , Package version: v1.2.0b8, Part number: 91310081, Hw version: V20_AXAX
[2021-07-01 08:35:40.728] [ INFO] [ 192.168.0.52] - Uploading firmware package.
[2021-07-01 08:35:43.736] [ INFO] [ProgressReporter] - Progress: 4%
[2021-07-01 08:35:48.744] [ INFO] [ProgressReporter] - Progress: 12%
[2021-07-01 08:35:53.759] [ INFO] [ProgressReporter] - Progress: 20%
[2021-07-01 08:35:58.770] [ INFO] [ProgressReporter] - Progress: 28%
[2021-07-01 08:36:03.772] [ INFO] [ProgressReporter] - Progress: 36%
```

```
[2021-07-01 08:36:08.788] [ INFO] [ProgressReporter] - Progress: 40%
[2021-07-01 08:36:13.794] [ INFO] [ProgressReporter] - Progress: 44%
[2021-07-01 08:36:18.802] [ INFO] [ProgressReporter] - Progress: 47%
[2021-07-01 08:36:23.809] [ INFO] [ProgressReporter] - Progress: 51%
[2021-07-01 08:36:28.815] [ INFO] [ProgressReporter] - Progress: 55%
[2021-07-01 08:36:33.825] [ INFO] [ProgressReporter] - Progress: 58%
[2021-07-01 08:36:38.828] [ INFO] [ProgressReporter] - Progress: 62%
[2021-07-01 08:36:43.835] [ INFO] [ProgressReporter] - Progress: 66%
[2021-07-01 08:36:48.842] [ INFO] [ProgressReporter] - Progress: 70%
[2021-07-01 08:36:53.855] [ INFO] [ProgressReporter] - Progress: 74%
[2021-07-01 08:36:58.868] [ INFO] [ProgressReporter] - Progress: 78%
[2021-07-01 08:37:03.871] [ INFO] [ProgressReporter] - Progress: 82%
[2021-07-01 08:37:08.875] [ INFO] [ProgressReporter] - Progress: 86%
[2021-07-01 08:37:13.889] [ INFO] [ProgressReporter] - Progress: 90%
[2021-07-01 08:37:19.737] [ INFO] [ 192.168.0.52] - Upload finished.
[2021-07-01 08:37:19.754] [ INFO] [ 192.168.0.52] - Starting internal update process. Device is about to reboot.
[2021-07-01 08:37:20.192] [ INFO] [ 192.168.0.52] - Package file has been uploaded successfully.
```

The device is now updating itself, which can take up to tens of minutes. When the upgrade process is complete, the device resets to factory defaults, enabling DHCP.

```
LDU2 is disconnected from the device. Please wait while the device completes the update.
[2021-07-01 08:37:20.194] [ INFO] [ 192.168.0.52] - Done
```

All 1 update(s) finished successfully.

9.6.8. Exit Codes

There is a return value in all cases when a command run is finished. Currently, three codes are defined:

Code	Displayed text	Description
0	N/A	The update performed successfully
1	Update error (ErrorCode:1)	The error happened during the update
2	CLI error (ErrorCode:2)	The error happened before starting the update

The error line contains further information about the error.

Querying the Exit Code under Windows®

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>echo %errorlevel%
0
```

Querying the Exit Code under Linux

```
echo $?
0
```

If this value is queried after the update and it is 0, the update performed successfully.

9.7. Updating via REST API

The **Update REST API (REpresentational State Transfer Application Public Interface)** is developed to have a standardized update interface between the Lightware device and a third-party software tool (e.g. external controller). The update means – generally – to install a new Lightware Firmware Package (LFP2) to the Lightware device. The Update REST API is part of the entire **Lightware REST API** software architecture.

The Update REST API is available over **HTTPS** and with **basic authentication** (with setting a password for the user **admin**).

For more details on updating with REST API, see the [Updating the Device via REST API](#) section.

9.8. If the Update is not successful

- Restart the process and try the update again.
- If the backup cannot be created for some reason, you will get a message whether to continue the process without backup or stop the update. A root cause can be that the desired device is already in bootload (firmware update) mode, thus the normal operation mode is suspended and backup cannot be made.

If an update is not successful, the **Export log** button becomes red. If you press the button, you can download the log file as a ZIP package, which can be sent to Lightware Support if needed. The log files contain useful information about the circumstances to find the root cause. *#bootload*

10

Troubleshooting

Usually, if the system seems not to transport the signal as expected, the best strategy for troubleshooting is to check signal integrity through the whole signal chain starting from source side and moving forward to receiver end.

- ▶ Use Case Studies 157
- ▶ How to Speed Up the Troubleshooting Process? 158

First, check the front panel LEDs and take the necessary steps according to their states. For more information about front panel LEDs of the switcher, see the [Status LEDs](#) section.

Pictogram Legend

-  Section to connections/cabling.
-  Section to front panel operation.
-  Section to LDC software.
-  Section to LW3 protocol commands.

10.2. Use Case Studies


Symptom	Root cause	Action	Refer to
Video layer			
No picture on the video output	Device(s) not powered properly	Check the switcher and the other devices if they are properly powered; try to unplug and reconnect them.	 4.6
	Cable connection problem	Cables must fit very well, check all the connectors.	 4.6
	No incoming signal	No video signal is present on the HDMI input ports. Check the source device and the HDMI cables.	 4.6
	Not the proper video port is the active one	Check the video crosspoint settings.	 3.1.1  6.7  8.6.1
	Not the proper interface is the active one	If the source/display has more connectors, check if the proper interface is selected.	
	Output port is muted	Check the mute state of output ports.	 6.7.1  8.6.3
	Display is not able to receive the video format	Check the emulated EDID and select another (e.g. emulate the display's EDID on the input port).	 6.10.1  8.11.4
	HDCP is disabled	Enable HDCP on input port(s) of the switcher.	 6.8 

Symptom	Root cause	Action	Refer to
No 4K60 video signal on the USB-C input	No picture on the video output + signal error rate is high, HDMI2.0 scrambling is disabled, clock rate is set 1:10	The source sends 4K signals, but the emulated EDID does not support this resolution.	 6.10.1  8.11.4
	The source is not able to send 4K60Hz	Check the documentation of the source and the ability of the connected port. Certain USB-C ports are only for power and not for video transmission. The icons beside the port can help.	
	The source PC or BYOD resolution is not 4K60Hz	Check the source resolution and modify it if necessary. Certain sources require restarting.	
	The USB-C cable is not appropriate	The USB-C standard allows two cable types: the Full-Featured Type-C Cable Assembly or 2.0 Type-C Cable Assembly. The latter will not operate with 4K60Hz.	 4.5
	Always use high-quality cables. The no-name USB 3.1 Gen1-compatible cables can use only 2 SS channels instead of 4. The minimum cable requirement is USB 3.1 Gen1-compatibility and support of Displayport HBR2.		 4.5
	The active Thunderbolt3 cable is not appropriate, because it is not compatible backwards (with USB 3.0 or DP). The passive TBT3 (20Gbps) cable may be appropriate if it supports USB3 Gen1 or Gen2 and Displayport.		 4.5
	Not proper Displayport alternate mode setting	Check if the DP Altmode Policy is set to Prefer video (Force C).	 6.8.1  8.10.1
	Power via USB-C		

Symptom	Root cause	Action	Refer to
The Power delivery does not operate	If the resistor of the conductor in USB-C cable is too high, the voltage difference could be more than 0.25V, which can cause Power Delivery communication problems.	Always use high quality cables.	 4.5
BYOD charges slowly	The BYOD needs more than 100W	An error message will appear, because the UCX series maximum power capacity is 100W.	 4.3

10.3. How to Speed Up the Troubleshooting Process?

Lightware's technical support team is always working hard to provide the fastest support possible. Our team's response time is one of the best in the industry, and in the toughest of cases we can directly consult with the hardware or software engineer who designed the product to get the information from the most reliable source.

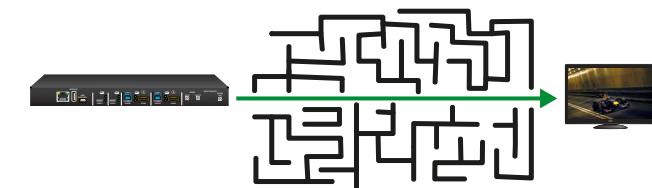

However, the troubleshooting process can be even faster... with your help.

There are certain pieces of information that push us in the right direction to find the root cause of the problem. If we receive most of this information in the first e-mail, or it is gathered at the time when you call us, then there is a pretty high chance that we will be able to respond with the final solution right away.

This information is the following:

- Schematic (a pdf version is preferred, but a hand drawing is sufficient).
- Serial number(s) of the device(s) (it is either printed somewhere on the box or you can query it in the Device Controller software or on the built-in website).
- Firmware versions of the devices (please note that there may be multiple CPUs or controllers in the device and we need to know all of their firmware versions, a screenshot is the best option).
- Cable lengths and types (in our experience, it's usually the cable).
- Patch panels, gender changers or anything else in the signal path that can affect the transmission.
- Signal type (resolution, refresh rate, color space, deep color).
- Emulated EDID(s) (please save them as a file and send it to us).
- Actions to take in order to re-create the problem (if we cannot reproduce the problem, it is hard for us to find the cause).
- Photo or video about the problem ('image noise' can mean many different things, it's better if we see it too).
- Error logs from the Device Controller software.
- In the case of an Event Manager issue, the event file and/or backup file from the Device Controller software.

The more of the information above you can give us, the better. Please send this information to the Lightware Support Team (support@lightware.com) to speed up the troubleshooting process.


11

Technologies

The following sections contain descriptions and useful technical information on how the devices work in the background. The content is based on experiences and cases we met in the practice. These sections help understand features and technical standards like the following:

- ▶ EDID Management
- ▶ HDCP Management
- ▶ Pixel Accurate Reclocking

160
161
163

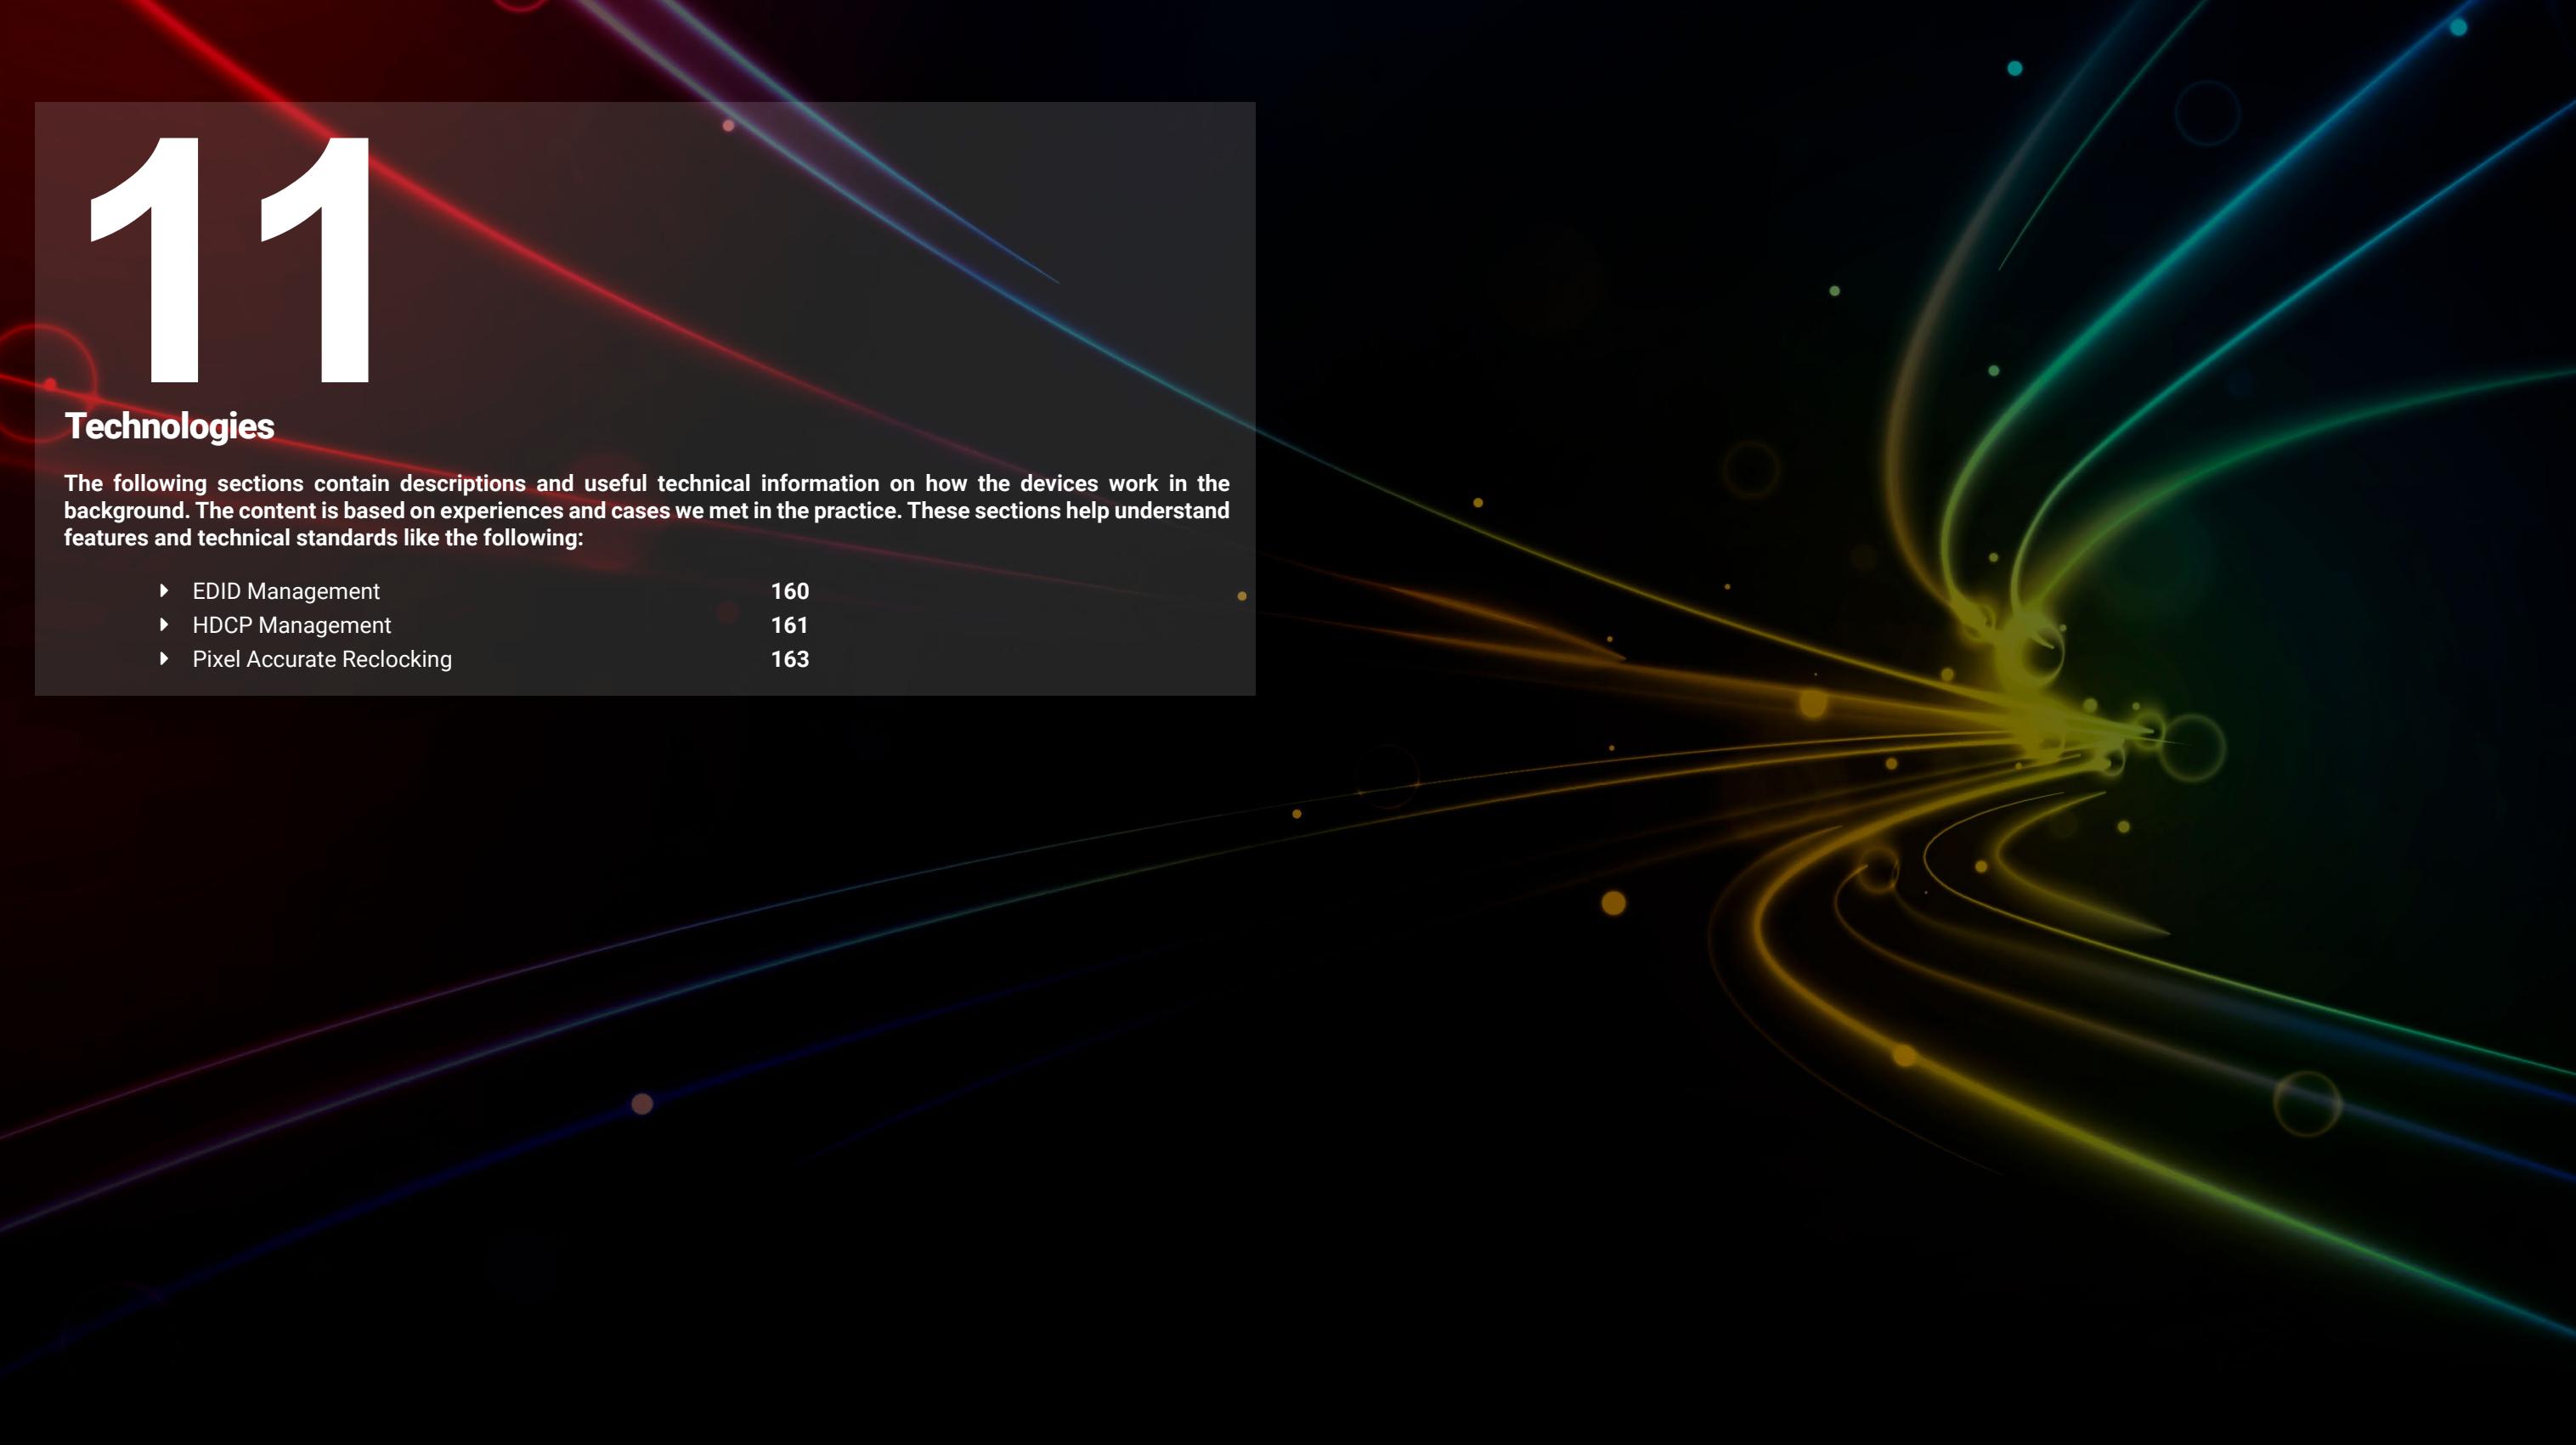


11.1. EDID Management

11.1.1. Understanding the EDID

The Extended Display Identification Data (EDID) is the passport of display devices (monitors, TV sets, projectors). It contains information about the capabilities of the display, such as supported resolutions, refresh rates (these are called Detailed Timings), the type and manufacturer of the display device, etc.

After connecting a source to a display (DVI, HDMI, DP), the source reads out the EDID to determine the resolution and refresh rate of the image to be transmitted.

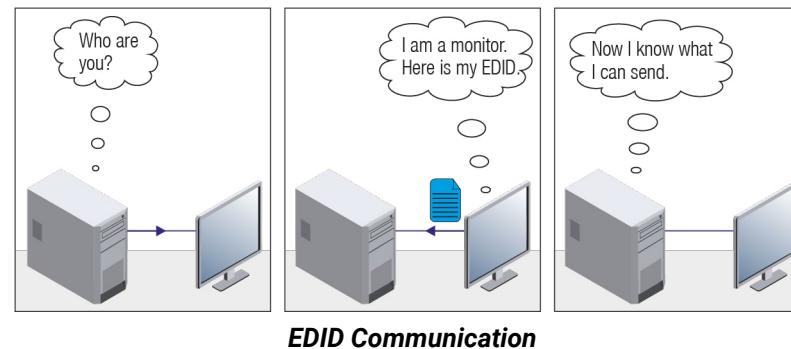

Most DVI computer displays have a 128-byte-long EDID structure. However, Digital Televisions and HDMI capable displays may have another 128 bytes, which is called E-EDID and is defined by CEA (Consumer Electronics Association). This extension contains information about additional Detailed Timings, audio capabilities, speaker allocation and HDMI capabilities. It is important to know that all HDMI capable devices must have CEA extension, but not all devices with CEA extension are HDMI capable.

Common Problems Related to EDID

Problem: "My system consists of the following: a computer, a Lightware device, a WUXGA (1920x1200) LCD monitor, and an SXGA (1280x1024) projector. I would like to see the same image on the monitor and the projector. What EDID should I choose on the Lightware device?"

Solution: If you want to see the image on both displays, you need to select the resolution of the smaller display (in this case SXGA), otherwise the smaller display may not show the higher resolution image.

Problem: "I have changed to a different EDID on an input port of the Lightware device to have a different resolution, but nothing happens."

Solution: Some graphics cards and video sources read out the EDID only after power-up and later they do not sense that the EDID has been changed. You need to restart your source to make it read out the EDID again.

11.1.2. Advanced EDID Management

Each DVI sink (e.g. monitors, projectors, plasma displays, etc...) must support the EDID data structure. Source BIOS and operating systems are likely to query the sink using DDC2B protocol to determine what pixel formats and interface are supported. DVI standard uses EDID data structure to identify the monitor type and capabilities. Most DVI sources (VGA cards, set top boxes, etc.) will output DVI signal after accepting the connected sink's EDID information. In the case of EDID readout failure or missing EDID, the source will not output DVI video signal.

Lightware devices provide the Advanced EDID Management function that helps system integration. The built-in EDID Router can store and emulate factory pre-programmed- and User programmable EDIDs. The EDID of the attached monitors or projectors for each output are stored in a non-volatile memory. This way the EDID of a monitor is available when the monitor is unplugged or switched off.

Any EDID can be emulated on any input. An emulated EDID can be copied from the EDID router's memory (static EDID emulation), or from the last attached monitor's memory (dynamic EDID emulation). For example, the Lightware device can be set up to emulate a sink device that is connected to one of the outputs. In this case, the EDID automatically changes if the monitor is replaced with another display device (as long as it has a valid EDID).

The EDID is independently programmable for all inputs without affecting each other. All inputs have their own EDID circuit.

INFO: The user is not required to disconnect the video cable to change an EDID as opposed to other manufacturer's products. The EDID can be changed even if a source is connected to the input and powered ON.

INFO: When the EDID has been changed, the router toggles the HOTPLUG signal for 2 seconds. Some sources do not sense this signal. In such cases, the source device must be restarted or powered OFF and ON again.

11.2. HDCP Management

Lightware Visual Engineering is a legal HDCP adopter. Several functions have been developed, which helps to solve HDCP related problems. Complex AV systems often have both HDCP and non-HDCP components. The matrix allows transmitting HDCP encrypted and unencrypted signals. The devices will be still HDCP compliant, as they will never output an encrypted signal to a non-HDCP compliant display device. If an encrypted signal is switched to a non-compliant output, a red screen alert or muted screen will appear.

11.2.1. Protected and Unprotected Content

Many video sources send HDCP protected signal if they detect that the sink is HDCP capable – even if the content is not copyrighted. This can cause trouble if an HDCP capable device is connected between the source and the display. In this case, the content cannot be viewed on non-HDCP capable displays and interfaces like event controllers. Rental and staging technicians often complain about certain laptops, which are always sending HDCP encrypted signals if the receiver device (display, matrix router, etc.) reports HDCP compliancy. Even though HDCP encryption is not required all the time (e.g. computer desktop image), certain laptops still do that.

To avoid unnecessary HDCP encryption, Lightware introduced the HDCP enabling/disabling function: the HDCP capability can be disabled in the Lightware device. If HDCP is disabled, the connected source will detect that the sink is not HDCP capable, and turn off authentication.

11.2.2. Disable Unnecessary Encryption

HDCP Compliant Sink

All the devices are HDCP-compliant, no manual setting is required, both protected and unprotected contents are transmitted and displayed on the sink.



Not HDCP-compliant Sink 1.

Not-HDCP compliant sink is connected to the matrix. Some sources (e.g. computers) always send HDCP encrypted signals if the receiver device reports HDCP compliancy, however, HDCP encryption is not required all the time (e.g. computer desktop image). If HDCP is enabled in the matrix, the image will not be displayed on the sink.



Setting the HDCP parameter to Auto on the output port and disable HDCP on the input port, the transmitted signal will not be encrypted if the content is not protected. Thus, non-HDCP compliant sinks will display non-encrypted signal.

Not HDCP-compliant Sink 2.

The layout is the same as in the previous case: non-HDCP compliant display device is connected to the matrix but the source would send protected content with encryption. If HDCP is enabled on the input port of the matrix, the source will send encrypted signal.



The sink is not HDCP compliant, thus it will not display the video signal, but blank screen is shown. If HDCP is disabled on the input port of the matrix, the source will not send the signal. The solution is to replace the display device with an HDCP-capable one.

11.2.3. HDCP 2.2

HDCP 2.2 is the latest evolution of copy protection. It is designed to create a secure connection between a source and a display. The 2.x version of HDCP is not a continuation of HDCPv1, and is rather a completely different link protection. One of the main differences is the number of the allowed devices within a closed AV system: HDCP 2.2 allows 32 devices (HDCP 1.4 allows 128 devices). A further limit is that up to four level is allowed, which means the protected signal can be transmitted over at most four repeater/matrix/switcher devices. HDCP content protection is activated only if an active video stream is transmitted from the source to the display. The encryption is not activated without a video signal.

HDCP 2.2 standard allows the application of a previous version of HDCP (e.g. HDCP 1.4) between the source and the display if the source device allows it. According to the standard, if the image content is protected with HDCP, the highest supported content protection level has to be applied. However, if the highest level of protection is not justified by the source content, the level may be decreased to avoid compatibility problems; this case is determined by the source.

HDCP 2.2 Source and HDCP 1.4 Sink

In this case the signal of an HDCP 2.2 compliant source is switched to an HDCP 1.4 compliant sink device. The signal is encrypted with HDCP 2.2 on the input and encrypted with HDCP 1.4 on the output of the Lightware device. A lower level of encryption may be applied only if the source device/content allows it - according to the HDCP standard. In this case, the HDCP setting on the input port has to be set to HDCP 1.4 and Depends on input on the output port.



HDCP 1.4 Source and HDCP 2.2 Sink

The example below is the reversal of the previous case. An HDCP 1.4 compliant source sends a signal with HDCP 1.4 encryption. The signal is switched to an HDCP v2.2 compliant sink device. In this case, the outgoing signal has to be encrypted with the highest supported encryption level towards the sink, as the Lightware device and the sink are both HDCP 2.2 compliant. The HDCP 2.2 standard does not allow keeping the original HDCP 1.4 encryption level on the output.



What Kind of Signal Will be on the Output of the Lightware Device?

See the table below that summarizes the possible cases:

Incoming Signal	HDCP 1.4 Compatible Sink on the Output	HDCP 2.2. Compatible Sink on the Output
HDCP 1.4	HDCP 1.4	HDCP 2.2
HDCP 2.2 (convertable)*	HDCP 1.4	HDCP 2.2
HDCP 2.2 (not convertable)**	Red screen	HDCP 2.2

* Stream type 0: the video stream allows the conversion of the signal to apply a lower level of encryption.

** Stream type 1: the video stream does not allow the conversion of the signal.


11.3. Pixel Accurate Reclocking

Signal reclocking is an essential procedure in digital signal transmission. After passing the reclocking circuit, the signal becomes stable, jitter-free, and can be transmitted over more equipment like processors or event controllers. Without reclocking, sparkles, noise, and jaggies appear on the image.

Lightware's sophisticated Pixel Accurate Reclocking technology fixes more problems than general TMDS reclocking. It removes not only intra-pair skew, but inter-pair skew as well. The Pixel Accurate Reclocking circuit eliminates the following errors:


Intra-pair skew

Skew between the + and - wires within a differential wire pair (e.g. Data2- and Data2+). It's caused by different wire lengths or slightly different wire construction (impedance mismatch) in the DVI cable. It results in jitter.

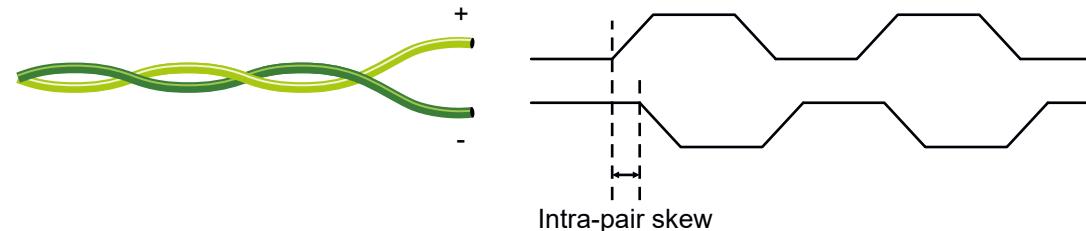


Inter-pair skew

Skew between two differential wire pairs in a cable. It is caused by different wire pair lengths or different number of twists in the DVI cable. Too much inter-pair skew results in color shift in the picture or sync loss.

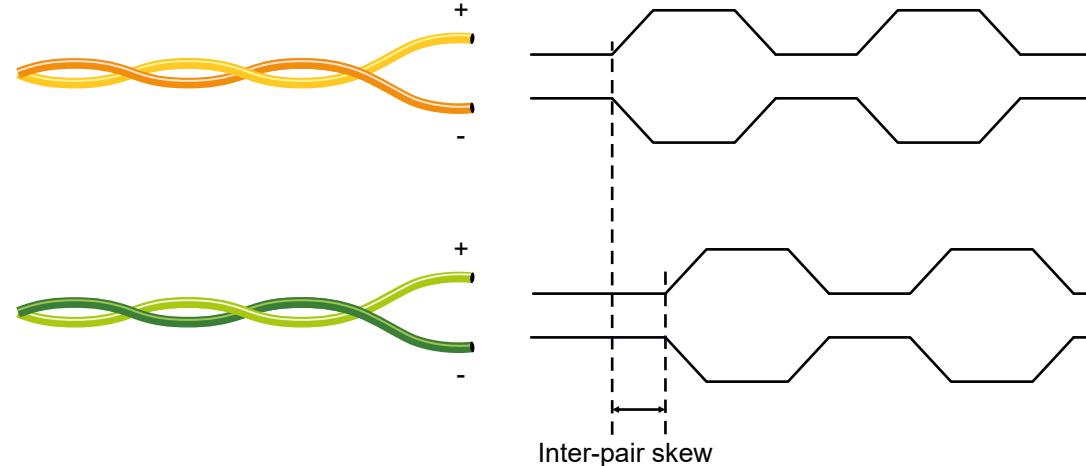


Jitter

Signal instability in the time domain. The time difference between two signal transitions should be a fixed value, but noise and other effects cause variations.

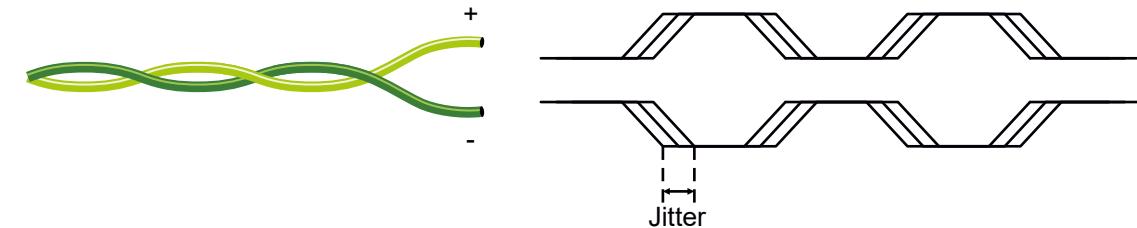

Noise

Electromagnetic interference between other electronic devices such as mobile phones, motors, etc. and the DVI cable are coupled onto the signal. Too much noise results in increased jitter.

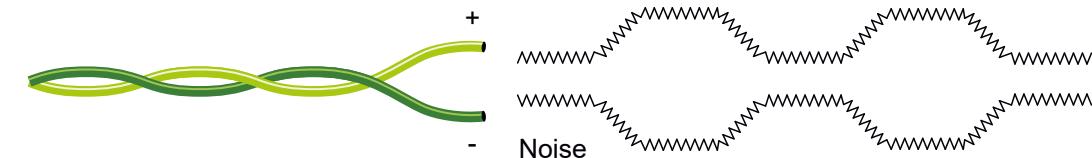

12

Appendix

Tables, drawings, guides, technical details and hashtag keyword list as follows:

▶ Specifications	165
▶ Port Numbering	167
▶ Applied Ports (Network Settings)	167
▶ Factory EDID List	168
▶ Cable Wiring Guide	170
▶ Mechanical Drawings	171
▶ Content of the Backup File	172
▶ Factory Default Settings	173
▶ Firmware Release Notes	174
▶ Known Issues	176
▶ Hashtag Keyword List	177
▶ Further Document Information	178
▶ Limited Warranty Statement	178

12.1. Specifications

 INFO: Specifications are subject to change without notice.

General

Compliance	CE; UKCA
Electrical safety	EN 62368-1:2024
EMC (emission)	EN 55032:2015+A1:2020
EMC (immunity)	EN 55035:2017+A11:2020
RoHS	EN 63000:2018
DGUV Vorschrift 3	Schutzklasse III
Warranty	3 years
Operating temperature	0° to +50°C (+32° to +122°F)
Operating humidity	10% to 90%, non-condensing
Cooling	Passive

Power

Power supply option	External Power Supply
IEC insulation class	IEC 62368-1, Class I
Supported power source	100-240 V AC; 50/60 Hz
Supplied power	24V DC, 5A
AC power plug	Interchangeable (EU, UK, JP/US, AUS/NZ)
Battery cell type	BR1632A

DCX-2x1-HC10

Power consumption (max) ¹	109.8 W
Heat dissipation	375 BTU/h (max)

¹ Counting with 450mA power over the HDMI output and 100W over the USB-C port.

DCX-3x1-HC20

Power consumption (max, calculated) ¹	117 W
Heat dissipation	400 BTU/h (max)

¹ Counting with 450mA power over the HDMI output and 100W over the USB-C port.

DCX-3x1-HC20

Power consumption (max, calculated) ¹	117 W
Heat dissipation	400 BTU/h (max)

¹ Counting with 450mA power over the HDMI output and 100W over the USB-C port.

Enclosure

Enclosure material	1 mm steel
Dimensions in mm	246 W x 140.3 D x 26 H
Dimensions in inch	9.59 W x 5.57 D x 1.01 H
Weight (DCX-2x1-HC10)	860 g (1.9 lb)
Weight (DCX-3x1-HC20)	901 g (1.99 lb)
Weight (DCX-3x1-HC21)	901 g (1.99 lb)

Video Inputs

USB-C input	
Connector type	24-pole USB type C receptacle
AV standard	DP 1.2a
HDCP compliance	HDCP 1.4, HDCP 2.2
Color space	RGB, YCbCr
Video delay	0 frame
Max. video resolution	4096x2160@60Hz RGB 4:4:4 (up to 600MHz pixel clock); 1920x1080@120 Hz, 36 bit
Audio formats	all formats in line with HDMI 2.0 standard
3D support	yes

HDMI input

Connector type	19-pole HDMI Type A receptacle (with screw locking option)
AV standard	DVI 1.0, HDMI 1.4, HDMI 2.0
Maximum data rate	18Gbps
Maximum pixel clock	597MHz
HDCP compliance	HDCP 1.4, HDCP 2.2
Color space	RGB, YCbCr
Video delay	0 frame
Max. video resolution	4096x2160@60Hz RGB 4:4:4 (up to 600MHz pixel clock); 1920x1080@120 Hz, 36 bit
Max. input HDMI cable length (with premium certified cable) at 3840x2160@60Hz 4:4:4	5m
Reclocking	Pixel Accurate Reclocking
3D support	yes

Audio mode	Simultaneous pass-through and de-embedding to the Audio layer
Supported audio formats for pass-through	All HDMI2.0 audio formats
Supported audio formats for de-embedding	Uncompressed
Compressed	Dolby Digital, DTS; Compressed HBR; Dolby TrueHD, DTS-HD

Video Outputs**HDMI output**

Connector type	19-pole HDMI Type A receptacle
AV standard	DVI 1.0, HDMI 1.4, HDMI 2.0
HDCP compliance	HDCP 1.4, HDCP 2.2
Color space	RGB, YCbCr
Supported resolutions at 8 bits/color *	up to 4096x2048@60Hz (4:4:4) or 4096x2048@60Hz (4:2:0); up to 3840x2160@60Hz (4:4:4) or 3840x2160@60Hz (4:2:0); 1920x1080@60Hz (4:4:4) up to 12 bits/color
Audio formats	8 channel PCM, Dolby TrueHD; DTS-HD Master Audio 7.1

* All standard VESA and CEA resolutions up to 300MHz (HDMI1.4) and other custom resolutions up to 300Mhz are supported.

Audio Ports**Analog audio output**

Connector type	5-pole Phoenix connector
Audio formats	2-ch PCM
Sampling frequency	48 kHz
Volume	-95.62 dB - 0 dB
Balance	-100 - +100 (0 = center)

Control Ports**Ethernet port (DCX-2x1-HC10, DCX-3x1-HC20)**

Connector type	RJ45 female connector
Ethernet data rate	10/100Base-T, full duplex with autodetect
Power over Ethernet (PoE)	Not supported

Ethernet port (DCX-3x1-HC21)

Connector type	RJ45 female connector
Ethernet data rate	1 Gbit/s
Power over Ethernet (PoE)	Not supported

GPIO port

Connector type	8-pole Phoenix
Function (pin 1-6)	Configurable (input/output)
Function (pin 7)	5V output
Function (pin 8)	Ground

OCS port

Connector type	3-pole Reversed Gender Plug Phoenix connector
Number of configurable pins	1
Port direction	Input

RS-232 port

Connector type	3-pole Phoenix connector
Baud rates	between 9600 and 115200 baud
Data bits	8
Parity	None / Odd / Even
Stop bits	1 / 2
Output voltage: Low level	3V to 15V
Output voltage: High level	-15V to -3V

12.2. Port Numbering

Audio/Video Ports

Model name		DCX-2x1-HC10		DCX-3x1-HC20, DCX-3x1-HC21	
Port name		Video port nr.	Audio port nr.	Video port nr.	Audio port nr.
Inputs	USB-C in 1	I1	I1	I1	I1
	HDMI in 2	I2	I2	I2	I2
	HDMI in 3	-	-	I3	I3
Outputs	HDMI out 1	01	01	01	01
	Analog audio out	-	02	02	02

Ethernet

Model name		DCX-2x1-HC10		DCX-3x1-HC20, DCX-3x1-HC21	
Port name		Port nr.		Port nr.	
Ethernet 1		P1		P1	
Ethernet 2		-		P2	
Ethernet 3		-		P3	

GPIO

Port name	Port nr.
GPIO1	P1
GPIO2	P2
GPIO3	P3
GPIO4	P4
GPIO5	P5
GPIO6	P6

OCS

Port name	Port nr.
OCS1	P1

RS-232 Ports

Port name	Port nr.	Serial over IP port nr.
Rs232 1	P1	8001

12.3. Applied Ports (Network Settings)

The following ports are necessary to pass via a network switch/firewall for a proper working between the device and the software:

Purpose/function	Protocol	Port nr.
Firmware update TFTP	UDP	69
	UDP	49990
	UDP	49995
Device Discovery	UDP	224.0.0.251:5353
Remote IP	UDP	230.76.87.82:37421
HTTP - file transfer and update API	TCP	80
HTTPS - file transfer and update API	TCP	443
LW3 control API	TCP	6107

WARNING! Enabling LARA on your device will open TCP ports 20,000 to 30,000 for service deployment. These ports will not be protected or filtered by the device's firewall, making them accessible from the device's network interfaces. Please be aware that running services on these ports could expose potential vulnerabilities on the device. Make sure to only activate services that have undergone thorough testing and do not contain any vulnerabilities.

12.4. Factory EDID List

Mem	Resolution		Type	EDID features	
F1	640 x 480p	@ 60.00	Hz	D	DVI
F2	848 x 480p	@ 60.00	Hz	D	DVI
F3	800 x 600p	@ 60.32	Hz	D	DVI
F4	1024 x 768p	@ 60.00	Hz	D	DVI
F5	1280 x 768p	@ 50.00	Hz	D	DVI
F6	1280 x 768p	@ 59.94	Hz	D	DVI
F7	1280 x 768p	@ 75.00	Hz	D	DVI
F8	1360 x 768p	@ 60.02	Hz	D	DVI
F9	1280 x 1024p	@ 50.00	Hz	D	DVI
F10	1280 x 1024p	@ 60.02	Hz	D	DVI
F11	1280 x 1024p	@ 75.02	Hz	D	DVI
F12	1400 x 1050p	@ 50.00	Hz	D	DVI
F13	1400 x 1050p	@ 60.00	Hz	D	DVI
F14	1400 x 1050p	@ 75.00	Hz	D	DVI
F15	1680 x 1050p	@ 60.00	Hz	D	DVI
F16	1920 x 1080p	@ 50.00	Hz	D	DVI
F17	1920 x 1080p	@ 60.00	Hz	D	DVI
F18	2048 x 1080p	@ 50.00	Hz	D	DVI
F19	2048 x 1080p	@ 60.00	Hz	D	DVI
F20	1600 x 1200p	@ 50.00	Hz	D	DVI
F21	1600 x 1200p	@ 60.00	Hz	D	DVI
F22	1920 x 1200p	@ 50.00	Hz	D	DVI
F23	1920 x 1200p	@ 59.56	Hz	D	DVI
F24	2048 x 1200p	@ 59.96	Hz	D	DVI
F29	1920 x 1080p	@ 60.00	Hz	U	DVI
F30	1440 x 480i	@ 60.05	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F31	1440 x 576i	@ 50.08	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F32	640 x 480p	@ 59.95	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F33	720 x 480p	@ 59.94	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F34	720 x 576p	@ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD

Mem	Resolution	Type	EDID features	
F35	1280 x 720p @ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F36	1280 x 720p @ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F37	1920 x 1080i @ 50.04	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F38	1920 x 1080i @ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F39	1920 x 1080i @ 60.05	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F40	1920 x 1080i @ 60.05	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F41	1920 x 1080p @ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F42	1920 x 1080p @ 25.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F43	1920 x 1080p @ 30.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F44	1920 x 1080p @ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F45	1920 x 1080p @ 59.94	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F46	1920 x 1080p @ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F47	1920 x 1080p @ 60.00	Hz	U	HDMI; YUV444; YUV422; 2CH_AUD
F48	1920 x 1080p @ 60.00	Hz	U	HDMI; YUV444; YUV422; 8CH_AUD
F49	1920 x 1080p @ 60.00	Hz	U	HDMI; YUV444; YUV422; DC30; DC36; YUVDC; 8CH_AUD
F98	1280 x 720p @ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD; 3D
F99	1920 x 1080p @ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD; 3D
F100	1024 x 768p @ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F101	1280 x 1024p @ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F102	1280 x 1024p @ 60.02	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F103	1280 x 1024p @ 75.02	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F104	1600 x 1200p @ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F105	1600 x 1200p @ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F106	1920 x 1200p @ 59.56	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F107	2560 x 1440p @ 59.95	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F108	2560 x 1600p @ 59.86	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F109	3840 x 2400p @ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F110	3840 x 2160p @ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F111	3840 x 2160p @ 25.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F112	3840 x 2160p @ 30.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD

Mem	Resolution		Type	EDID features	
F118	3840 x 2160p	@ 30.00	Hz	U	HDMI; YUV444; YUV422; 2CH_AUD
F119	3840 x 2160p	@ 30.00	Hz	U	HDMI; YUV444; YUV422; 8CH_AUD
F120	3840 x 2160p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; YUV420; 2CH_AUD
F121	1440 x 1080p	@ 59.91	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F122	2560 x 2048p	@ 59.98	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F123	1280 x 800p	@ 59.91	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F124	1440 x 900p	@ 59.90	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F125	1366 x 768p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F126	1600 x 900p	@ 59.98	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F127	2048 x 1080p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F128	2560 x 1080p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F129	3440 x 1440p	@ 24.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F130	3440 x 1440p	@ 29.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F131	4096 x 2160p	@ 25.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F132	4096 x 2160p	@ 30.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F133	4096 x 2160p	@ 60.00	Hz	4	HDMI; YUV444; YUV422; YUV420; 2CH_AUD
F134	3440 x 1440p	@ 23.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F135	4096 x 2160p	@ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F136	3840 x 2400p	@ 29.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F137	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F138	3840 x 2160p	@ 50.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F139	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 2CH_AUD
F140	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 8CH_AUD
F141	4096 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F142	4096 x 2160p	@ 50.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F143	4096 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 2CH_AUD
F144	4096 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 8CH_AUD
F145	2560 x 2048p	@ 49.97	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F146	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F147	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD

Mem	Resolution		Type	EDID features	
F148	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 8CH_AUD
F154	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F155	3840 x 2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 8CH_AUD; HDR
F156	5120 x 2160p	@ 30.00	Hz	5	HDMI; HDMI2; YUV444; YUV422; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F157	5120 x 2160p	@ 30.00	Hz	5	HDMI; HDMI2; YUV444; YUV422; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 8CH_AUD; HDR
F158	5120 x 2160p	@ 60.00	Hz	5	HDMI; HDMI2; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F159	5120 x 2160p	@ 60.00	Hz	5	HDMI; HDMI2; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 8CH_AUD; HDR

Legend

D: DVI EDID

H: HDMI EDID

U: Universal EDID, supporting many standard resolutions:

- **F29:** Universal EDID for DVI signals (no audio support).
- **F47:** HDMI EDID supporting PCM audio.
- **F48:** HDMI EDID supporting all type of audio.
- **F49:** HDMI EDID supporting all type of audio and deep color.
- **F89:** Universal EDID for analog signals (no audio support).
- **F118:** HDMI EDID supporting PCM audio and 4K@30 Hz signals.
- **F119:** HDMI EDID supporting all type of audio and 4K@30 Hz signals.


DiD (in column EDID features): with Display ID support

Please note that minor changes in the factory EDID list may be applied in further firmware versions.

12.5. Cable Wiring Guide

12.5.1. Serial Ports

The device is built with a 3-pole Phoenix connector. See the examples below of connecting to a DCE (Data Circuit-terminating Equipment) or a DTE (Data Terminal Equipment) type device:

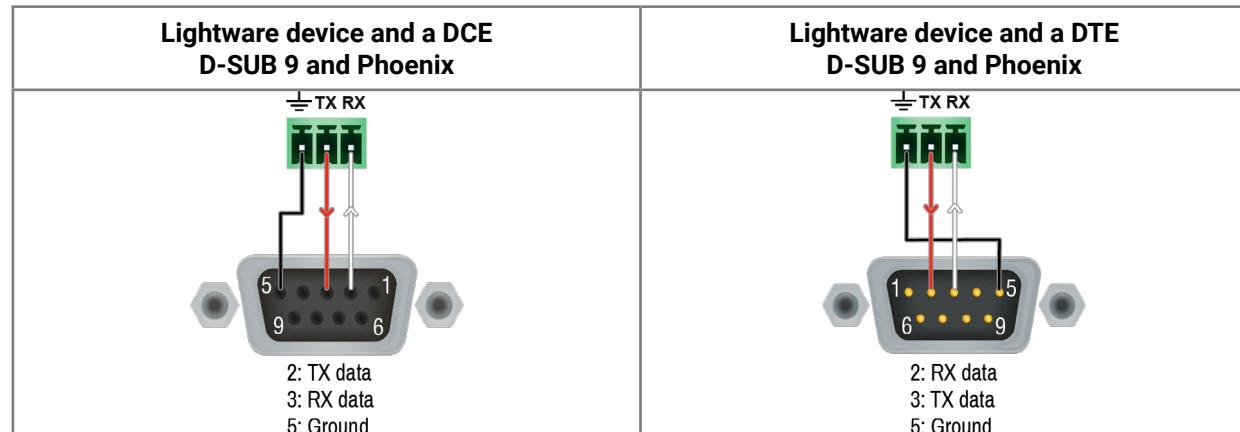

12.5.2. Audio Ports

Inputs and outputs of audio devices are symmetric or asymmetric. The main advantage of the symmetric lines is the better protection against the noise, therefore they are widely used in the professional audio industry. Symmetric audio is most often referred to as balanced audio, as opposed to asymmetric, which is referred to as unbalanced audio. Lightware products are usually built with 5-pole Phoenix connectors, so we would like to help users assembling their own audio cables. See the most common cases below.

ATTENTION: Symmetric and asymmetric lines can be linked with passive accessories (e.g. special cables), but in this case half of the line level is lost.

ATTENTION: There are numerous types of regularly used connector and cable types to connect audio devices. Please always make sure that a connector or cable fits your system before use.


ATTENTION: Never join the phase-inverted (negative, cold or -) poles (either right or left) to the ground or to each other on the output side, as this can damage the unit.

INFO: Use a galvanic isolation in case of a ground loop.

The Pinout of the 5-pole Phoenix Connector




Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+

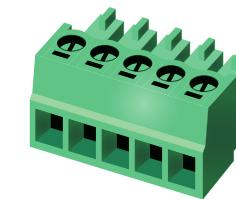


From Balanced Output to Unbalanced Input


Phoenix - 2 x 6.3 (1/4") TS

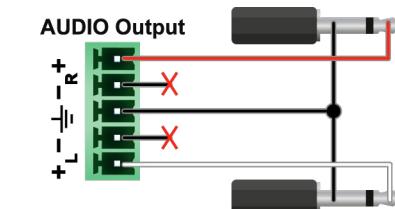

Phoenix - 2 x RCA

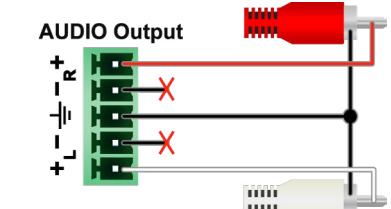


Phoenix - 3.5 (1/8") TRS

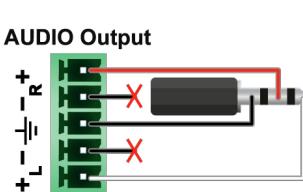


From Balanced Output to Balanced Input

Phoenix - 2 x 6.3 (1/4") TRS

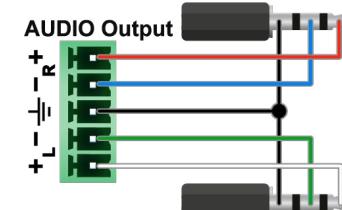


Phoenix - 2 x XLR

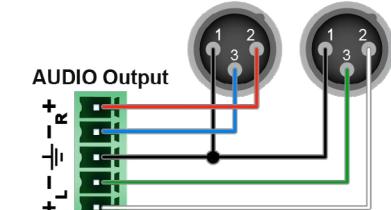

12.5.3. OCS Sensor

The switcher is supplied with a 3.81mm 3-pole 90° Reversed Gender Plug Phoenix® connector, which is used for connecting an occupancy sensor. The figure below is an example about how to connect a Leviton OCS10-MOW device. This sensor is a so-called '**active-high**' type, thus the setup requires an external 1kR pull-down resistor between the input and the ground pins. If your sensor is '**open drain**' type, the grey-colored wire and the resistor is not recommended to install.




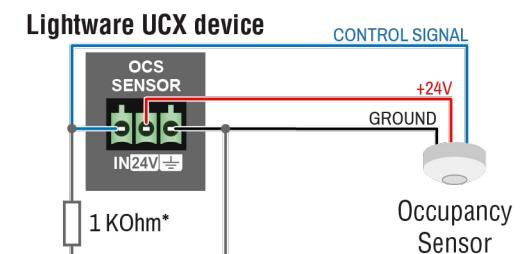


* The extra wire and the resistor are recommended only for '**active high**' type sensors.


12.6. Mechanical Drawings

INFO: DCX-2x1-HC10, DCX-3x1-HC20 and DCX-3x1-HC21 models have the same size. Dimensions are in mm.

DCX-2x1-HC10, DCX-3x1-HC20, DCX-3x1-HC21 models

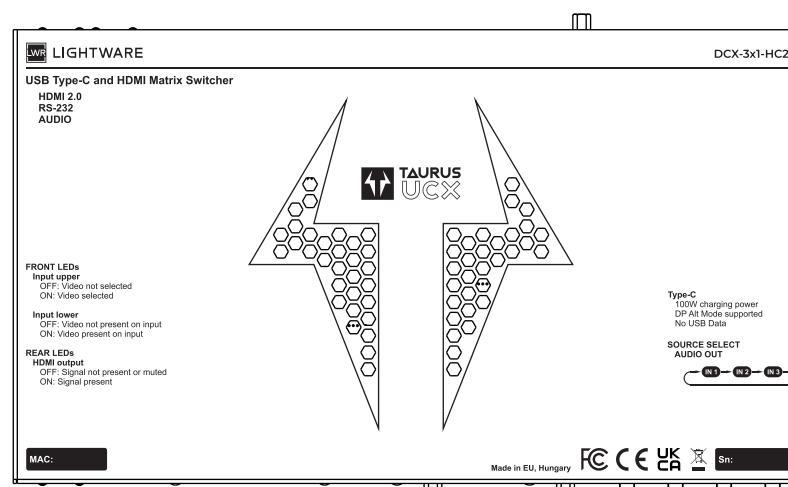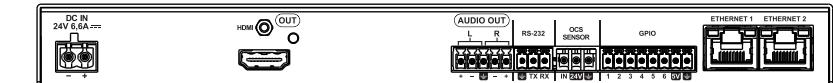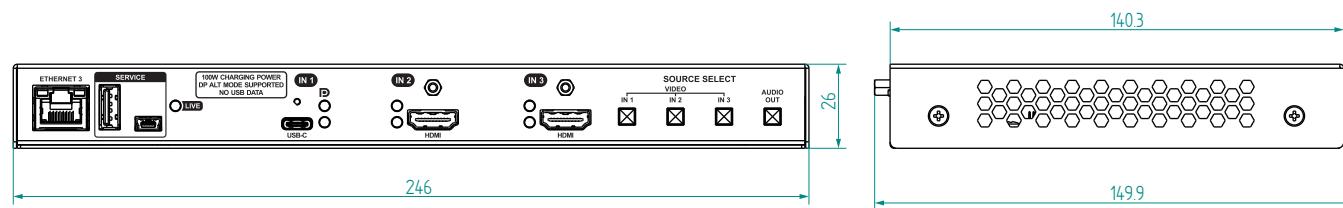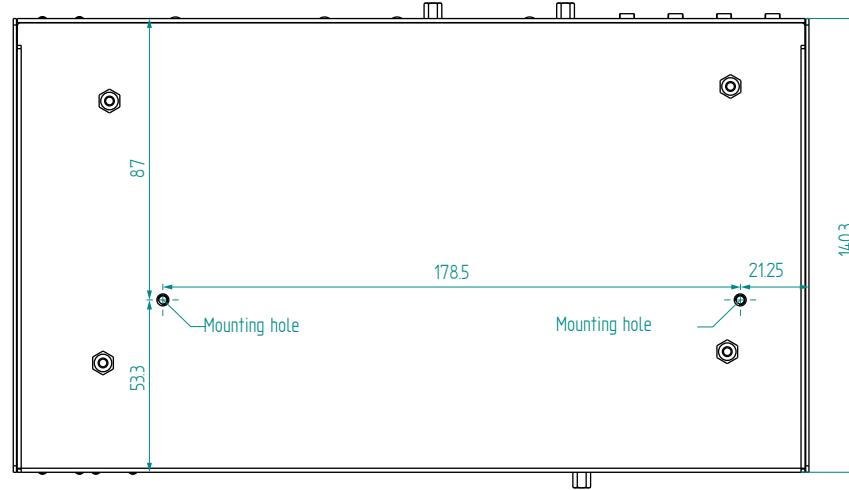

PSU-24VP3-120

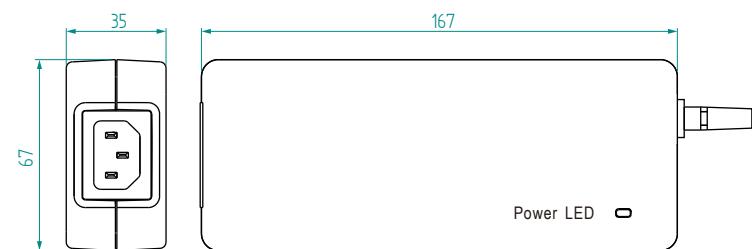

12.7. Content of the Backup File

The backup file contains numerous settings and parameters saved from the device. When the file is uploaded to a device, the following will be overwritten:

Audio / Video crosspoint settings	
Mute state, Lock state, Crosspoint state	
Autoselection (mode, port priority)	
USB ports	
Port name, Port type, Lock state, Crosspoint state, Power +5V mode	
Autoselection (mode, port priority)	
Lane management status, DisplayPort Alternate Mode policy, Power role setting, Power limit	
USB-C video parameters (HDCP mode, Output signal type, Embedded audio mute state, Power +5V mode)	
HDMI input ports	
Video port name, Audio port name, HDCP setting	
HDMI output ports	
Port name, HDCP mode, HDMI mode, Power +5V mode	
Analog audio port	
Port name, Volume, Balance	
Local serial port	
Port name, RS-232 mode, Control protocol, Baud rate, Data bits, Stop bits, Parity	
GPIO port	
Port name, Direction, Level	
OCS port	
Sensor type, Port name	
Network settings	
Port name, Port status. PHY (speed and duplexity) mode	
HTTP/HTTPS port status, HTTP/HTTPS Authentication status	
LW3 port status, Serial port status	
LARA full configuration	
Further settings	
Control lock status, Device label, Dark mode state, Dark mode delay	
User EDID data (U1-U100), Emulated EDIDs by ports	
Power supply output power limit	

12.8. Factory Default Settings

Parameter	DCX-2x1-HC10	DCX-3x1-HC20	DCX-3x1-HC21
Video port settings			
Connected source (01)	I1	I1	I1
Allowed HDCP Version (I1/I2/I3)	2.2/2.2/-	2.2/2.2/1.4	2.2/2.2/1.4
Hotplug detect mode (HPD) at input ports	auto	auto	auto
Output 5V mode / signal type	on / auto	on / auto	on / auto
Output HDCP mode	auto	auto	auto
Video autoselect	disabled		
Emulated EDID	Factory #47: Universal HDMI PCM		
Analog audio output port settings			
Volume	0 dB, 100%		
Balance	0 (center)		
Network settings			
Factory default IP address mode	DHCP		
Static IP address	192.168.0.100		
Static network mask	255.255.255.0		
Static gateway address	192.168.0.1		
Hostname	ligthware-<serialno>		
LW3 protocol	enabled		
HTTP, HTTPS	HTTP disabled, HTTPS enabled*		
HTTP, HTTPS authentication	HTTP disabled, HTTPS enabled*		
Authentication setting (user/password)	admin/Lightware10g*	admin/<unique_default_pw>*	
USB port settings			
USB-C Power Limit	100W		
DP Alternate Mode Policy	auto		
Port Power Role	dual Role		
RS-232 port settings			
RS-232 port	-	9600 BAUD, 8, N, 1	
RS-232 serial over IP	-	enabled	
GPIO port settings			
Output level	-	low	
Direction	-	input	

Occupancy sensor		
Sensor type	-	active high
Miscellaneous		
Control lock		disabled
Dark mode		disabled
Automatic fan control		enabled
User EDID memory		empty

* From FW version v2.21.0.

12.9. Firmware Release Notes

The list below shows the released firmware packages with important notes.

v2.19.0b1

Release date: 2025-07-14

New feature:

- Remote System Logging functionality is available now under the V1/MANAGEMENT/LOG/REMOTE LW3 path.
- Major LARA update: LARA 1.3.1 integration. LARA changelog is available on the LARA portal.
- New Buildroot version: 2025.02.

v2.18.0b5

Release date: 2025-06-17

New feature:

- Main_2, Main_3, and Main_4 MAC addresses are now automatically generated for every device. These MAC addresses are utilized when multiple VLANs are configured, simplifying network integration.

Bugfix:

- A key issue has been resolved: DisplayPort Alt Mode now works with laptops exhibiting improper USB-C PD communication, ensuring more reliable BYOD performance.

v2.17.2b1

Release date: 2025-03-19

Bugfix:

- A critical HDCP issue has been resolved now.

v2.17.1b4

Release date: 2025-03-04

Bugfix:

- Critical USB-C Ethernet connectivity issues have been resolved now.

v2.17.0b5

Release date: 2024-12-18

New feature:

- Major update on LARA is here: LARA 1.3 integration. Detailed LARA change log is available on the LARA portal.

v2.16.0b4

Release date: 2024-11-19

New feature:

- General Security Update: Aims to ensure compliance with security standards.
- OpenSSH Update: Addressed security vulnerabilities by upgrading to OpenSSH v9.8.
- Added support for the UCX-1x1-C40 model.

Bugfix:

- LARA Name Resolution Bug: Resolved an issue where the LARA script encountered name resolution errors, causing unexpected termination.
- LARA Redirect Bug: Fixed an issue in the Taurus Webserver where redirects caused confusion in the frontend due to unclear sources.
- Logging Improvements: Fixed an issue preventing logs from being saved to permanent storage by updating the logging configuration to ensure proper functionality.

v2.14.1b1

Release date: 2024-10-04

New feature:

- Supporting manufacturing changes.

v2.14.0b3

Release date: 2024-08-02

New feature:

- LARA 1.2.0b41 integration.
- DCX-3x1-HC20 is now officially supported.

Known issue:

- USB-C Ethernet connection instabilities.

v2.12.0b3

Release date: 2024-06-03

New feature:

- Two lane DisplayPort alternate mode is now available as well in case the four lane alternate mode setting is not supported.
- USB access is available via service port for demonstrating and piloting the StreamDeck device support in LARA.
- Critical issues have been fixed at the launch of the LARA configurations.
- A critical issue has been fixed at the USB-C Ethernet connection.
- LARA 1.2.0b40 integration.
- DCX-2x1-HC10 has LARA enabled now!
- New experimental LW3 node is available for testing now: EXPERIMENTAL/MEDIA/USB/Service. Enabled.

- UCX-4x2-HC40D is now officially supported.
- Password history is now maintained on web authentication. The past ten passwords are no longer available to use.
- FlowControl handling on serial port is now supported.

Known issue:

- USB-C Ethernet connection occasionally disconnects the connecting devices.

v2.10.0b5

Release date: 2024-02-26

New feature:

- Taurus UCX-4x3-HC40-BD is now officially supported.
- Bi-Directional Dante features are now integrated.
- LARA 1.2.0b37 integration.

v2.9.0b6

Release date: 2024-01-17

New feature:

- Disabled USB-C Ethernet ports are also disabling the ethernet bridge now.
- Time zones are available option now for timed events. A new optional NTP service has been introduced. A new LW API has been introduced for date/time settings. The device does observe now both the UTC and both the local times.
- LARA 1.2 integration.
- Complete redesign of the WebLDC's session management. A new logout button has been introduced for logging out from the session. After 120 minutes the session will be closed and the user is going to be logged out automatically. After 15 minutes of inactivity the session will be closed also. 2 minutes prior to the inactivity logout the user has to option to confirm the willingness to keep using the system.

v2.7.1b1

Release date: 2023-11-29

New feature:

- LARA 1.1.11 version update. For details please check the LARA release notes.

v2.6.0b6

Release date: 2023-09-21

New feature:

- Now, new V51 variants are supported: UCX-2x1-HC40, UCX-2x2-H40, UCX-4x2-HC40
- LARA 1.1.10 version upgrade

v2.5.0b6

Release date: 2023-08-15

New feature:

- 100W charging settings are available now on the user interface
- LARA v1.1.9 has been integrated. For more information please read the LARA release notes.

v2.4.0b2

Release date: 2023-07-03

New feature:

- DCX and HC40: 100W (20W for secondary port) or 90W (30W for secondary port) charging is supported if enabled via API call (contact support team for more information)

Bugfix:

- Fixed device freeze during boot time caused by less than ~2sec power outages.

v2.2.3b4

Release date: 2023-05-09

Bugfix:

- Fixed unintended loss of configuration settings caused by non-standard (non-RFC) hostname.
- Fixed uncertainties in Welcome Screen provisioning.

v2.2.0b4

Release date: 2023-03-30

New feature:

- From this version on DCX-2x1-HC10 is supported.
- Unique SSL certificate management has been added to Network/Services page.
- Service settings have been separated from network setup.
- The admin password with the allowance of special characters must be at least 10 characters long.
- Stability improvements.
- LARA v1.1.6 has been integrated into Taurus v2.2.0. For more information please read LARA release notes. <https://go.lightware.com/lara-release-note-v2.2>

12.10. Known Issues

Limitations of the DP-HDMI Signal Conversion

Description

Vertical white stripes, horizontal black bars and other artifacts appear on the monitor connected to the output of connecting video bar when the USB-C input of the Taurus device is disconnected. The video bars have a built-in feature that displays the last frame of the video transmission when a disconnect happens. Normally, this is just the last good full picture before the disconnect, but sometimes it will be distorted, black bars appear at the bottom of the screen and other artifacts can also be observed. This is a limitation of the DisplayPort (used as video channel through USB-C) and the HDMI signal conversion.

Affected Models

- DCX-2x1-HC10
- DCX-3x1-HC10

12.11. Hashtag Keyword List

This user manual contains keywords with hashtags (#) to help you find the relevant information as quick as possible.

The format of the keywords is the following:

#<keyword>

The usage of the keywords: use the **Search** function (Ctrl+F / Cmd+F) of your PDF reader application, type the # (hashtag) character and the wished keyword.

The #new special keyword indicates a new feature/function that has just appeared in the latest firmware or software version.

Example

#dhcp

This keyword is placed at the DHCP (dynamic IP address) setting in the front panel operation, the Lightware Device Controller (LDC) and the LW3 programmer's reference section.

The following list contains all hashtag keywords placed in the document with a short description belonging to them. The list is in **alphabetical order** by the hashtag keywords.

Hashtag Keyword ↓↑	Description
#advancedview	Advanced view / Terminal window
#alternatemode	Displayport Alternate mode settings
#analogaudio	Analog audio related settings
#authentication	Authentication settings
#autoselect	Autoselect feature settings
#balance	Balance (for analog audio) setting
#buttonlock	Front panel button lock setting
#cablediagnostics	Cable diagnostics tool in LDC
#cec	CEC-related settings
#crosspoint	Crosspoint switch setting
#devicelabel	Device label
#dhcp	Dynamic IP address (DHCP) setting
#diagnostic	Failure diagnostic related tool/information
#displayportalternatemode	Displayport Alternate mode settings
#dpaltmode	Displayport Alternate mode settings
#dualscreen	Settings for multiple displays
#edid	EDID related settings
#factory	Factory default settings
#firmwareversion	Firmware version query

Hashtag Keyword ↓↑	Description
#framedetector	Frame detector in LDC
#hdcp	HDCP-encryption related setting
#http	Http-related settings
#https	Https-related settings
#ipaddress	IP address related settings
#label	Device label
#lock	Port lock setting
#lockbutton	Front panel button lock setting
#log	System log
#mute	Port mute setting
#network	Network (IP address) related settings
#password	Password setting
#portstatus	Source/destination port status query
#power	Power sending settings
#producttype	Product type query
#reboot / #restart	Restarting the device
#rs232 / #rs-232	RS-232 related settings
#security	Network security settings
#serial	RS-232 related settings
#serialnumber	Serial number query
#signaltypes	HDMI/DVI signal type setting
#status	Status query
#switch	Crosspoint switch setting
#systemlog	System log
#terminal	Advanced view / Terminal window
#testpattern	Test pattern (no sync screen) settings
#unlock	Port unlock setting
#unmute	Port unmute setting
#usbc	USB-C interface-related settings
#volume	Volume (for analog audio) setting

12.12. Further Document Information

Symbol Legend

The following symbols and markings are used in the document:

WARNING! Safety-related information that is highly recommended to read and keep in every case!

ATTENTION: Useful information for performing a successful procedure; it is recommended to read.

DIFFERENCE: Feature or function that is available with a specific firmware/hardware version or product variant.

INFO: A notice, which contains additional information. Procedure can be successful without reading it.

DEFINITION: The short description of a feature or a function.

TIPS AND TRICKS: Ideas that you may have not known yet, but can be useful.

Navigation Buttons

Buttons in the PDF version



Navigate to the **Table of Contents**.

Go back to the **previous page**. If you clicked on a link previously, you can go back to the source page by pressing the button.

Navigate to the **Bookmark page**.

Visit www.lightware.com.

Buttons in the HTML version



Open the main **Table of Contents**.

Navigate to the **Online User Manuals** webpage.

Navigate to the **Bookmark page** in this User Manual.


Download the **PDF version** of the User Manual.

About Printing

Lightware Visual Engineering supports green technologies and eco-friendly mentality. Thus, this document is made primarily for digital usage.

If you need to print out a few pages for any reason, follow the recommended printing settings:

- Page size: A4
- Output size: Fit to page or Match page size
- Orientation: Landscape

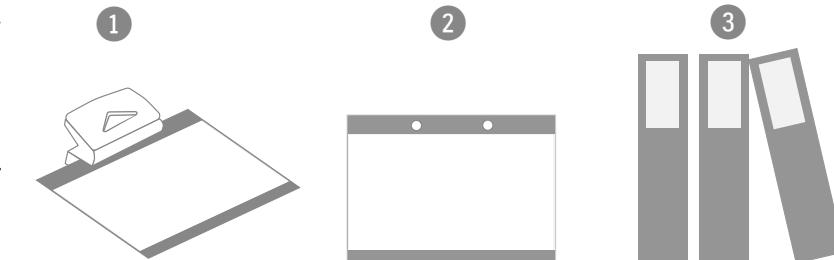

TIPS AND TRICKS: Thanks to the size of the original page, a border around the content (gray on the second picture below) makes it possible to organize the pages better. After punching holes in the printed pages, they can easily be placed into a ring folder.

12.13. Limited Warranty Statement

1. Lightware Visual Engineering PLC (Lightware) warrants to all trade and end user customers that any Lightware product purchased will be free from manufacturing defects in both material and workmanship for three (3) years from purchase unless stated otherwise below. The warranty period will begin on the latest possible date where proof of purchase/delivery can be provided by the customer. In the event that no proof can be provided (empty 'Date of purchase' field or a copy of invoice), the warranty period will begin from the point of delivery from Lightware.

1.1. 25G and MODEX product series will be subject to a seven (7) year warranty period under the same terms as outlined in this document.

1.2. If during the first three (3) months of purchase, the customer is unhappy with any aspect of a Lightware product, Lightware will accept a return for full credit.

1.3. Any product that fails in the first six (6) months of the warranty period will automatically be eligible for replacement and advanced replacement where available. Any replacements provided will be warranted for the remainder of the original unit's warranty period.

1.4. Product failures from six (6) months to the end of the warranty period will either be repaired or replaced at the discretion of Lightware. If Lightware chooses to replace the product, then the replacement will be warranted for the remainder of the original unit's warranty period.

2. The above-stated warranty and procedures will not apply to any product that has been:

2.1. Modified, repaired or altered by anyone other than a certified Lightware engineer unless expressly agreed beforehand.

2.2. Used in any application other than that for which it was intended.

2.3. Subjected to any mechanical or electrical abuse or accidental damage.

2.4. Any costs incurred for repair/replacement of goods that fall into the categories above (2.1., 2.2., 2.3.) will be borne by the customer at a pre-agreed figure.

3. All products to be returned to Lightware require a return material authorization number (RMA) prior to shipment, and this number must be clearly marked on the box. If an RMA number is not obtained or is not clearly marked on the box, Lightware will refuse the shipment.

3.1. The customer will be responsible for in-bound, and Lightware will be responsible for out-bound shipping costs.

3.2. Newly repaired or replaced products will be warranted to the end of the originally purchased product's warranty period.