

# SHARP

Projector

## P701U-W/P621U-W

---

### User's Manual

**HDMI**<sup>TM</sup>

**CHDBT**<sup>TM</sup>  
ASE

Model No.  
XP-P701U-W/XP-P621U-W

## Table of Contents

---

<b>Introduction</b> .....	iv
<b>Important Information</b> .....	v
<b>1. Check the product overview, supplied items and part names</b> .....	1
1-1. Introduction to the Projector .....	1
1-2. What's in the Box? .....	4
1-3. Part Names of the Projector .....	5
1-4. Part Names of the Remote Control .....	11
<b>2. Projecting an Image (Basic Operation)</b> .....	17
2-1. Flow of Projecting an Image .....	17
2-2. Connecting Your Computer/Connecting the Power Cord .....	18
2-3. Turning on the Projector .....	20
2-4. Selecting a Source .....	22
2-5. Adjusting the Picture Size and Position .....	23
2-6. Adjusting for Trapezoidal Distortion (Keystone Correction) .....	29
2-7. Adjusting the unit's volume .....	32
2-8. Turning off the Projector .....	33
2-9. When Moving the Projector .....	34
<b>3. Convenient Features</b> .....	35
3-1. Muting the picture and sound (AV-MUTE) .....	35
3-2. Freezing a movie (still image) .....	35
3-3. Zooming part of the picture (Partial Zoom) .....	36
3-4. Adjusting the luminance (brightness) (Light mode) .....	37
<b>4. Using the Viewer (USB-A)</b> .....	39
4-1. What you can do with the Viewer .....	39
4-2. Projecting images stored on USB flash drives (basic operation) .....	40

<b>5. Using On-Screen Menu .....</b>	42
5-1. Basic Operations of the On-Screen Menu .....	42
5-2. On-screen menu list .....	45
5-3. PICTURE .....	48
5-4. IMAGE OPTIONS .....	50
5-5. SETUP (1) .....	53
5-6. SETUP(2) .....	57
5-7. USB-A .....	69
5-8. INFORMATION .....	70
<b>6. Making Connections .....</b>	71
6-1. Connecting to Computers and Video Devices .....	71
6-2. Connecting to a Wired LAN .....	72
6-3. Connecting to a HDBaseT transmission device (sold commercially) .....	73
6-4. Portrait projection (vertical orientation) .....	75
<b>7. Connecting to a Network .....</b>	78
7-1. What You Can Do by Connecting to a Network .....	78
7-2. Enabling the projector's wired LAN function .....	78
7-3. Connecting to the projector's HTTP server .....	80
7-4. Registering the Background Logo .....	84
<b>8. Maintenance .....</b>	85
8-1. Cleaning the Lens .....	85
8-2. Cleaning the Cabinet .....	86

<b>9. Appendix .....</b>	87
9-1. Setting Up the Screen and the Projector .....	87
9-2. Compatible Input Signal List .....	91
9-3. Specifications .....	92
9-4. Cabinet Dimensions .....	95
9-5. Pin assignments and signal names of main terminals .....	96
9-6. PC Control Codes and Cable Connection .....	98
9-7. About the ASCII Control Command .....	100
9-8. Troubleshooting .....	102
9-9. Indicator Message .....	104
9-10. Troubleshooting Check List .....	107

## **Introduction**

---

Thank you for purchasing the projector.

This projector can be connected to computers, video devices, etc. to project images sharply onto a screen.

Please read this manual carefully before using your projector.

Read this manual if you have any doubts about operation or if you believe the projector may be faulty.

## **NOTES**

- (1) The contents of this manual may not be reprinted in part or whole without permission.
- (2) The contents of this manual are subject to change without notice.
- (3) Great care has been taken in the preparation of this manual; however, should you notice any questionable points, errors or omissions, please contact us.
- (4) The image shown in this manual is indicative only. If there is inconsistency between the image and the actual product, the actual product shall govern.
- (5) Notwithstanding article (3) and (4), we will not be responsible for any claims on loss of profit or other matters deemed to result from using this device.
- (6) This manual is commonly provided to all regions so they may contain descriptions that are pertinent for other countries.

# Important Information

## FCC Information (for USA only)

### Supplier's Declaration of Conformity

SHARP PROJECTOR, XP-P701U-W/XP-P621U-W

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party: SHARP ELECTRONICS CORPORATION

100 Paragon Drive, Montvale, NJ 07645

TEL: 1-888-GO-SHARP / 1-888-467-4277 [www.sharpusa.com](http://www.sharpusa.com)

### **WARNING:**

FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

U.S.A. ONLY

## Cable information

Use shielded cables to prevent interference with radio or television reception.

## Notice Concerning Electromagnetic Interference (EMI) (For other regions)

### **WARNING:**

Operation of this equipment in a residential environment could cause radio interference.

**(For Customers in U.K.)****IMPORTANT**

- The wires in this mains lead are coloured in accordance with the following code:

<b>GREEN-AND-YELLOW:</b>	<b>“Earth”</b>
<b>BLUE:</b>	<b>“Neutral”</b>
<b>BROWN:</b>	<b>“Live”</b>

- As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:
- The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter **E** or by the safety earth symbol  $\frac{1}{3}$  or coloured green or green-and-yellow.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter **N** or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter **L** or coloured red.
- Ensure that your equipment is connected correctly. If you are in any doubt consult a qualified electrician.

**“WARNING: THIS APPARATUS MUST BE EARTHED.”**

**Information on the Disposal of this Equipment and its Batteries**

IF YOU WISH TO DISPOSE OF THIS EQUIPMENT OR ITS BATTERIES, DO NOT USE THE ORDINARY WASTE BIN, AND DO NOT PUT THEM INTO A FIREPLACE!

Used electrical and electronic equipment and batteries should always be collected and treated SEPARATELY in accordance with local law.

Separate collection promotes an environment-friendly treatment, recycling of materials, and minimizing final disposal of waste. IMPROPER DISPOSAL can be harmful to human health and the environment due to certain substances! Take USED EQUIPMENT to a local, usually municipal, collection facility, where available.

Remove USED BATTERIES from equipment, and take them to a battery collection facility; usually a place where new batteries are sold.

If in doubt about disposal, contact your local authorities or dealer and ask for the correct method of disposal.

ONLY FOR USERS IN THE EUROPEAN UNION, AND SOME OTHER COUNTRIES; FOR INSTANCE NORWAY AND SWITZERLAND: Your participation in separate collection is requested by law.

The symbol shown above appears on electrical and electronic equipment and batteries (or the packaging) to remind users of this. If 'Hg' or 'Pb' appears below the symbol, this means that the battery contains traces of mercury (Hg) or lead (Pb), respectively.

Users from PRIVATE HOUSEHOLDS are requested to use existing return facilities for used equipment and batteries.

Batteries are collected at points of sale. Return is free of charge.

If the equipment has been used for BUSINESS PURPOSES, please contact your SHARP dealer who will inform you about take-back. You might be charged for the costs arising from take-back.

Small equipment (and small quantities) might be taken back by your local collection facility.

For Spain: Please contact the established collection system or your local authority for take-back of your used products.

**(for Germany only)****Machine Noise Information Regulation - 3. GPSGV,**

The highest sound pressure level is less than 70 dB (A) in accordance with EN ISO 7779.

**Information of the AUDIO OUT mini jack**

The AUDIO OUT mini jack does not support earphone/headphone terminal.

## Laser Safety Caution

### **WARNING**

CLASS 1 LASER PRODUCT [IEC 60825-1:2014]

CLASS 1 CONSUMER LASER PRODUCT OF EN 60825-1:2014+A11:2021 (For EU and UK)

- The laser module is equipped in this product. Use of controls or adjustments of procedures other than those specified herein may result in hazardous radiation exposure.  
Laser energy exposure near aperture may cause burns.

- This product is classified as Class 1 of IEC 60825-1:2014.
- For EU and UK, EN 60825-1:2014+A11:2021 and EN 50689:2021 are also conformed.
- Obey the laws and regulations of your country in relation to the installation and management of the device.

### **For USA**

Complies with 21 CFR 1040.10 and 1040.11 except for conformance as a Risk Group 2 LIP as defined in IEC 62471-5:Ed. 1.0. For more information see Laser Notice No. 57, dated May 8, 2019.

### **WARNING**

- Do not allow to look into the projector beam at any distance from the projector. An adult should supervise the children to prevent exposure risks.
- Check that there is no one looking at the lens, when using the remote control for starting the projector.
- Do not look at the projected light using optical devices(binoculars, telescopes, magnifying glasses, reflectors, etc).
- [ WARNING: MOUNT ABOVE THE HEADS OF CHILDREN. ]  
The use of a ceiling mount is recommended with this product to place it above the eyes of children.

- Outline of laser emitted from the built-in light module:
  - Wave length: 449 - 461 nm
  - Maximum power: 180 W (P701U-W), 129 W (P621U-W)

### **Light Module**

- A light module containing multiple laser diodes is equipped in the product as the light source.
- These laser diodes are sealed in the light module. No maintenance or service is required for the performance of the light module.
- End user is not allowed to replace the light module.
- Contact qualified distributor for light module replacement and further information.

### **Risk groups**

This projector is classified as risk group 2 of IEC/EN 62471-5:2015.

### **WARNING**

As with any bright light source, do not stare into the beam, RG2 IEC/EN 62471-5:2015.

## About the symbols

To ensure safe and proper use of the product, this manual uses a number of symbols to prevent injury to you and others as well as damage to property.

The symbols and their meanings are described below. Be sure to understand them thoroughly before reading this manual.

	<b>WARNING</b>	Failing to heed this symbol and handling the product erroneously could result in accidents leading to death or major injury.
	<b>CAUTION</b>	Failing to heed this symbol and handling the product erroneously could result in personal injury or damage to surrounding property.

## Examples of symbols

	This symbol indicates you should be careful of electric shocks.
	This symbol indicates you should be careful of high temperatures.
	This symbol indicates something that must be prohibited.
	This symbol indicates something that must not be got wet.
	This symbol indicates you should not touch with wet hands.
	This symbol indicates something that must not be disassembled.
	This symbol indicates things you must do.
	This symbol indicates that the power cord should be unplugged from the power outlet.

## Safety Cautions

### **WARNING**


#### **Projected light**



**PROHIBITED**

##### **Projected light and the pictogram/label indicated on the cabinet**

- Do not look into the projector's lens. Strong light that could damage your vision is projected when the projector is operating. Laser energy exposure near aperture may cause burns. Be especially careful when children are around.
- Do not look at the projected light using optical devices (magnifying glasses, reflectors, etc.). Doing so could result in vision impairment.
- Check that there is no one looking at the lens within the projection range before turning on the projector.
- Do not allow children to operate the projector alone. When a child is operating the projector an adult should always be present and watch the child carefully.
- The below pictogram, that is indicated near the lens on the cabinet, describes looking into the projector is prohibited.

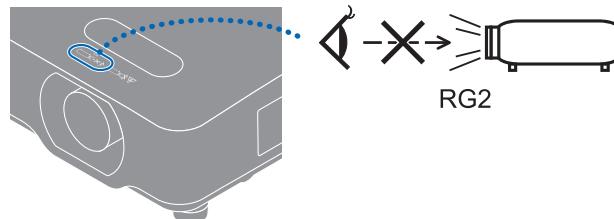

**Continue to next page**

# ⚠ WARNING

- The following labels are stuck on the projector.



Label 1


Laser explanatory label



Label 2

FDA additional warning label  
(For USA only)

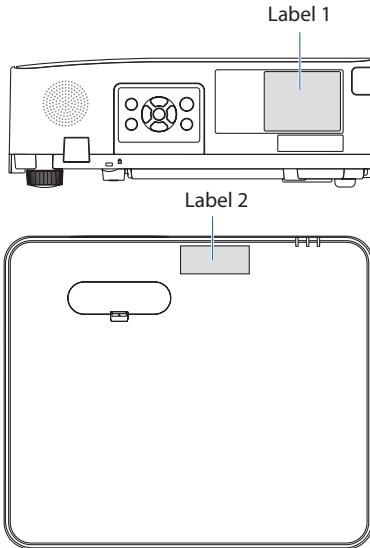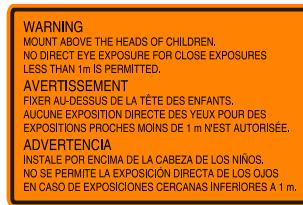

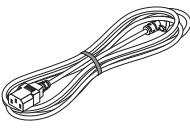 <b>WARNING</b>	
<b>Power supply</b>	
 <b>REQUIRED</b>	<p><b>Use a suitable voltage power supply.</b></p> <ul style="list-style-type: none"> <li>This projector is designed to be used with a 100–240 VAC, 50/60 Hz power supply. Before using the projector, check that the power supply to which the projector is to be connected meets these requirements.</li> <li>Use a power outlet as the projector's power supply. Do not connect the projector directly to electrical light wiring. Doing so is dangerous.</li> </ul>
 <b>MUST BE EARTHED</b>	<p><b>Connecting the power cord to earth</b></p> <ul style="list-style-type: none"> <li>This equipment is designed to be used in the condition of the power cord connected to earth. If the power cord is not connected to the earth, it may cause electric shock. Please make sure the power cord is connected to the wall outlet directly and earthed properly. Do not use a 2-pin plug converter adapter.</li> <li>Be sure to connect the projector and the computer (signal source) to the same earth point. If the projector and the computer (signal source) will be connected to different earth points, fluctuations in the earth potential may cause fire or smoke.</li> </ul>
 <b>REQUIRED</b>	<p><b>Handling the power cord</b></p> <ul style="list-style-type: none"> <li>Please use the power cord supplied with this projector. If the supplied power cord does not satisfy requirements of your country's safety standard, and voltage and current for your region, make sure to use the power cord that conforms to and satisfies them.</li> <li>  The power cord you use must be approved by and comply with the safety standards of your country. Please refer to the page 93 about the power cord specification.  For selecting an appropriate power cord, please check rated voltage for your region by yourself. </li> <li>The power cord included with this projector is exclusively for use with this projector. For safety, do not use it with other devices.</li> </ul>
 <b>PROHIBITED</b>	

 <b>WARNING</b>	
 <b>HAZARDOUS VOLTAGE</b>	<ul style="list-style-type: none"> <li>Handle the power cord with care. Damaging the cord could lead to fire or electric shock. <ul style="list-style-type: none"> <li>- Do not place heavy objects on the cord.</li> <li>- Do not place the cord under the projector.</li> <li>- Do not cover the cord with a rug, etc.</li> <li>- Do not scratch or modify the cord.</li> <li>- Do not bend, twist or pull the cord with excessive force.</li> <li>- Do not apply heat to the cord.</li> </ul> </li> </ul> <p>Should the cord be damaged (exposed core wires, broken wires, etc.), ask your dealer to replace it.</p> <ul style="list-style-type: none"> <li>Do not touch the power plug should you hear thunder. Doing so could result in electric shock.</li> <li>Do not connect or disconnect the power cord with wet hands. Doing so could result in electric shock.</li> </ul>
 <b>DO NOT TOUCH WITH WET HANDS</b>	
<b>Installation</b>	
 <b>PROHIBITED</b>	<p><b>Do not use in places such as those described below.</b></p> <ul style="list-style-type: none"> <li>Do not use in places such as those described below. Doing so could lead to fire or electric shock. <ul style="list-style-type: none"> <li>- Shaky tables, inclined surfaces or other unstable places.</li> <li>- Poorly ventilated spaces.</li> <li>- Near a radiator, other heat sources, or in direct sunshine.</li> <li>- Continual vibration areas.</li> <li>- Humid, dusty, steamy, or oily areas.</li> <li>- An environment where there are corrosive gases (sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia, ozone, etc.).</li> <li>- Outdoors.</li> <li>- High-temperature environment where humidity changes rapidly and condensation is likely to occur.</li> </ul> </li> <li>Do not use in places such as those described below where the projector could get wet. Doing so could lead to fire or electric shock. <ul style="list-style-type: none"> <li>- Do not use in the rain or snow, on a seashore or waterfront, etc.</li> <li>- Do not use in a bathroom or shower room.</li> <li>- Do not install under equipment that discharges water, such as air conditioners.</li> <li>- Do not place vases or potted plants on the projector.</li> <li>- Do not place cups, cosmetics or medicines on the projector.</li> </ul> </li> </ul>
 <b>DO NOT WET</b>	
 <b>UNPLUG THE POWER CORD</b>	

 <b>WARNING</b>	
 <b>CAUTION</b>	<p><b>Installing suspended from the ceiling</b></p> <ul style="list-style-type: none"> <li>Consult your dealer for installing the projector on the ceiling. Special skills are required for ceiling installation.</li> <li>DO NOT perform installation work by people other than installers. Doing so may result in the projector falling and causing injury.</li> <li>We are not liable for any accident or/and damage resulting from improper installation or handling, misuse, modification, or natural disasters.</li> <li>When installed suspended from the ceiling, etc. do not hang from the projector. The projector could drop and cause injury.</li> <li>When installing suspended from the ceiling, use a power outlet that is within reach so the power cord can be easily plugged and unplugged.</li> </ul>
<b>On use</b>	
 <b>PROHIBITED</b>  <b>UNPLUG THE POWER CORD</b>	<p><b>Do not place objects inside the projector.</b></p> <ul style="list-style-type: none"> <li>Do not insert or drop metal or combustible objects or other foreign materials into the projector from the vents. Doing so could lead to fire or electric shock. Be particularly careful if there are children in the home. Should a foreign object get inside the projector, first turn off the projector's power, then unplug the power cord from the power outlet and contact your dealer.</li> </ul>
 <b>UNPLUG THE POWER CORD</b>	<p><b>Unplug the power cord if the projector malfunctions.</b></p> <ul style="list-style-type: none"> <li>Should the projector emit smoke or strange odors or sounds, or if the projector has been dropped or the cabinet broken, turn off the projector's power, then unplug the power cord from the power outlet. Otherwise it may cause not only fire or electric shock but also serious damage to your eyesight or burns. Contact your dealer for repairs.</li> </ul> <p>Never try to repair the projector on your own. Doing so is dangerous.</p>
 <b>DO NOT DISASSEMBLE</b>	<p><b>Do not disassemble the projector.</b></p> <ul style="list-style-type: none"> <li>Do not remove or open the projector's cabinet. Also, do not modify the projector. There are high voltage areas in the projector. It may cause fire, electric shock, or laser light leakage, resulting in serious damage to your eyesight or burns.</li> </ul> <p>Have qualified service personnel perform inspection, adjustments and repairs of the interior.</p>

<b>⚠ WARNING</b>	
 <b>PROHIBITED</b>   <b>CAUTION FOR HIGH TEMPERATURE</b>	<p><b>Do not place objects in front of the lens while the projector is operating.</b></p> <ul style="list-style-type: none"><li>Do not leave the lens cap on the lens while the projector is operating. The lens cap could get hot and be warped.</li><li>Do not place objects in front of the lens that obstruct the light while the projector is operating. The object could get hot and be broken or catch fire.</li><li>The below pictogram indicated on the cabinet means the precaution for avoiding to place objects in front of the projector lens.</li></ul> 
 <b>PROHIBITED</b>	<p><b>When cleaning the projector</b></p> <ul style="list-style-type: none"><li>Do not use flammable gas sprays to remove dust from the lens, cabinet, etc. Doing so could lead to fire.</li></ul>
 <b>PROHIBITED</b>	<p><b>Do not use in high security locations.</b></p> <ul style="list-style-type: none"><li>Usage of the product must not be accompanied by fatal risks or dangers that, could lead directly to death, personal injury, severe physical damage or other loss, including nuclear reaction control in nuclear facility, medical life support system, and missile launch control in a weapon system.</li></ul>

 <b>CAUTION</b>	
<b>Power cord</b>	
 <b>REQUIRED</b>	<p><b>Handling the power cord</b></p> <ul style="list-style-type: none"> <li>• The projector should be installed close to an easily accessible power outlet.</li> <li>• When connecting the power cord to the projector's AC IN terminal, make sure the connector is fully and firmly inserted. Loose connection of the power cord could lead to fire or electric shock.</li> </ul>
 <b>REQUIRED</b>  <b>UNPLUG THE POWER CORD</b>	<p><b>Handling the power cord by following below to avoid fire or electric shock</b></p> <ul style="list-style-type: none"> <li>• When disconnecting the power cord, pull the power cord out by holding onto its plug.</li> <li>• Unplug the power cord from the power outlet before cleaning the product or when not planning to use the product for an extended time.</li> <li>• When the power cord or plug is heat or damaged, unplug the power cord from the power outlet, and contact your dealer.</li> </ul>
 <b>REQUIRED</b>	<p><b>Periodically clean dust and other debris from the power plug</b></p> <ul style="list-style-type: none"> <li>• Failure to do so could result in fire or electric shock.</li> </ul>
 <b>REQUIRED</b>	<p><b>Disconnect power cords and other cables before moving the projector</b></p> <ul style="list-style-type: none"> <li>• Before moving the product, make sure the product power is off, then unplug the power cord from the power outlet and check that all cables connecting the product to other devices are disconnected.</li> </ul>
 <b>PROHIBITED</b>	<p><b>Do not use the power cord with a power tap</b></p> <ul style="list-style-type: none"> <li>• Adding an extension cord may lead to fire as a result of overheating.</li> </ul>

 <b>CAUTION</b>	
<b>On use</b>	
 <b>PROHIBITED</b>	<p><b>Do not use on networks subject to overvoltage.</b></p> <ul style="list-style-type: none"> <li>• Connect the projector's HDBaseT port and LAN port to a network for which there is no risk of overvoltage being applied.</li> </ul> <p>Overvoltage applied to the HDBaseT or LAN port could result in electric shock.</p>
 <b>REQUIRED</b>	<p><b>Lens shift, focus and zoom operations</b></p> <ul style="list-style-type: none"> <li>• When shifting the lens or adjusting the focus or zoom, do so from either behind or the side of the projector. If adjustments are performed from the front, your eyes could be exposed to strong light and get injured.</li> <li>• Keep your hands away from the lens area when performing the lens shift operation. If not, your fingers could get caught in the gap between the cabinet and the lens.</li> </ul>
 <b>PROHIBITED</b>	<p><b>Handling batteries</b></p> <p>Incorrect usage of batteries can result in leaks or bursting.</p> <ul style="list-style-type: none"> <li>• Use the specified batteries only.</li> <li>• Insert batteries matching the (+) and (−) signs on each battery to the (+) and (−) signs of the battery compartment.</li> <li>• Do not mix battery brands.</li> <li>• Do not combine new and old batteries. This can shorten battery life or cause liquid leakage of batteries.</li> <li>• Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.</li> </ul> <p>If leaked battery fluid gets on your skin or clothing, rinse immediately and thoroughly. If it gets into your eye, bathe your eye well rather than rubbing and seek medical treatment immediately. Leaked battery fluid that gets into your eye or your clothing may cause a skin irritation or damage your eye.</p> <ul style="list-style-type: none"> <li>• If you will not use the remote control for a long time, remove the batteries.</li> <li>• Leaving a battery in an extremely high temperature surrounding environment, or a battery subject to extremely low air pressure, that can result in an explosion or the leakage of flammable liquid or gas.</li> <li>• Properly dispose of depleted batteries. Disposal of a battery into water, fire, or a hot oven, or mechanically crushing, cutting, or modifying a battery can result in an explosion.</li> <li>• Do not short-circuit the batteries.</li> <li>• Do not charge the batteries. The batteries provided are not rechargeable.</li> <li>• Contact your dealer or local authorities when disposing of batteries.</li> </ul>

 <b>CAUTION</b>	
 <b>PROHIBITED</b>  <b>CAUTION FOR HIGH TEMPERATURE</b>	<p><b>About the vents</b></p> <ul style="list-style-type: none"> <li>Do not obstruct the projector's vents. Also, do not place such soft objects as paper or cloths underneath the projector. Doing so could lead to fire. Leave sufficient space between the place where the projector is installed and its surroundings. (→ page <a href="#">xxi</a>)</li> <li>Do not touch the exhaust vent area while projecting or immediately after projecting images. The exhaust vent area may be hot at this time and touching it could cause burns.</li> </ul>
 <b>PROHIBITED</b>	<p><b>Moving the projector</b></p> <ul style="list-style-type: none"> <li>When moving the projector, do not hold the lens section. The focus ring could turn, causing the projector to drop and resulting in injury. Also, if you put your hand on the gap between the cabinet and the lens, the projector may be damaged, falling and causing injury.</li> <li>Do not put your hand into the recess of the connection terminal. The projector could be damaged or fall down, resulting in injuries.</li> </ul>
 <b>PROHIBITED</b>	<p><b>Do not push or climb on the product. Do not grab or hang onto the product. Do not rub or tap the product with hard objects.</b></p> <ul style="list-style-type: none"> <li>The product may fall, causing damage to the product or personal injury.</li> </ul>
 <b>REQUIRED</b>	<p><b>Avoid locations with extreme temperatures and humidity</b></p> <ul style="list-style-type: none"> <li>Failure to do so could lead to fire or electric shock or damage to the projector. The usage environment for this projector is as follows: <ul style="list-style-type: none"> <li>The operating temperature: 0°C to 45°C / 32°F to 113°F / humidity: 20 to 80% (without condensation)</li> <li>The storage temperature: -10°C to 50°C / 14°F to 122°F / humidity: 20 to 85% (without condensation)</li> </ul> </li> </ul>
<p><b>Inspections and Cleaning</b></p>	
 <b>REQUIRED</b>	<p><b>Inspecting the projector and cleaning the inside</b></p> <ul style="list-style-type: none"> <li>Consult with your dealer about once per year for cleaning of the inside of the projector. Dust could accumulate inside of the projector if it is not cleaned for extended periods of time, leading to fires or malfunction.</li> </ul>

## **Notes on installation and maintenance**

Do not install or store in such places as those described below.

- Locations that amplify vibrations and impacts

If installed in places where the vibrations from power sources and the like are conveyed, or in vehicles or on vessels, etc. the projector could be affected by vibrations or shocks that may damage internal parts and lead to malfunction.

- Close to high voltage power lines and power sources

It could disrupt the unit.

- Places where strong magnetic fields are generated

Doing so could lead to malfunction.

- Outdoors and places with humid or dust

Places exposed to oil smoke or steam

Places where corrosive gases are generated

Attached substances such as oil, chemicals and moisture may cause deformation or cracks of the cabinet, corrosion of the metal parts, or malfunction.

## **Precautions when installing on the ceiling (To the dealer and the installer)**

1. To prevent the projector from falling, install it on the ceiling in a way with sufficient strength to withstand the combined weight of the projector and the ceiling mount unit for an extended period of time.

2. When installing the projector on the ceiling, be sure to do so correctly in accordance with the installation manual for the Ceiling Mount Unit. Be sure to use the fixed metal fittings and to tighten the screws securely.

3. To prevent the projector from falling, use fall prevention wires.

- Use commercially available metal fittings to join the robust part of a building or construction and the security bar of the projector with the fall prevention wires.
- Use commercially available metal fittings and fall prevention wires that have sufficient strength to withstand the combined weight of the projector and the ceiling mount unit.
- Slightly slack off the fall prevention wires so as not to put a load on the projector.
- Refer to the "Part Names of the Projector" for the location of the security bar. (→ page 5)

## **Securing personal information**

Personally identifiable information, such as IP addresses, may be saved on the projector.

Before transferring or disposing of the projector, clear this data by performing [RESTORE FACTORY SETTINGS] on the on-screen menu.

## **Cautions for ensuring the projector's performance**


- If intense light like laser beams enters from the lens, it could lead to malfunction.
- Consult your dealer before using in places where much cigarette smoke or dust is present.
- When the same still image is projected for a long period of time with a computer, etc. the pattern of the image may remain on the screen after the projection is stopped, but it will disappear after a while. This happens due to the properties of liquid crystal panels, and is not a malfunction. We recommend using a screensaver on the computer side.
- When using the projector at altitudes of about 5500 feet/ 1600 meters or higher, be sure to set the [FAN MODE] to [HIGH ALTITUDE]. If not, the inside of the projector may get hot, leading to malfunction.
- When the projector is used at high altitudes (places where the atmospheric pressure is low), it may be necessary to replace the optical parts sooner than usual.
- About moving the projector
  - Be sure to mount the included lens cap to protect the lens from scratches.
  - Do not subject the projector to vibrations or strong shocks.The projector could be damaged otherwise.
- Do not use the tilt feet for purposes other than adjusting the projector's tilt.  
Improper handling, such as carrying the projector by the tilt feet or using it leaned against a wall, could lead to malfunction.
- Do not touch the surface of the projection lens with bare hands.  
Fingerprints or dirt on the surface of the projection lens will be enlarged and projected on the screen. Do not touch the surface of the projection lens.
- Do not unplug the power cord from the projector or the power outlet while projecting. Doing so could cause deterioration of the projector's AC IN terminal or power plug contact. To interrupt the AC power supply while images are being projected, use a breaker, etc.
- About handling of the remote control
  - The remote control will not work if the projector's remote signal sensor or the remote control's signal transmitter is exposed to strong light or if there are obstacles between them that obstruct the signals.
  - Operate the remote control from within 23 feet / 7 meters from the projector, pointing it at the projector's remote signal sensor.
  - Do not drop the remote control or handle it improperly.
  - Do not let water or other liquids get on the remote control. Should the remote control get wet, wipe it off immediately.
  - Avoid using in hot and humid places as far as possible.
- Take measures to prevent external light from shining on the screen.  
Make sure only the light from the projector shines on the screen. The less external light on the screen, the higher the contrast and the more beautiful the images.
- About screens  
Images will not be clear if there is dirt, scratches, discoloration, etc. on your screen. Handle the screen with care, protecting it from volatile substances, scratches and dirt.

## Clearance for Installing the Projector

- When installing the projector, keep sufficient space around it, as described below. If not, the hot exhaust emitted from the projector may be taken back in.

Also, make sure no wind from an air-conditioner hits the projector.

The projector's heat control system may detect an abnormality (temperature error) and automatically shut off the power.

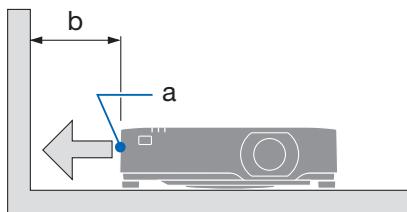

a: Exhaust vent / b: 20 cm/8" or greater

NOTE:

- In the above figure, it is assumed that there is sufficient space above the projector. There is also an intake vent on the back. Leave about 10 cm or more space behind, and even more space for installing the cables.

## About Copyright of original projected pictures:

Please note that using this projector for the purpose of commercial gain or the attraction of public attention in a venue such as a coffee shop or hotel and employing compression or expansion of the screen image with the following functions may raise concern about the infringement of copyrights which are protected by copyright law.

[ASPECT RATIO], [KEYSTONE], Magnify feature and other similar features.

## Power management function

The projector has power management functions. To reduce power consumption, the power management functions (1 and 2) are factory preset as shown below. To control the projector from an external device via a LAN or serial cable connection, use the on-screen menu to change the settings for 1 and 2.

### 1. STANDBY MODE (Factory preset: NORMAL)

To control the projector from an external device, select [NETWORK STANDBY] or [SLEEP] for [STANDBY MODE].

### 2. POWER MANAGEMENT (Factory preset: READY)

To control the projector from an external device, select [OFF] for [POWER MANAGEMENT].

NOTE:

- If [POWER MANAGEMENT] mode is set to [READY] or [SHUT DOWN], the projector will automatically turn off if no input signal is received or the projector is not operated within the time set for [TIMER] and [READY COUNTDOWN] in the same settings.

**REGISTER YOUR PROJECTOR! (for residents in the United States and Mexico)**

Please take time to register your new projector. This will activate your limited parts and labor warranty and InstaCare service program.

Visit our website at <https://www.sharpnecdisplays.us/product-registration> and submit your completed form online.

Upon receipt, we will send a confirmation letter with all the details you will need to take advantage of fast, reliable warranty and service programs from the industry leader, Sharp Imaging and Information Company of America.

**Registration Information and Software License**

- Microsoft and Windows are either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance.
- Trademark PJLink is a trademark applied for trademark rights in Japan, the United States of America and other countries and areas.
- Blu-ray is a trademark of Blu-ray Disc Association.
- CRESTRON and CRESTRON ROOMVIEW are trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and other countries.
- AMX is a registered trademark of AMX LLC of the United States.
- Other product and company names mentioned in this user's manual may be the trademarks or registered trademarks of their respective holders.
- Virtual Remote Tool uses WinI2C/DDC library, © Nicomsoft Ltd.
- GPL/LGPL Software Licenses

The product includes software licensed under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), and others.

For more information on each software, visit our web site.

[https://www.sharp-nec-displays.com/dl/en/pj\\_manual/lineup.html](https://www.sharp-nec-displays.com/dl/en/pj_manual/lineup.html)

# 1. Check the product overview, supplied items and part names

---

## 1-1. Introduction to the Projector

This section introduces you to your new projector and describes the features and controls.

### General

- **Liquid crystal type high brightness/high resolution projector**

Model name	Brightness	Resolution	Aspect ratio
P701U-W	7000 lm (Center 7400 lm)	WUXGA (1920 × 1200 pixels)	16:10
P621U-W	6200 lm (Center 6500 lm)	WUXGA (1920 × 1200 pixels)	16:10

It also supports input signals with an aspect ratio of 21:9.

- **A proprietary sealed structure that achieves highly dust-proof performance**

Due to its excellent dust-proof performance, the projector is not equipped with a filter. Filter replacement is therefore unnecessary.

- **Silent design utilizing a sealed structure**

A silent design with no irritating fan noise even in a quiet conference room or classroom.

- **Stable, high-definition image projection for extended periods of time**

The sealed structure prevents dust from adhering to optical components, enabling stable, high-definition image projection for long periods of time.

### Light source • Brightness

- **A long-life laser diode is equipped in the light module**

The product can be operated at low cost because the laser light source can be used for a long time without requiring replacement or maintenance.

- **Brightness can be adjusted within a wide range**

Unlike with ordinary light sources, the brightness can be adjusted from 50 to 100% in 1% increments.

- **[CONSTANT BRIGHTNESS] mode**

Brightness normally decreases with use, but by selecting [CONSTANT BRIGHTNESS] mode, the projector automatically controls the output from the light module according to the light module used time for maintaining constant brightness.

### Installation

- **360° installation and portrait projection**

The projector can be installed at any angle from 0° to 360° in both the vertical and horizontal direction. When installing the projector in a tilted position, use brackets of sufficient strength. Portraits can also be projected with the projection screen tilted 90°. Be sure to assemble and install a dedicated stand.

- **Lens shift mechanism for adjusting the position of the projected image easily**

The position of the projected image is moved by turning the two dials on the projector cabinet top, one for the vertical direction and another for the horizontal direction.

### Videos

- **2 HDMI inputs, HDBaseT, and other input terminals**

The projector comes equipped with two HDMI input terminals and an HDBaseT terminal. HDMI input terminal on this product supports HDCP. HDBaseT is a connection standard for home appliances that is established by the HDBaseT Alliance.

- **[VIEWER] function to project still images saved in a USB memory**

When you insert a commercially available USB memory containing the picture into the USB port of the projector (Type A), the images on the USB can be projected by the unit. By doing this, you can make a presentation without using a personal computer.

### Network

- **Compatible with wired LAN**

Equipped with a LAN port (RJ-45), the projector can be connected to a wired LAN to transmit images from a computer to this unit or to control this unit from the computer.

- **CRESTRON ROOMVIEW compatibility**

The projector supports CRESTRON ROOMVIEW, allowing multiple devices connected in the network to be managed and controlled from a computer.

- **Convenient software applications**

Compatible with our software applications (NaViSet Administrator 2, NaViSet Administrator Server Edition, Virtual Remote Tool, etc.). The projector can be controlled from a computer connected via a wired LAN.

- NaViSet Administrator 2, NaViSet Administrator Server Edition

You can monitor the status of the projector and control a variety of functions.

- Virtual Remote Tool

A virtual remote control is displayed on the computer screen to perform simple controls such as turning the projector on/off, switching signals, etc.

Please visit our website for downloading each software.

URL: <https://www.sharp-nec-displays.com/dl/en/index.html>

### Energy-saving

- **0.31 W (100-130 VAC)/0.38 W (200-240 VAC) in standby condition with energy saving technology**

Selecting [NORMAL] for [STANDBY MODE] from the menu can put the projector in power-saving mode.

NORMAL: 0.31 W (100–130 VAC) / 0.38 W (200–240 VAC)

NETWORK STANDBY: 0.8 W (100–130 VAC) / 1.0 W (200–240 VAC)

- **[LIGHT MODE] and "Carbon Meter" display**




Three [LIGHT MODE] options can be selected according to the purpose of use. [LIGHT ADJUST] can also be used to reduce output power and control energy consumption. The energy-saving effect from that time will be factored into the amount of reduced CO<sub>2</sub> emissions and displayed in the confirmation message when turning the power off.

## 1. Check the product overview, supplied items and part names


### 1-2. What's in the Box?

Make sure your box contains everything listed. If any pieces are missing, contact your dealer. Please save the original box and packing materials if you ever need to ship your projector.

#### Projector

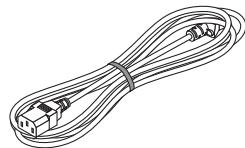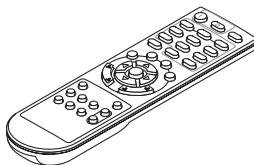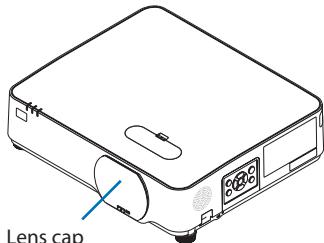

Plug type	
For USA	For EU
	
	

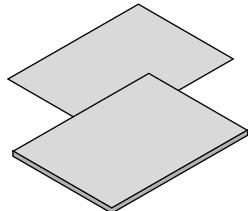

For USA only


- Limited warranty**

For customers in Europe:

You will find our current valid Guarantee Policy on our Web Site:  
<https://www.sharpnecdisplays.eu>

### 1-3. Part Names of the Projector

#### Front

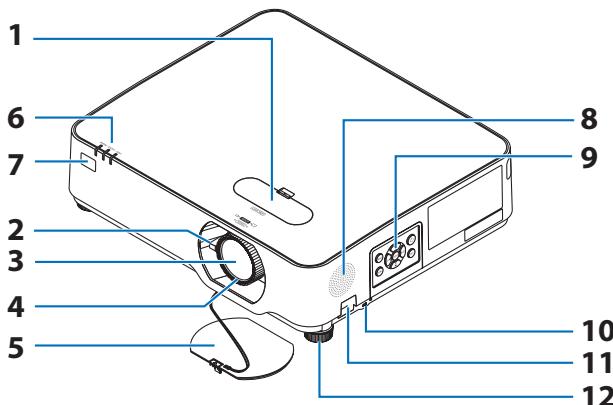

#### 1. Lens shift cover

Removing the cover provides access to a horizontal dial and a vertical dial. Turn these dials to adjust the position of the projection screen.

(→ page 24)

#### 2. Zoom lever

Adjusts the size of the projected image.

(→ page 27)

#### 3. Lens

The picture is projected from here.

#### 4. Focus ring

Adjusts the picture's focus. (→ page 26)

#### 5. Lens Cap

Protects the lens. Always keep it detached during projection.

#### 6. Indicators

The indicators show the projector's operating status. (→ pages 8, 104)

#### 7. Remote control signal sensors

Signals from the remote control are received here. There are two sensors, one each on the front and rear panels.

#### 8. Speaker (monaural)

Outputs the audio input from the HDMI1, HDMI2 and HDBaseT input terminals. (→ page 32)

#### 9. Main unit control panel

This is used to turn the projector's power on and off, to switch the projected video signal, etc. (→ page 8)

#### 10. Security Slot ( )\*

This is used when attaching an anti-theft cable.

#### 11. Security chain opening

Attach an anti-theft device.

The security chain opening accepts security wires or chains up to 0.18 inch/4.6 mm in diameter.

#### 12. Tilt feet

Use the tilt feet to adjust the projector's vertical and horizontal tilt. (→ page 28)


TIP:

- Security and theft protection lock compatible with Kensington security cables/equipment. For products, visit Kensington's website.

## 1. Check the product overview, supplied items and part names


### Mounting the lens cap strap

1. Insert the tip of the strap into the lens cap mount hole and pass the knot through.

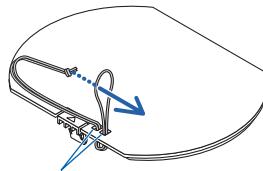


Lens cap mount hole

2. Insert the knot into the strap mount hole (large) on the bottom of the projector, then press it into the narrow (small) hole.

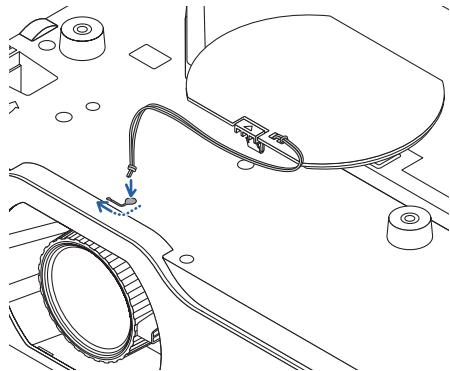

### Rear

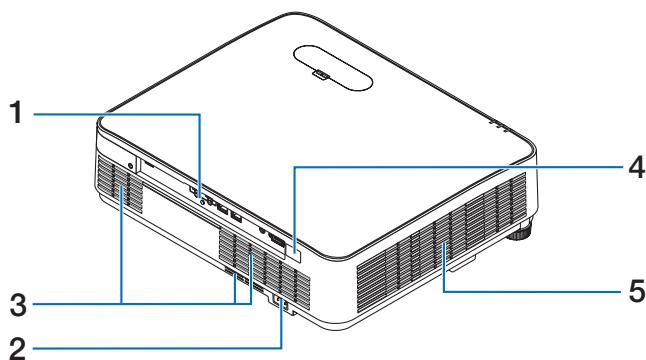

#### 1. Connection terminals

Connect the various video and audio signal cables here. (→ page 10)

#### 2. AC Input

Connect the supplied power cord's three-pin plug here, and plug the other end into an active wall outlet.

(→ page 19)

#### 3. Air intake vent

Draws in outside air to cool the inside of the projector.



#### 4. Remote control signal sensor

Signals from the remote control are received here. There are two sensors, one each on the front and rear panels. (→ page 16)

#### 5. Exhaust vent

Exhausts the internal heat.

## Controls/Indicators

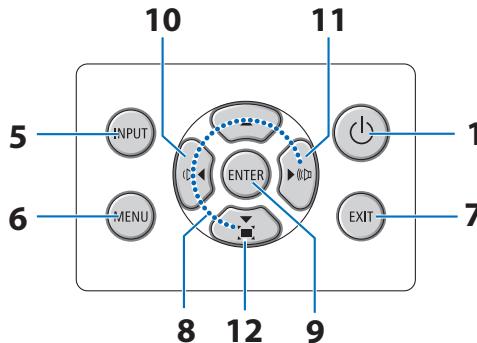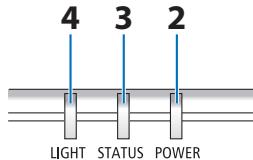

### 1. (POWER) button

Turns the unit power on and off (standby mode).

To turn off the power (put it in standby mode), press the button once. A confirmation message will appear on the screen. Now press the button again.

### 2. POWER indicator

This indicator shows the projector's power status.

The indicator is lit blue when the power is on.

In standby, it is lit or flashing orange, or lit green. (This depends on on-screen menu's [STANDBY MODE] setting.)

### 3. STATUS indicator

This notifies of unit abnormalities.

### 4. LIGHT indicator

This indicates the setting status of the on-screen menu's [LIGHT MODE] or a light source abnormality.

**TIP:**

- For details, refer to the "Indicator Message".  
(→ page 104)

### 5. INPUT button

When pressed while the on-screen menu is not displayed, the input terminal screen is displayed.

### 6. MENU button

Displays the on-screen menu for performing various settings and adjustments. (→ page 42)

When pressed while the on-screen menu is displayed, the menu turns off.

### 7. EXIT button

When the on-screen menu is displayed, returns to the previous level of the menu.


### 8. ▲▼◀▶ buttons

When the on-screen menu is displayed, pressing the ▲▼◀▶ buttons allows you to select the item you want to set or adjust.

### 9. ENTER button

When the on-screen menu is displayed, advances to the next level of the menu and confirms the selected item.

When the confirmation message is displayed, confirms the item.

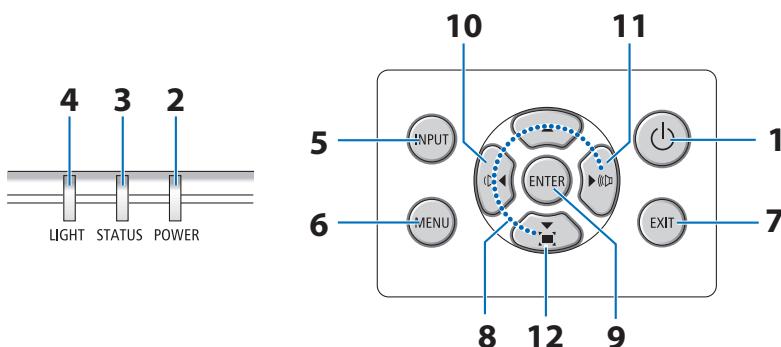

### 10. (Volume -) button

When pressed while the on-screen menu is not displayed, adjusts the volume. (→ page 32)


### 11. (Volume +) button

When pressed while the on-screen menu is not displayed, adjusts the volume. (→ page 32)

### 12. (Keystone Correction) button

When pressed while the on-screen menu is not displayed, adjusts the trapezoidal distortion. (→ page 29)

### Terminal Panel Features

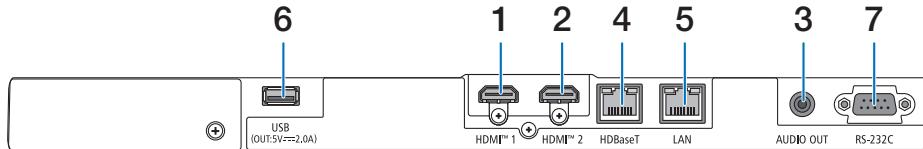

#### 1. HDMI 1 Terminal (Type A)

Connects to the output terminals of a computer, blu-ray player, etc.

#### 2. HDMI 2 Terminal (Type A)

Connects to the output terminals of a computer, blu-ray player, etc.

#### 3. AUDIO OUT Mini Jack (Stereo Mini)

Audio signal of the image projected from the projector is output.

When audio equipment is connected, the projector speaker is disabled.

#### 4. HDBaseT Port (RJ-45)

Connects to a commercially available HDBaseT compatible transmission devices.

(→ page 73)

#### 5. LAN Port (RJ-45)

Connects the unit to a wired LAN.

(→ page 72)

#### 6. USB Port (Type A)

Connect the USB memory. When picture data is saved in a USB memory, the picture can be projected with the [VIEWER] of the projector.


(→ page 39)

When the projector is turned on, 5 V /2.0 A power is supplied.

#### 7. RS-232C Port (D-Sub 9 Pin)

Use this port to connect a PC or control system. This enables you to control the projector using serial communication protocol. If you are writing your own program, typical PC control codes are on page 98.

## 1-4. Part Names of the Remote Control

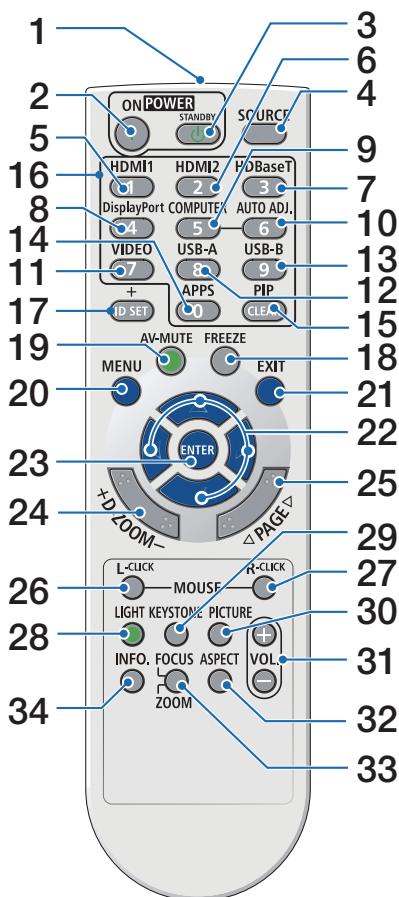

### 1. Infrared Transmitter

Infrared remote control signals are transmitted from here.

Point the remote control toward the signal sensor on the main unit when operating it.

### 2. POWER ON (|) Button

When in the standby mode (with the POWER indicator flashing orange\*), turns the projector's power on.

(\*When the standby mode is set to [NORMAL])

### 3. POWER STANDBY (⌚) Button

When pressed once, the power off confirmation message is displayed. When pressed again the projector's power turns off (standby mode).

### 4. SOURCE Button

Displays the input terminal screen.

### 5. HDMI1 Button

Selects the HDMI1 input.

### 6. HDMI2 Button

Selects the HDMI2 input.

### 7. HDBaseT Button

Selects the HDBaseT input.

### 8. DisplayPort Button

(This button does not work in this projector.)

### 9. COMPUTER Button

(This button does not work in this projector.)

### 10. AUTO ADJ. Button


(This button does not work in this projector.)

### 11. VIDEO Button

(This button does not work in this projector.)

### 12. USB-A Button

Selects the viewer. (→ page 39)

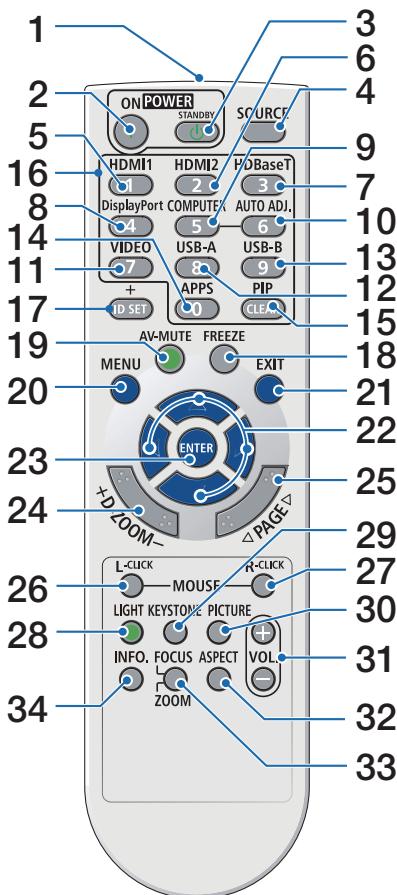

### 13. USB-B Button

(This button does not work in this projector.)

### 14. APPS Button

(This button does not work in this projector.)

### 15. PIP Button

(This button does not work in this projector.)

### 16. Numeric Keypad Button/CLEAR Button

Used for inputting IDs when setting the control ID.

The CLEAR button is used to cancel the control ID setting.

### 17. ID SET Button

Used for setting the control ID when operating multiple projectors individually with this unit's remote control. (→ page 67)

### 18. FREEZE Button

Displays the image as a still picture.

Press again to return.

### 19. AV-MUTE Button

Temporarily mutes the picture and sound. Press again to return.


### 20. MENU Button

Displays the on-screen menu for performing various settings and adjustments.

### 21. EXIT Button

When the on-screen menu is displayed, returns to the previous level of the menu. When the cursor is on the main menu, closes the menu.

When a confirmation message is displayed, cancels the operation.

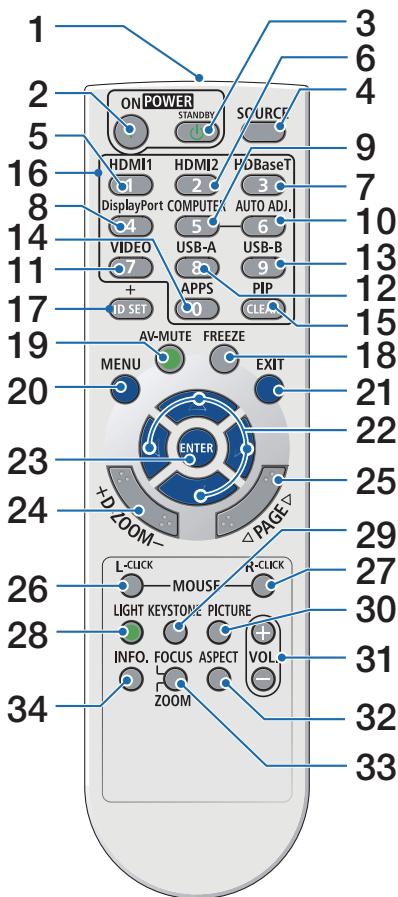

### 22. ▼▲◀▶ Buttons

These are used for on-screen menu operations, adjusting the display position when zooming in on the screen using the D-ZOOM (+)(-) buttons, and switching slide screens with the viewer.

### 23. ENTER Button

When the on-screen menu is displayed, advances to the next level of the menu.

When the confirmation message is displayed, confirms the item.

### 24. D-ZOOM (+)(-) Button

Use these to enlarge and reduce (return to the original size) the screen.

When the screen is zoomed in, you can move the display position using the ▼▲◀▶ buttons.

### 25. PAGE ▽/△ Buttons

(This button does not work in this projector.)

### 26. MOUSE L-CLICK Button

(This button does not work in this projector.)

### 27. MOUSE R-CLICK Button

(This button does not work in this projector.)

### 28. LIGHT Button

This switches the light mode. (→ page 37)

### 29. KEYSTONE Button

Displays the geometric correction menu. (→ page 29)

### 30. PICTURE Button


This switches the picture management mode. (→ page 48)

### 31. VOL. (+)(-) Button

These adjust the volume of the built-in speaker. They also adjust the volume of the audio output terminal.

### 32. ASPECT Button

This switches the aspect ratio. (→ page 50)

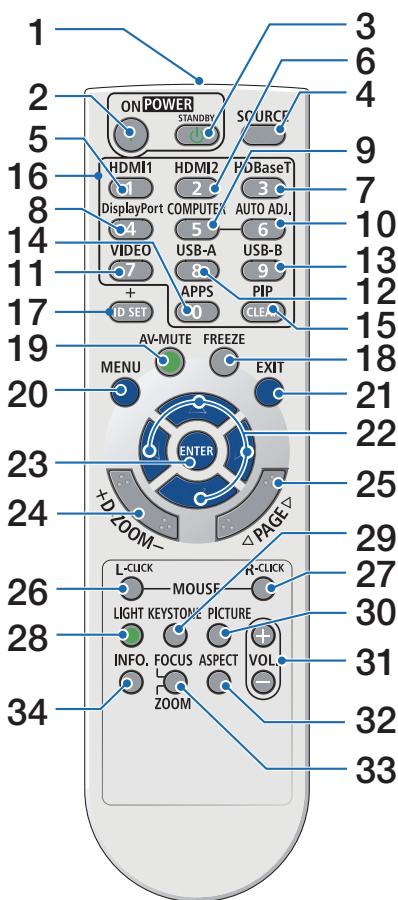

### 33. FOCUS/ZOOM Button


(This button does not work in this projector.)

### 34. INFO. Button


Displays the information screen. (→ page 70)

## Battery Installation

1. Press firmly and slide the battery cover off.

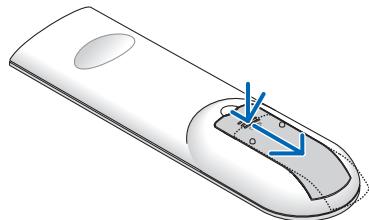


2. Install AAA alkaline batteries. Ensure that you have the batteries' polarity (+/-) aligned correctly.

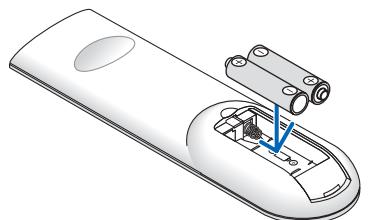

3. Slip the cover back over the batteries until it snaps into place.

NOTE:


- Do not mix different types of batteries or new and old batteries.
- When replacing the batteries, purchase 2 of the same type of AAA alkaline batteries.

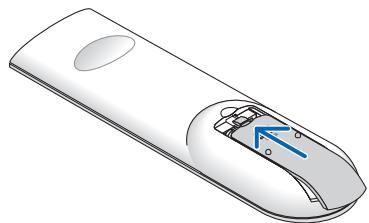

## Remote Control Precautions

- Handle the remote control carefully.
- If the remote control gets wet, wipe it dry immediately.
- Avoid excessive heat and humidity.
- Do not short, heat, or take apart batteries.
- Do not throw batteries into fire.
- If you will not be using the remote control for a long time, remove the batteries.
- Ensure that you have the batteries' polarity (+/-) aligned correctly.
- Do not use new and old batteries together, or use different types of batteries together.
- Dispose of used batteries according to your local regulations.

## Operating Range for Wireless Remote Control

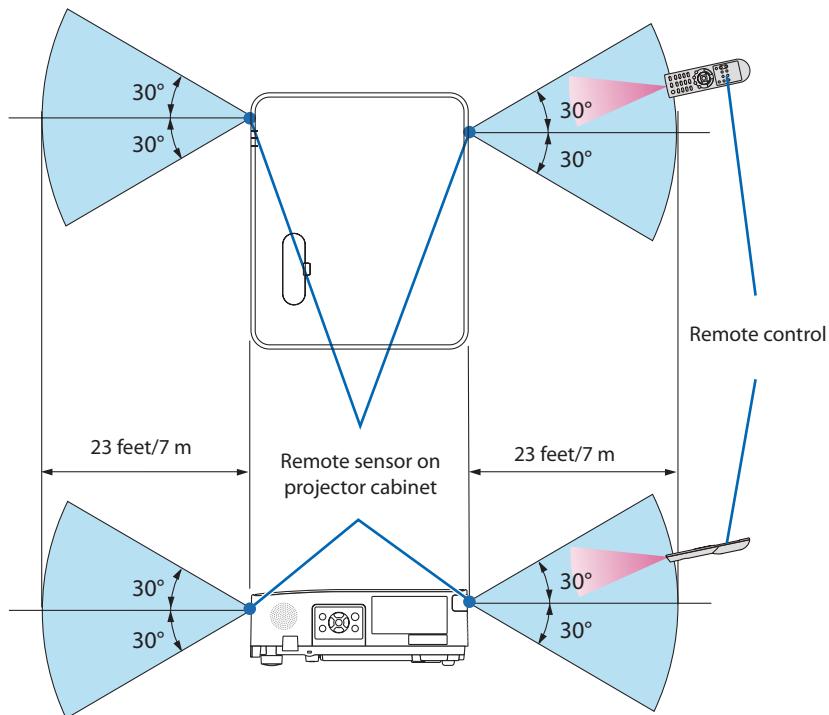

- The infrared signal operates by line-of-sight up to a distance of about 23 feet/7 m and within a 60-degree angle of the remote sensor on the projector cabinet.
- The projector will not respond if there are objects between the remote control and the sensor, or if strong light falls on the sensor. Weak batteries will also prevent the remote control from properly operating the projector.

## 2. Projecting an Image (Basic Operation)

---

This section describes how to turn on the projector and to project a picture onto the screen.

### 2-1. Flow of Projecting an Image

#### Step 1

- Connecting your computer / Connecting the power cord (→ page 18)



#### Step 2

- Turning on the projector (→ page 20)



#### Step 3

- Selecting a source (→ page 22)



#### Step 4

- Adjusting the picture size and position (→ page 23)
- Correcting keystone distortion (→ page 29)



#### Step 5

- Adjusting the unit's volume (→ page 32)



#### Step 6

- Making a presentation



#### Step 7

- Turning off the projector (→ page 33)



#### Step 8

- When Moving the Projector (→ page 34)

## **2-2. Connecting Your Computer/Connecting the Power Cord**

### **1. Connect your computer to the projector.**

This section will show you a basic connection to a computer. For information about other connections, see "6. Making Connections" on page 71.

Connect a commercially available HDMI cable between the computer's HDMI output connector and the projector's HDMI 1 or HDMI 2 connector.

### **2. Connect the supplied power cord to the projector.**

First connect the supplied power cord's three-pin plug to the AC IN terminal of the projector, and then connect another plug of the supplied power cord directly in the wall outlet. Do not use any plug converter.




#### **CAUTION:**

- This equipment is designed to be used in the condition of the power cord connected to earth. If the power cord is not connected to the earth, it may cause electric shock. Please make sure the power cord is connected to the wall outlet directly and earthed properly. Do not use a 2-core plug converter adapter.
- Be sure to connect the projector and the computer (signal source) to the same earth point. If the projector and the computer (signal source) will be connected to different earth points, fluctuations in the earth potential may cause fire or smoke.

## 2. Projecting an Image (Basic Operation)

When the power cord is connected, the POWER indicator of this projector flashes orange and the unit goes into the standby mode. (In the state, [STANDBY MODE] is [NORMAL].)

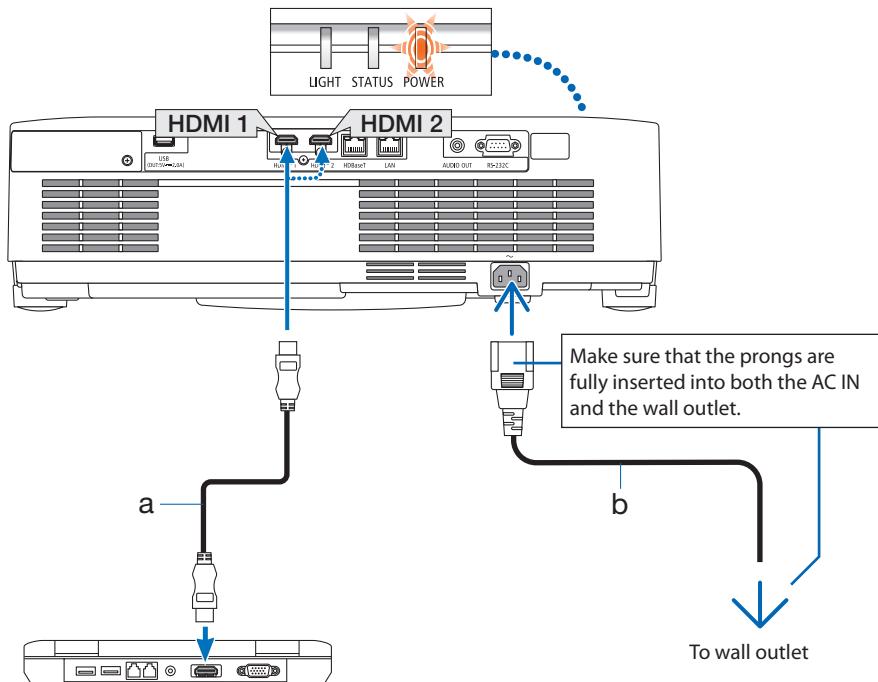

a: HDMI cable (not supplied) / b: Power cord (supplied)

- Use a Premium High Speed HDMI Cable.

### **CAUTION:**

Parts of the projector may become temporarily heated if the projector is turned off with the POWER button. Be careful to handle the projector.


## 2-3. Turning on the Projector

### **WARNING**

The projector produces a strong light. When turning on the power, make sure no one within projection range is looking at the lens.

#### 1. Remove the lens cap.

With the lens cap's stopper pressed up, pull forward and off.

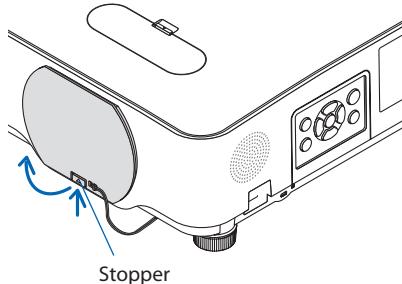

Stopper


#### 2. Press the (POWER) button on the projector cabinet or the POWER ON button on the remote control.

The POWER indicator lights blue and the image is projected on the screen.


- If no signal is being input, a blue screen is displayed. (the projector's factory default)
- If the image is blurry, rotate the focus ring to adjust the screen focus. (→ page 26)

#### NOTE:

- In the following cases, the power will not turn on even if you press the button.
  - If the internal temperature is abnormally high, the device will not turn on to protect the equipment. Please wait for a while (until the internal temperature lowers) before turning on the power.
  - If the status indicator lights up orange when the button is pressed, the control panel is locked. Unlock the control panel. (→ page 54)

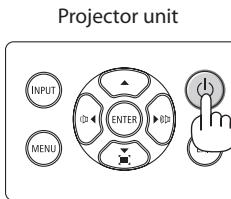

Projector unit

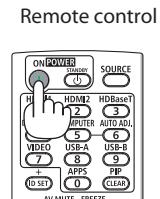


Remote control

TIP:

**To select a menu language, follow these steps:**


- 1. Press the MENU button on the remote control or the main unit's control panel.**

The on-screen menu is displayed.

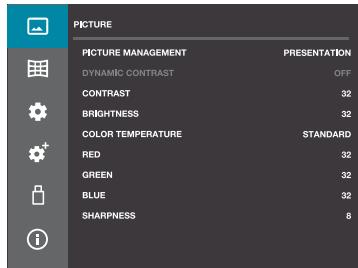

- 2. Use the ▲/▼ buttons to move the cursor to the [SETUP(2)] icon, then press the ENTER button or the ► button.**

The [SETUP(2)] menu is displayed.

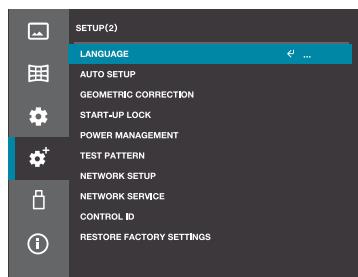

- 3. Check that the cursor is set to [LANGUAGE], then press the ENTER button or the ► button.**


The list of display languages is displayed.



- 4. Use the ▲ or ▼ button to select one of the 25 languages from the menu.**

- 5. Press the ENTER button to execute the selection.**

After this has been done, you can proceed to the menu operation.

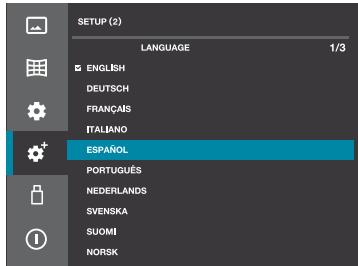

## 2-4. Selecting a Source



### Selecting by pressing the input selector button

#### 1. Turn on the power of the computer or DVD player connected to the projector.


To project the picture from a DVD player, etc., perform the playback (PLAY) operation.

#### 2. Press the INPUT (input selector) button.

The input terminal screen is displayed.

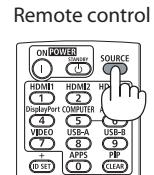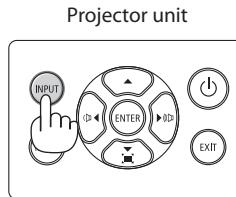


#### 3. Use the ▲/▼ buttons to move the cursor to the terminal whose picture you want to project, then press the ENTER button.

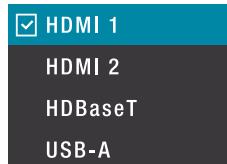

### Selecting by pressing the HDMI1 or HDMI2 button on the remote control

#### 1. Turn on the power of the computer or DVD player connected to the projector.

To project the picture from a DVD player, etc., perform the playback (PLAY) operation.

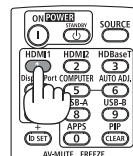

#### 2. Press the HDMI1 or HDMI2 button on the remote control.

##### TIP:


- If no signal is being input, a blue screen is displayed. (this projector's factory defaults)  
For DVD players, etc., perform the playback (PLAY) operation.

## 2-5. Adjusting the Picture Size and Position


Use the lens shift dial, the adjustable tilt foot lever, the zoom lever and the focus ring to adjust the picture size and position.

In this chapter drawings and cables are omitted for clarity.


Adjusting the projected image's vertical and horizontal position [Lens shift]  
(→ page 24)

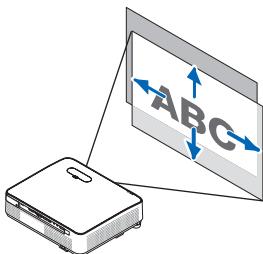


Adjusting the focus [Focus ring]  
(→ page 26)

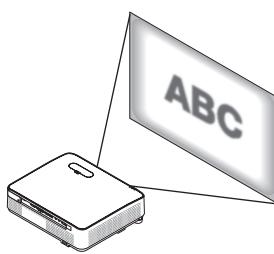


Finely adjusting the size of an image [Zoom lever]  
(→ page 27)

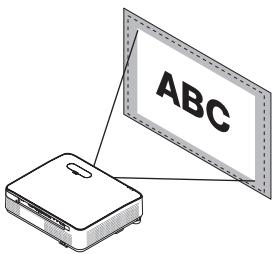

Adjusting the projected image's height and horizontal tilt [Tilt foot]  
(→ page 28)

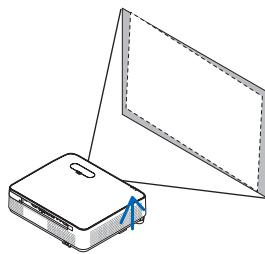

Correcting the keystone distortion [Keystone]  
(→ page 29)

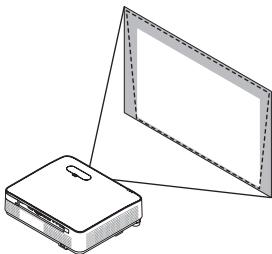


**Adjusting the vertical position of a projected image (Lens shift)****CAUTION**

Perform the adjustment from behind or from the side of the projector. Adjusting from the front could expose your eyes to strong light which could injure them.

**1. Open the lens shift cover.**

Open with the cover's stopper pushed forward.

- The lens shift cover cannot be removed.

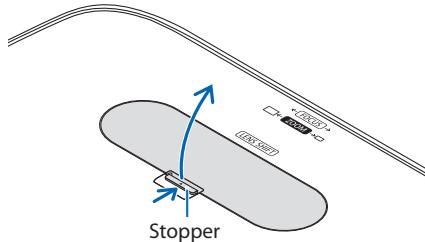
**2. Turn the lens shift dials clockwise or counterclockwise.**

Vertical dial

Turn this clockwise or counterclockwise to adjust the projection position in the vertical direction.

Horizontal dial

Turn this clockwise or counterclockwise to adjust the projection position in the horizontal direction.

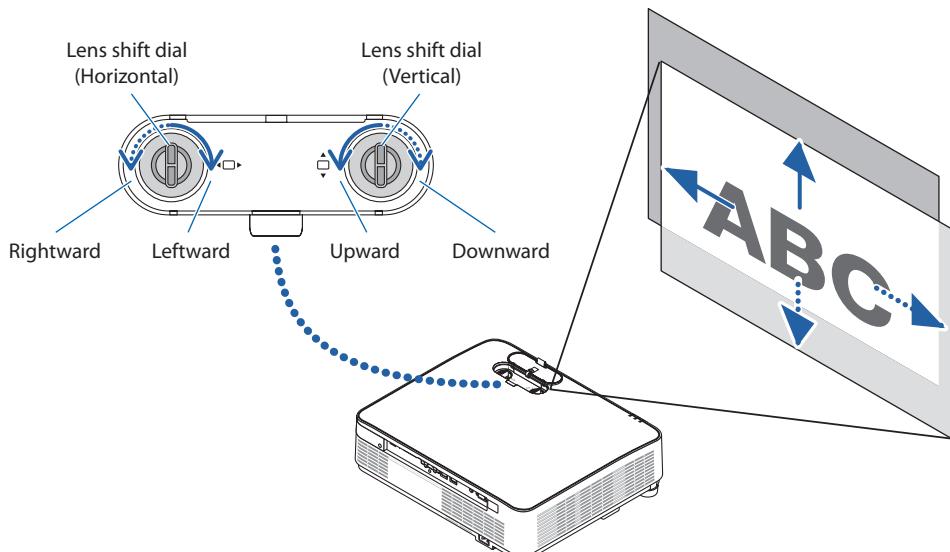


### NOTE:

- The dials can be turned more than one full turn, but the projection position cannot be moved more than the range indicated on the following page. Do not force to turn the dials. Doing so may damage the dials.
- If the lens is shifted to the maximum in the diagonal direction, the edges of the screen will be dark or shaded.
- The vertical shift adjustment must be finished with an image shifted upward. If you finish the vertical shift adjustment with an image shifted down, the zoom/focus adjustments or strong shaking may cause a projected image to slightly shift down.


### 3. Close the lens shift cover.

Insert the cover's 2 (two) hooks into the grooves in the projector, then close the cover.

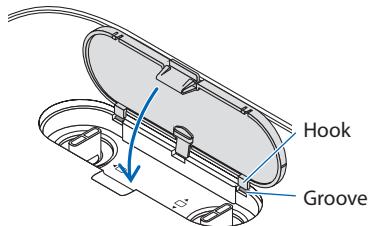

### TIP:


- The diagram below shows the lens shift adjustment range ([ORIENTATION]: [DESKTOP FRONT]).
- For the lens shift adjustment range regarding the [CEILING FRONT] projection, see page 90.

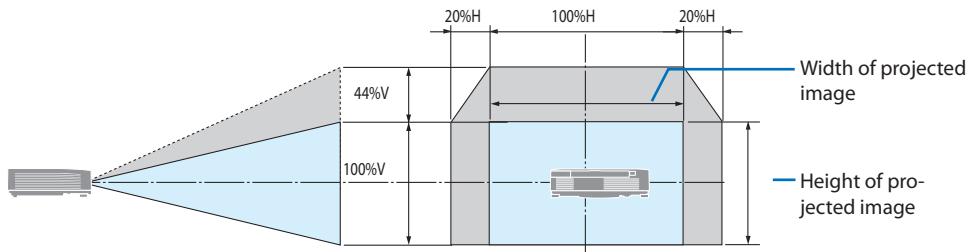

Description of symbols: V indicates vertical (height of the projected image), H indicates horizontal (width of the projected image).

### Focus

Use the focus ring to obtain the best focus.

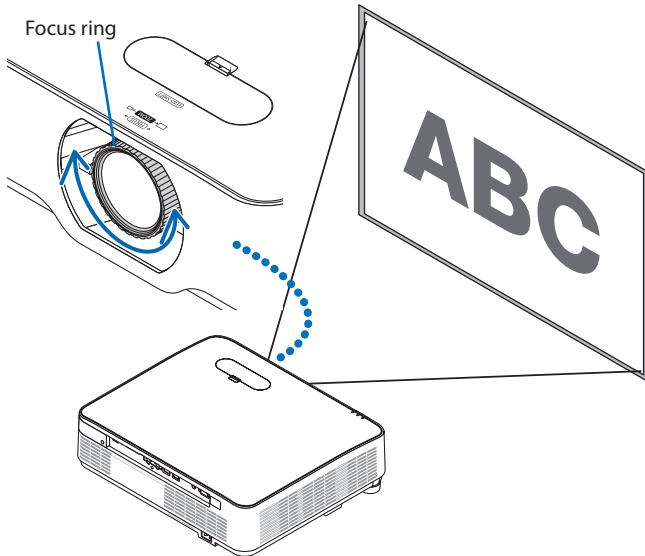

---

#### NOTE:


- Recommend to perform the focus adjustment after leaving the projector under the state the TEST PATTERN has been projected for over 30 minutes.

Please refer to page [65](#) about the TEST PATTERN.

---

### Zoom

Turn the zoom lever clockwise and counterclockwise.

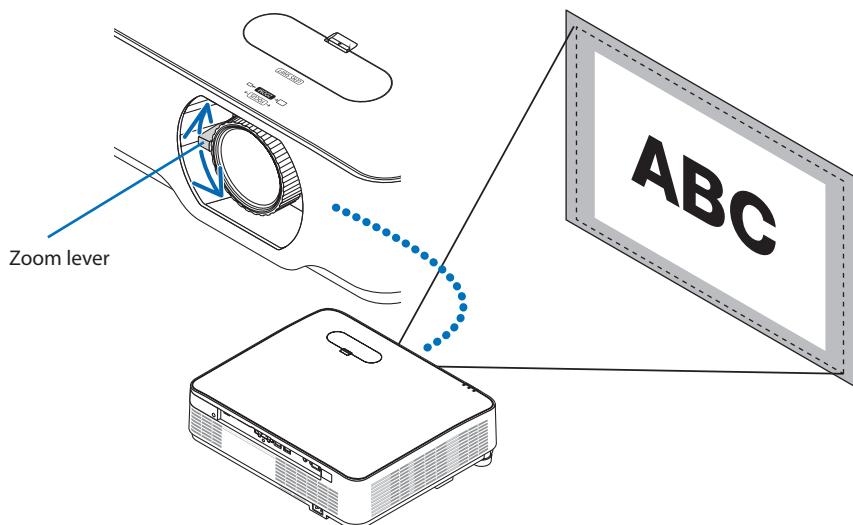

### Adjusting the tilt (Tilt foot)

Adjusting the left and right tilt.



#### 1. Turn the left and right tilt feet to adjust.

The tilt feet lengthen and shorten when turned.

The height of the projected image is adjusted by turning the left and right tilt feet.

If the projected image is tilted, turn one of the tilt feet to adjust the image so that it is level.

- If the projected image is distorted, see "2-6. Adjusting for Trapezoidal Distortion (Keystone Correction)" (→ page 29).
- The tilt feet can be lengthened by a maximum of 15 mm/0.6".
- The tilt feet can be used to tilt the projector by a maximum of 2°.

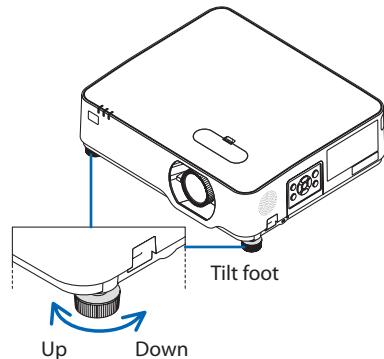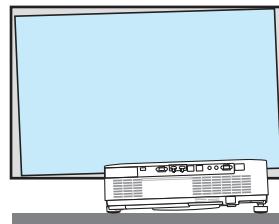

#### NOTE:

- Do not lengthen the tilt feet any more than 15 mm/0.6". Doing so will make the tilt feet's mount section unstable and could cause the tilt feet to come off the projector.
- Do not use the tilt feet for any purpose other than adjusting the projector's projection angle. Handling the tilt feet improperly, such as carrying the projector by grasping the tilt feet or hooking it onto a wall using the tilt feet, could damage the projector.

## 2-6. Adjusting for Trapezoidal Distortion (Keystone Correction)

Trapezoidal distortion of the projected image can be adjusted using the geometric correction function. This section describes the procedure for the "Horizontal/Vertical Keystone Correction" function.

### About the types of geometric correction functions on this projector

This projector has the five types of geometric correction functions described below.

- For details on each correction function, refer to page 58.
- The geometric corrected state is retained even after the projector's power is turned off. To reverse geometric correction, perform the resetting procedure.

H/V KEYSTONE	Use the <b>▲▼◀▶</b> buttons to adjust for horizontal and vertical trapezoidal distortion.
CORNERSTONE	Adjust the trapezoidal distortion for the four corners of the projected image using the <b>▲▼◀▶</b> buttons.
VERTICAL CORNER	Use the <b>▲▼◀▶</b> buttons to adjust the trapezoidal distortion for a total of six points, consisting of the four corners of the projected image plus two points in the center of the upper and lower edges.
PINCUSHION	Adjust the curved distortion when projecting images onto a curved surface.
GRID IMAGE TUNE	Select multiple adjustment points displayed on the projected image to adjust for distortion.
RESET	This restores the adjusted image to its original state.

## Performing Horizontal/Vertical Keystone Correction


### 1. Press the ▼ (■) button on the main unit's control panel.

The [GEOMETRIC CORRECTION] menu is displayed.


- When operating from the remote control, press the KEYSTONE button.



Projector unit

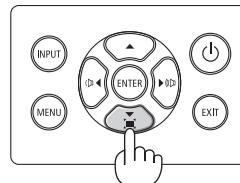

Remote control

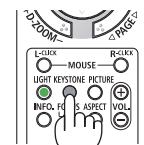

### 2. Use the ▲/▼ buttons to move the cursor to [H/V KEYSTONE], then press the ENTER button.

The [H/V KEYSTONE] screen appears at the center of the projected image.

### 3. While the [H/V KEYSTONE] screen is displayed, use the ▲/▼ buttons to adjust the left/right tilt of the projected image.

- The triangular mark on the [H/V KEYSTONE] screen in the adjusted direction turns blue. A white triangular mark indicates that no adjustment has been made.



Screen frame

Projected image

### 4. While the [H/V KEYSTONE] screen is displayed, use the ▲/▼ buttons to adjust the trapezoidal distortion in the vertical direction.



5. Repeat steps 3 and 4 to adjust the trapezoidal distortion of the projected image.



TIP:

- When the upper limit of horizontal/vertical keystone correction is reached, the triangular mark disappears.
- The adjustable range varies depending on the input signal source.
- When using the viewer (USB-A), the geometric correction menu cannot be displayed even by pressing the ▼ button on the main unit's control panel.

## 2-7. Adjusting the unit's volume


Adjust the volume of the projector's built-in speaker and the volume of the audio signal output from the audio output terminal.

### Adjusting with the operation buttons on the projector

- When the on-screen menu is not displayed, press the **◀ (◀) / ▶ (▶)** buttons.

The volume adjustment bar is displayed.

 side	The volume increases.
 side	The volume decreases.

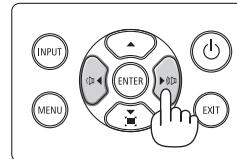

- When the volume adjustment bar is displayed, the sound can be temporarily muted using the **▲/▼** buttons.

To turn the sound back on, use the **◀/▶** buttons after the volume adjustment bar has turned off.

#### NOTE:

- The volume cannot be adjusted using the **◀/▶** buttons when the on-screen menu is displayed and the picture is zoomed with the D-ZOOM (+) button.

### Adjusting using the remote control

- Press the remote control's **VOL. +/-** buttons.


The volume adjustment bar is displayed.

<b>+</b> side	The volume increases.
<b>-</b> side	The volume decreases.

- When the volume adjustment bar is displayed, the sound can be temporarily muted using the **▲/▼** buttons.

To turn the sound back on, use the Volume **+/ -** buttons after the volume adjustment bar has turned off.

- When the volume adjustment bar is displayed, the volume can also be adjusted using the **◀/▶** buttons.

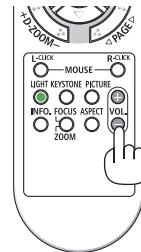


## 2-8. Turning off the Projector


To turn off the projector:

1. First, press the  (POWER) button on the projector cabinet or the STANDBY button on the remote control.


The confirmation message will be displayed.

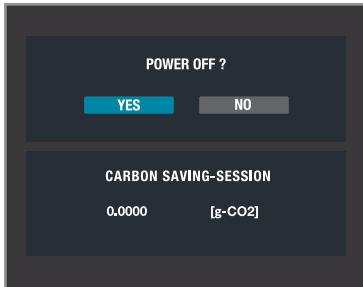

Projector unit

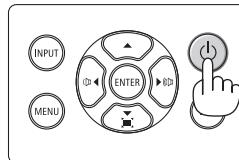

Remote control

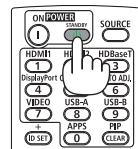


2. Secondly, press the  (POWER) or the STANDBY button again.

When the light source turns off, the power turns off too (standby mode).

When the projector goes into the standby mode, the POWER indicator of the unit flashes orange. (In the state, [STANDBY MODE] is [NORMAL].)

3. Mount the lens cap.

Insert the cap's 2 (two) hooks into the grooves of the projector, then press at the bottom of the lens cap. The stopper is secured to the projector.

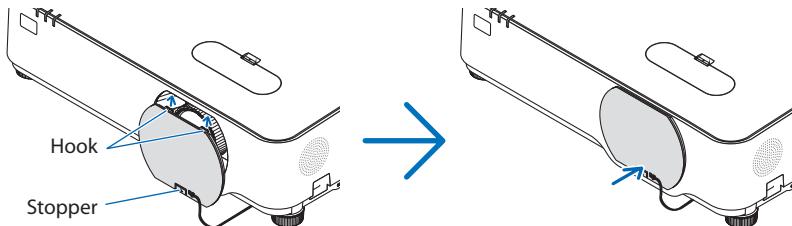

### CAUTION:

Parts of the projector may become temporarily heated if the projector is turned off with the POWER button.

Be careful to handle the projector.

**NOTE:**

- Do not unplug the power cord from the projector or from the power outlet while an image is being projected. Doing so could deteriorate the projector's AC IN terminal or the power plug's contact. To turn off the AC power while an image is being projected, use the breaker, etc.
- Do not disconnect the AC power supply to the projector within 10 seconds of making adjustment or setting changes and closing the menu. Doing so can cause loss of adjustments and settings.

**TIP:**

- If you are using the projector with the light mode set to [SILENT] or [LONG LIFE], a number other than 0 will be displayed for "CARBON SAVINGS-SESSION" in the power-off confirmation message.

### 2-9. When Moving the Projector

**Preparation: Make sure that the projector is turned off.**

- 1. Unplug the power cord from the wall outlet.**
- 2. Unplug the power cord from the projector.**
- 3. Disconnect any other cables.**
  - Remove the USB memory if it is inserted into the projector.
- 4. Before moving the projector, screw in the tilt foot if they have been lengthened.**


### 3. Convenient Features

#### 3-1. Muting the picture and sound (AV-MUTE)

##### 1. Press the AV-MUTE button on the remote control.

The picture being projected and the sound being output from the built-in speaker and audio output terminals are temporarily turned off.

- Press the AV-MUTE button again to turn the picture and sound back on.

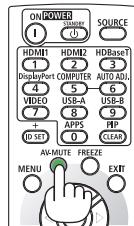


**TIP:**

- The sound from the audio output terminal (mini stereo) can also be turned off.
- The picture turns off, but not the menu.

#### 3-2. Freezing a movie (still image)

##### 1. Press the FREEZE button on the remote control.

When the picture of a DVD player is being projected, the movie is frozen and a still image is displayed.

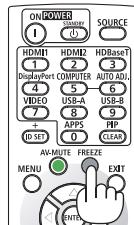

- Press the FREEZE button again to return to the movie.

**NOTE:**

- This function cannot be used when the USB-A input terminal is selected.

**TIP:**


- When the still image mode is set, the picture being projected at that time is stored in the projector's memory and the picture (still image) stored in the memory is projected. Playback on the DVD player, etc., proceeds even while the still image is displayed.

### 3-3. Zooming part of the picture (Partial Zoom)

#### 1. Press the D-ZOOM (+) button on the remote control.


The picture is zoomed each time the button is pressed.

- The picture can be zoomed to a maximum of 4 times the original size.

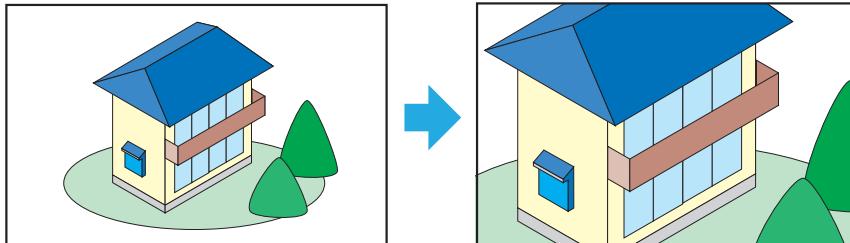

#### 2. Press the ▼▲◀▶ buttons.

The area of the picture that is zoomed moves.

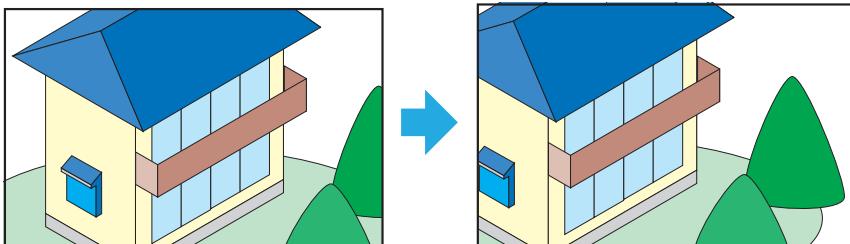

#### 3. Press the D-ZOOM (-) button.

The picture is reduced each time the button is pressed.

- Once returned to the original size, the picture cannot be reduced any further.

#### NOTE:

- With some signals, it may not be possible to zoom up to 4 times the original size.
- This function cannot be used when the USB-A input terminal is selected.
- This cannot be used when displaying the projector's built-in test pattern.

#### TIP:

- Picture enlargement and reduction is centered at the middle of the screen.
- Partial zooming is canceled when the ASPECT button on the remote control is pressed or when [ASPECT] is selected under [DISPLAY] in the on-screen menu and the aspect rate is changed.

### 3-4. Adjusting the luminance (brightness) (Light mode)


Three [LIGHT MODE] options can be selected according to the purpose of use. You can also adjust output power and change luminance (brightness).

LIGHT MODE	Description
NORMAL	Standard mode. You can adjust the output from 50 to 100% using [LIGHT ADJUST].
SILENT	This mode prioritizes reducing operating noise. You can adjust the output from 50 to 90% using [LIGHT ADJUST].
LONG LIFE	This mode prioritizes prolonging the life of the optical components. You can adjust the output from 50 to 80% using [LIGHT ADJUST].

#### Change [LIGHT MODE]


##### 1. Press the MENU button.

The on-screen menu is displayed.

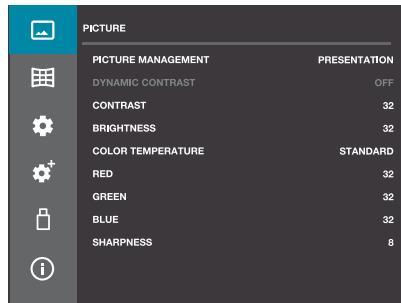


##### 2. Use the ▲/▼ buttons to move the cursor to the [SETUP(1)] icon, then press the ENTER button or the ► button.

The [SETUP(1)] menu is displayed.

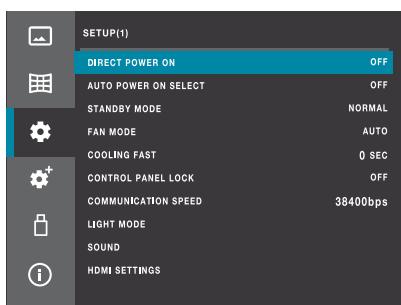


3. Use the **▲/▼** buttons to move the cursor to [LIGHT MODE]. Press the **▲/▼** buttons to move the cursor to [LIGHT MODE], then press either the ENTER button or the **▶** button.

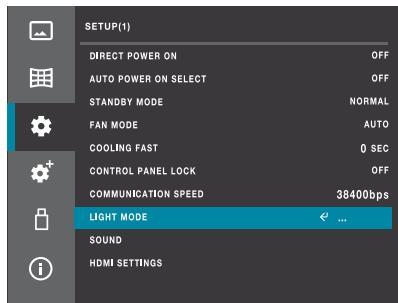

4. Check that the cursor is set to [LIGHT MODE], then press the ENTER button.

"" is displayed at the center of the cursor.

5. Use the **▲/▼** buttons to display the desired mode ([NORMAL] → [SILENT] → [LONG LIFE]), then press the ENTER button.

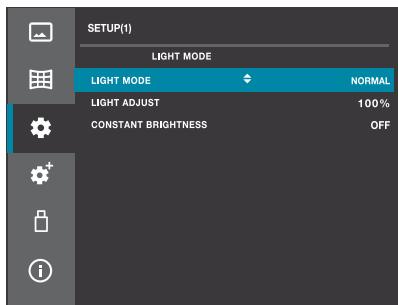

### Perform [LIGHT ADJUST]


1. Move the cursor to the [LIGHT ADJUST] and press the ENTER button.

"" is displayed at the center of the cursor.

2. Press the **▲/▼** buttons to adjust, then press the ENTER button.

#### TIP:

- You can quickly switch the light mode by pressing the LIGHT button on the remote control. When you press the LIGHT button on the remote control, the currently set light mode is displayed in the upper left corner of the screen. After this, the light mode switches in the order [NORMAL] → [SILENT] → [LONG LIFE] each time the LIGHT button is pressed. Note that the [LIGHT ADJUST] and [CONSTANT BRIGHTNESS] settings cannot be changed with this operation.

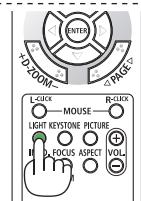

## 4. Using the Viewer (USB-A)

### 4-1. What you can do with the Viewer

The viewer has the following features:

- Images on a commercially available USB flash drive can be projected from this unit by inserting a USB flash drive with images stored on it into the USB port (Type A). Thanks to this, you can make presentations without using a computer.
- The types of images that can be projected by the viewer are JPEG, PNG, BMP, GIF, and TIFF.
- When projecting multiple images in succession (playing a slideshow), the following settings can be made:

EFFECT	This sets the direction for switching slides (right or down).
SORT ORDER	This sets the order for switching slides (by name, by time, by size or by extension).
ROTATE	This sets the direction of rotation of the image (90, 180 or 270 degrees).
BEST FIT	This sets the image's display size relative to the screen.
REPEAT	This sets the action performed after the last slide is displayed.

---

#### NOTE:

- The remote control's D-ZOOM and FREEZE buttons cannot be used on the viewer screen.
- About USB flash drives
  - Format USB flash drives to be used with the projector's viewer function in FAT32 format.
  - This unit cannot recognize USB flash drives in NTFS format.
  - If the USB memory inserted into the projector is not recognized, check its format.
  - For formatting instructions, refer to the instruction manual or help file for your Windows operating system.
  - We do not guarantee that all commercially available USB flash drives will operate with the projector's USB port.
  - Check the USB flash drive for viruses as necessary.
- Supported Images


The images that can be projected by the viewer are as follows:

Extension	Format	Description
jpg/jpeg	Baseline encoder 24	Maximum resolution: 10000 x 10000
	Progressive RGB 24-bit	Maximum resolution: Panel resolution
bmp	1-, 4- and 8-bit palette base	Maximum resolution: 1280 x 800
	RGB24, 32-bit	
png	24- and 48-bit, true color	
gif	1-, 4- and 8-bit palette base	
tiff		

## 4-2. Projecting images stored on USB flash drives (basic operation)

This section explains the basic operations of the viewer. Please see page 69 for the viewer's option menu.


1. Turn on the projector's power.
2. Insert the USB flash drive into the projector's USB port (USB-A).

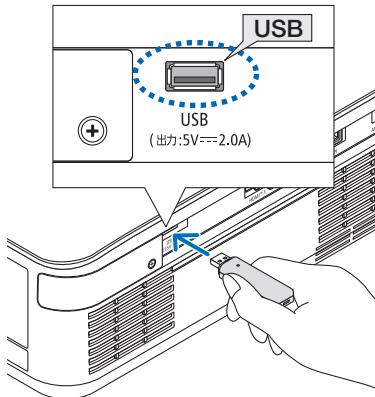

3. Press the INPUT button.

The input terminal screen is displayed.

- When operating from the remote control, press the USB-A button.

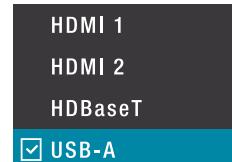


4. Use the ▼/▲ buttons to select [USB-A], then press the ENTER button.

The screen switches to the viewer screen.

- To exit the viewer, press the input selector button and select a terminal other than [USB-A].


5. Press the ENTER button on the viewer screen.

The icons of the folders and images stored on the USB flash drive are displayed.

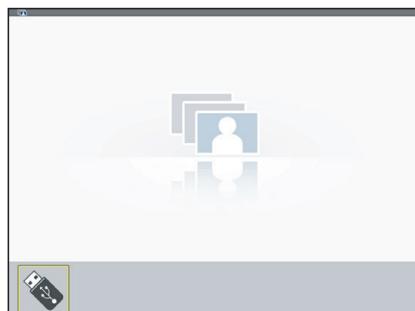

6. Press the MENU button, then use the ▼/▲ buttons to move the cursor to the USB-A menu icon.

The USB-A menu is displayed.

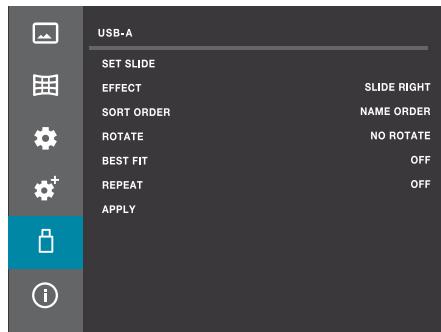

7. Make the necessary settings for the [EFFECT], [SORT ORDER], [ROTATE], [BEST FIT] and [REPEAT] menu items.

8. Set the cursor to the [APPLY] menu item, then press the ENTER button.

The settings made in step 7 are applied.

9. Set the cursor to the [SET SLIDE] menu item, then press the ENTER button.

Slideshow playback starts.

- To end slideshow playback, press the EXIT button.

## 5. Using On-Screen Menu

### 5-1. Basic Operations of the On-Screen Menu

The on-screen menu can be displayed to adjust the sharpness of the projected picture, to switch the unit's operation mode, etc. Hereafter, "on-screen menu" is abbreviated as "menu".

#### 5-1-1. Structure of the on-screen menu screen

To display the menu, press the MENU button on the projector unit or the remote control. To close the menu, press the EXIT button or the MENU button.

This section explains how to view and operate the menu.

**Preparation: Turn on the projector's and project a picture onto the screen.**

##### 1. Press the MENU button.

- Pressing the EXIT button or MENU button will close the menu.
- You can change the position in which the menu is displayed on the screen. (Menu Position → page 52)

##### 2. Press the ▼/▲ buttons.

- The cursor moves between the main menu icons ([PICTURE] ⇔ [IMAGE OPTIONS] ⇔ [SETUP(1)] ⇔ [SETUP(2)] ⇔ [USB-A] ⇔ [INFORMATION]).
- When the main menu icon changes, the submenu also changes.

Icon	Main menu name
	PICTURE
	IMAGE OPTIONS
	SETUP (1)
	SETUP (2)
	USB-A (Viewer)
	INFORMATION



**3. With the cursor set to a main menu icon, press ► or the ENTER button.**

The cursor moves to the submenu.

- To return from a submenu to the main menu icon, press ◀ or the EXIT button.
- Press the MENU button to close the menu.

**4. Use the ▼/▲ buttons to move the cursor to the desired submenu item.**

The marks and item names displayed on the right edge of the submenu items indicate key operations.

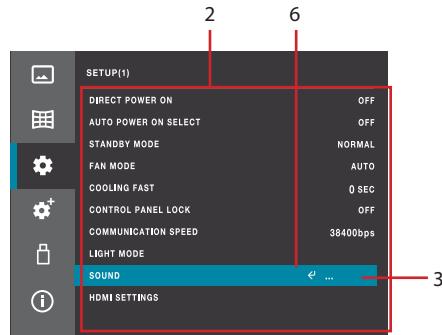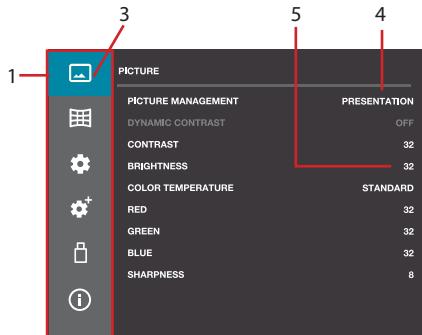


**Explanation of a menu screen example**

1. Main menu icon
2. Submenu
3. Cursor
4. When an item name is displayed, press the ENTER button, then use the ▼/▲ buttons to cycle through the options. Press the ENTER button to confirm the option.
5. When a number is displayed, press the ENTER button, then use the ▼/▲ buttons to increase or decrease the value. Press the ENTER button to confirm the value.
6. When (◀) is displayed, pressing the ENTER button displays the next lower level of the menu.

## 5-1-2. Changing numbers


As an example of operation, the following describes the procedure for changing the contrast value.

1. Press the MENU button to display the on-screen menu.

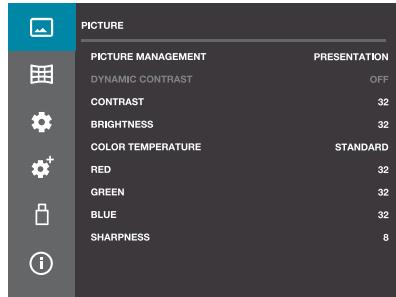

2. Press the ▶ or ENTER button.

The cursor moves to the [PICTURE] submenu.

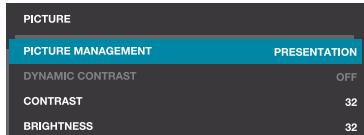


3. Use the ▼/▲ buttons to select [CONTRAST], then press the ENTER button.

◆ is displayed at the center of the cursor.

4. Use the ▼ / ▲ buttons to increase or decrease the value.

5. Press the ENTER button.


The value is set, and the “◆” in the center of the cursor disappears.

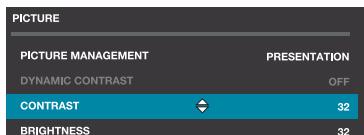

## 5-1-3. Confirmation message

A confirmation message is displayed in certain cases, for example when resetting adjusted values to the factory defaults.

Use the ◀/▶ buttons to move the cursor to [YES] or [NO], then press the ENTER button.

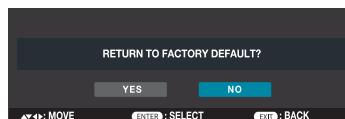

## 5-2. On-screen menu list

[  ] indicates the factory default value for each item.

Main menu	Sub-menu/Setting Value		(See page)
PICTURE	PICTURE MANAGEMENT	HIGH-BRIGHT, PRESENTATION, VIDEO, GRAPHIC, BLACKBOARD(GREEN), USER	48
	DYNAMIC CONTRAST	OFF, MODE 1, MODE 2	
	CONTRAST	0 – 63 (32)	
	BRIGHTNESS	0 – 63 (32)	
	COLOR TEMPERATURE	WARM, STANDARD, COOL, USER	
	RED	0 – 63 (32)	
	GREEN	0 – 63 (32)	
IMAGE OPTIONS	BLUE	0 – 63 (32)	49
	SHARPNESS	0 – 15 (8)	
	ASPECT RATIO	AUTO, WIDE, FULL, 4:3	
	ORIENTATION	DESKTOP FRONT, DESKTOP REAR, AUTO CEILING FRONT, AUTO CEILING REAR, CEILING FRONT, CEILING REAR	
	MENU POSITION	TOP-LEFT, TOP-RIGHT, CENTER, BOTTOM-LEFT, BOTTOM-RIGHT	
	BACKGROUND	BLUE, BLACK, LOGO	
	DIRECT POWER ON	OFF, ON	
SETUP (1)	AUTO POWER ON	OFF, HDMI1, HDMI2	53
	SELECT		
	STANDBY MODE	NORMAL, NETWORK STANDBY, SLEEP	
	FAN MODE	AUTO, HIGH ALTITUDE	
	COOLING FAST	0 SEC, 30 SEC, 60 SEC	54
	CONTROL PANEL LOCK	OFF, ON	
	COMMUNICATION SPEED	4800bps, 9600bps, 19200bps, 38400bps	
	LIGHT MODE	LIGHT MODE	
		NORMAL, SILENT, LONG LIFE	
		LIGHT ADJUST	
	SOUND	50% – 100%	55
		CONSTANT BRIGHTNESS	
		OFF, ON	
HDMI SETTINGS	VOLUME	0 – 25 (12)	56
	MUTE	OFF, ON	
HDMI SETTINGS	VIDEO LEVEL	AUTO, NORMAL, ENHANCED	

Main menu	Sub-menu/Setting Value		(See page)
SETUP (2)	LANGUAGE	English, 日本語, 中文, 中文繁體, DEUTSCH, FRANÇAIS, ITALIANO, ESPAÑOL, PORTUGUÉS, NEDERLANDS, SVENSKA, SUOMI, NORSK, DANSK, POLSKI, ČEŠTINA, MAGYAR, РУССКИЙ, TÜRKCE, العربي, TIẾNG VIỆT, 한국어, ไทย, BAHASA INDONESIA, ROMÂNĂ	57
	AUTO SETUP	INPUT SEARCH OFF, ON	
		AUTO KEYSTONE OFF, ON	
	GEOMETRIC CORRECTION	CORRECTION STORE, RESET	58
		H/V KEYSTONE	59
		CORNERSTONE	
		VERTICAL CORNER	
		PINCUSHION PINCUSHION X/Y GAIN ,	60
		PINCUSHION X OFFSET,	
		PINCUSHION Y OFFSET	
		GRID IMAGE TUNE	62
		RESET	
	START-UP LOCK	PIN CODE LOCK OFF, ON	63
		PIN CODE CHANGE	64
	POWER MANAGEMENT	READY, SHUT DOWN, OFF	65
		TIMER 1 – 30 (5)	
		READY COUNT-DOWN 0 – 30 (5)	
	TEST PATTERN	OFF, GRayscale (1–4), COLOR BAR, RED, GREEN, BLUE, CROSS HATCH, WHITE, BLACK, RASTER GRAY, FOCUS	
	NETWORK SETUP	NETWORK SETTING PROFILE (DISABLE, ENABLE)	
		DHCP (OFF, ON)	
		IP ADDRESS	
		SUBNET MASK	
		GATEWAY	
		DNS	
		NETWORK INFORMATION	
		MAC ADDRESS	
		IP ADDRESS	
	NETWORK SERVICE	HTTP SERVER OFF, ON	67
	CONTROL ID	CONTROL ID OFF, ON	
		CONTROL ID NUMBER 1-254 (1)	
	RESTORE FACTORY SETTINGS		68
USB-A	SET SLIDE		69
	EFFECT	SLIDE DOWN, SLIDE RIGHT	
	SORT ORDER	EXTEND ORDER, NAME ORDER, TIMER ORDER, SIZE ORDER	
	ROTATE	NO ROTATE, 270 DEGREES, 180 DEGREES, 90 DEGREES	
	BEST FIT	ON/OFF	
	REPEAT	ON/OFF	
	APPLY		

Main menu	Sub-menu/Setting Value	(See page)
INFORMATION	INPUT	70
	HORIZONTAL FREQUENCY	
	VERTICAL FREQUENCY	
	LIGHT HOURS USED	
	MODEL NAME	
	SERIAL NUMBER	
	FIRMWARE VERSION	
	SUBCPU	

## 5-3. PICTURE

### 5-3-1. PICTURE MANAGEMENT

Select the optimal setting for the projected image.

HIGH-BRIGHT	Projects images at maximum brightness. Use this setting in bright locations.
PRESENTATION	Makes images brightly vivid. Use this setting when projecting content via computer signals.
VIDEO	Makes images naturally vivid. Use this setting when projecting content from televisions or general image sources.
GRAPHIC	Enables natural reproduction with high color intensity. Use this setting when projecting photographs, pictures, signage, or other such content in dark spaces.
BLACKBOARD(GREEN)	This mode is suitable for projecting onto a black or green board.
USER	If the CONTRAST, BRIGHTNESS, COLOR TEMPERATURE, RED, GREEN, BLUE, or SHARPNESS color adjustments are changed, [USER] is displayed.

### 5-3-2. DYNAMIC CONTRAST

This automatically adjusts the light source output according to the video to create an image with optimal contrast.

OFF	The contrast is not optimized.
MODE1	The contrast is optimized prioritizing brightness.
MODE2	The contrast is optimized with the brightness reduced.

NOTE:

- [DYNAMIC CONTRAST] cannot be selected in the following cases.
  - When [LIGHT MODE] is set to [SILENT] or [LONG LIFE]
  - When [CONSTANT BRIGHTNESS] is set to [ON]

### 5-3-3. CONTRAST

This makes the difference between dark and bright parts of the image clearer or softer.

### 5-3-4. BRIGHTNESS

This makes the picture brighter or darker.

### 5-3-5. COLOR TEMPERATURE

This adjusts the hue of red, green, and blue colors.

WARM	This makes the entire screen appear reddish. The color temperature is approximately 500 K lower than when set to [STANDARD].
STANDARD	This sets the entire screen to a medium tone. The factory default color temperature setting is approximately 7800 K.
COOL	This makes the entire screen appear bluish. The color temperature is approximately 500 K higher than when set to [STANDARD].
USER	If the values for [RED], [GREEN] and [BLUE] are adjusted individually, [USER] is displayed.

TIP:

- Color temperature varies depending on the settings of [PICTURE MANAGEMENT] and [LIGHT MODE].

### 5-3-6. RED/GREEN/BLUE

These individually adjust the red, green and blue hues of the entire screen.

### 5-3-7. SHARPNESS

This makes the picture crisper or softer.

## 5-4. IMAGE OPTIONS

### 5-4-1. ASPECT RATIO



Select the screen's aspect ratio.

AUTO	The picture is projected at maximum size without changing the aspect ratio of the input signal.
WIDE	The picture is projected with a 16:9 aspect ratio.
FULL	The picture is projected to the maximum extent.
4:3	The picture is projected with a 4:3 aspect ratio.

### 5-4-2. ORIENTATION

Select according to the installation conditions of the projector and screen.

 <b>WARNING</b>	Consult your dealer for installing the projector on the ceiling. Special skills are required for ceiling installation. Never try to install the projector yourself in such cases. The projector could drop and cause injury.
---	---

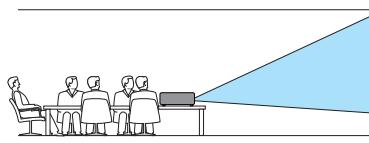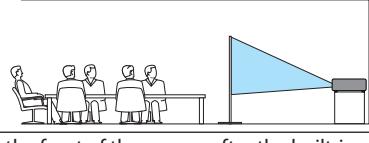DESKTOP FRONT	When the projector is placed on a table and projects from in front of the screen. 
DESKTOP REAR	When the projector is placed on a table and projects from behind the screen (using a semitransparent screen). 
AUTO CEILING FRONT	When projecting from the front of the screen, after the built-in angle sensor automatically detects the projector's angle, switch to [DESKTOP FRONT] or [CEILING FRONT]. Select this item if you are projecting from the front of the screen.
AUTO CEILING REAR	When projecting from behind the screen, after the built-in angle sensor automatically detects the projector's angle, switch to [DESKTOP REAR] or [CEILING REAR]. Select this item if you are projecting from behind the screen.

CEILING FRONT	When installing the projector high on the ceiling in front of the screen using a ceiling mount fitting (sold separately).
CEILING REAR	When installing the projector high on the ceiling behind the screen using a ceiling mount fitting (sold separately) (using a semitransparent screen).

## TIP:


- About the Angle Sensor

The detectable angle range of the projector's built-in angle sensor is as shown in the figure below.

If you select [AUTO CEILING FRONT] or [AUTO CEILING REAR] for the orientation, the projector automatically determines the image will be projected from the front.

If you select [AUTO CEILING FRONT] or [AUTO CEILING REAR] for the orientation, the projector automatically determines the image will be projected from the front.

If you select [AUTO CEILING FRONT] or [AUTO CEILING REAR] for the orientation, the projector automatically determines the image will be projected from the ceiling.

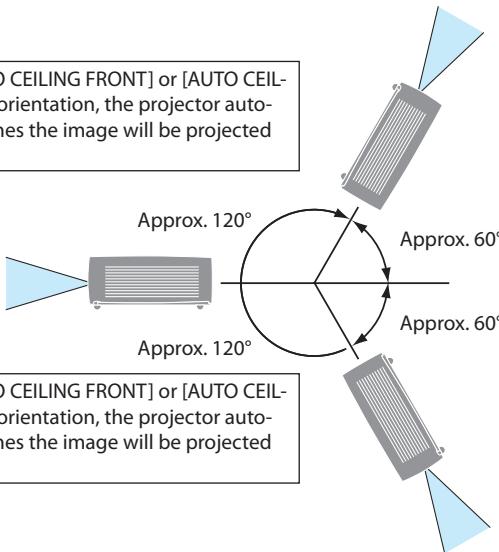

### 5-4-3. MENU POSITION

This changes the on-screen menu's display position.

TOP-LEFT	The menu is displayed in the upper left corner of the screen.
TOP-RIGHT	The menu is displayed in the upper right corner of the screen.
CENTER	The menu is displayed in the center of the screen.
BOTTOM-LEFT	The menu is displayed in the lower left corner of the screen.
BOTTOM-RIGHT	The menu is displayed in the lower right corner of the screen.

### 5-4-4. BACKGROUND

This selects the color of the background when there is no input signal.

BLUE	The entire projection area is displayed in blue.
BLACK	The entire projection area is displayed in black.
LOGO	The registered background is displayed over the entire projection area. BLACK (no logo image) is displayed when shipped from the factory.

---

**NOTE:**

- This function is disabled when USB-A is selected as the input signal.

---

**TIP:**

- To register a logo image, use the HTTP server function.

## 5-5. SETUP (1)

### 5-5-1. DIRECT POWER ON

This sets the operation when the power cord is connected to the projector or when power is supplied.

OFF	When the power cord is connected to the projector or when power is supplied, the projector is set to the standby mode. Press the power button to turn on the power.
ON	When the power cord is connected to the projector or when power is supplied, the projector's power automatically turns on.

NOTE:

- After turning off the power, disconnect the power cord, wait about 20 seconds, then reconnect the power cord. The projector may not operate normally if the power is turned on and off or the power cord is connected and disconnected in a short period of time.

### 5-5-2. AUTO POWER ON SELECT

This function automatically projects a picture when an HDMI signal is input while the unit is in the standby mode.

OFF	The Auto Power On function will not operate.
HDMI1	When a signal is detected at the HDMI1 input terminal, the picture is projected.
HDMI2	When a signal is detected at the HDMI2 input terminal, the picture is projected.

NOTE:

- If [AUTO POWER ON] is set to HDMI1 or HDMI2, [STANDBY MODE] will be grayed out and cannot be selected.
- When [AUTO POWER ON] is set to HDMI1, turn off the power while projecting the image from the HDMI 1 input terminal. Similarly, when [AUTO POWER ON] is set to HDMI2, turn off the power while projecting the image from the HDMI 2 input terminal.

### 5-5-3. STANDBY MODE

This selects the operation mode when the projector is in standby.

NORMAL	In this mode, power consumption is lower than in "Network Standby" or "Sleep" mode, but the projector cannot be controlled via the LAN port when this mode is selected. To turn on the projector's power, press the power button on the projector cabinet or remote control.
NETWORK STANDBY	In this mode, power consumption is higher than in [NORMAL] mode, but the unit can be turned on from standby using the "Wake on LAN" function via LAN. For details on the "Wake on LAN" function, please consult your network administrator.
SLEEP	In this mode, power consumption is higher than in "Network Standby" mode, but the projector's power can be turned on using control software.

## 5-5-4. FAN MODE

This sets the operation of the cooling fan to reduce the projector's internal temperature. This changes the speed of the cooling fan according to the altitude of the location where the projector is used.

AUTO	The built-in fans automatically run at a variable speed according to the internal temperature.
HIGH ALTITUDE	The built-in fans run at a high speed. Select this option when using the projector at altitudes approximately 5500 feet/1600 meters or higher.

**NOTE:**

- Set [FAN MODE] to [HIGH ALTITUDE] when using the projector at altitudes approximately 5500 feet/1600 meters or higher.
- Using the projector at altitudes approximately 5500 feet/1600 meters or higher without setting to [HIGH ALTITUDE] can cause the projector to overheat and the projector could shut down. If this happens, wait a couple minutes and turn on the projector.
- Using the projector at altitudes approximately 5500 feet/1600 meters or higher can shorten the life of optical components such as the light module.

## 5-5-5. COOLING FAST

This sets the time the cooling fan runs after the projector is turned off.

The power indicator blinks green while the cooling fan is running.

Do not unplug the power cord while the cooling fan is running.

0 SEC	The cooling fan does not run after the unit is turned off.
30 SEC	The cooling fan runs for 30 seconds after the projector is turned off.
60 SEC	The cooling fan runs for 60 seconds after the projector is turned off.

## 5-5-6. CONTROL PANEL LOCK

This disables the operation buttons on the projector.

OFF	The buttons on the projector's control panel work.
ON	The buttons on the projector's control panel do not work (they are locked).

**TIP:**

- The remote control buttons will work even when the main unit's operation buttons are locked.

### 5-5-7. COMMUNICATION SPEED

This sets the data transfer speed for the RS-232C terminal. Set this according to the transfer speed of the connected device.

### 5-5-8. LIGHT MODE

Three [LIGHT MODE] options can be selected according to the purpose of use. You can also adjust output power and change luminance (brightness).

#### LIGHT MODE

NORMAL	This is the standard mode.
SILENT	This mode prioritizes reducing operating noise.
LONG LIFE	This mode prioritizes prolonging the life of the optical components.

#### LIGHT ADJUST

The output of each [LIGHT MODE] can be adjusted in 1%.

The adjustment range will vary depending on the [LIGHT MODE] settings.

NORMAL: 50 - 100%

SILENT: 50 - 90%

LONG LIFE: 50 - 80%

#### CONSTANT BRIGHTNESS

OFF	[CONSTANT BRIGHTNESS] mode will be canceled.
ON	Maintains a constant brightness.

---

##### NOTE:

- When [CONSTANT BRIGHTNESS] is set to [ON], [LIGHT MODE] and [LIGHT ADJUST] cannot be selected.

---

##### TIP:

- Brightness normally decreases with use, but by selecting [CONSTANT BRIGHTNESS] mode, the projector automatically adjust the output based on the projector used time, thereby maintaining a constant brightness throughout the life of the light module. However, if output is already at its maximum, brightness will decrease with use.

## 5-5-9. SOUND

This adjusts the audio output from the projector.

VOLUME	Press the <b>◀</b> button to decrease the volume, the <b>▶</b> button to increase the volume. The range is 0 to +25.
MUTE	Sound is output when [OFF] is selected, and no sound is output when [ON] stops audio output.

## 5-5-10. HDMI SETTINGS

Change these settings according to the output conditions of the device connected to the HDMI1 or HDMI2 input terminal.

## VIDEO LEVEL

AUTO	Full range or limited range of the HDMI signal level is detected automatically. If the range cannot be correctly detected automatically, manually switch to [NORMAL] or [ENHANCED].
NORMAL	Select this when connecting a device whose HDMI signal level is set to full range.
ENHANCED	Select this when connecting a device whose HDMI signal level is set to limited range.

## 5-6. SETUP(2)

### 5-6-1. LANGUAGE

This selects the language for the menu's display.

The language will revert to English if you reset the factory defaults from the on-screen menu.

### 5-6-2. AUTO SETUP

This turns automatic input signal search, automatic adjustment of the computer's video signals and automatic keystone correction on or off.

#### INPUT SEARCH

OFF	Press the input selector button to select the input signal manually.
ON	The input signal is detected automatically and the image is projected.

#### AUTO KEYSTONE

OFF	Perform keystone correction manually.
ON	The projector's tilt is detected and keystone distortion of the projected picture is automatically adjusted the vertical direction.

---

##### NOTE:

- Automatic keystone correction may not work even when [AUTO KEYSTONE] is set to [ON].
- Auto keystone correction does not work when [CEILING FRONT] or [CEILING REAR] is set at [ORIENTATION] in the on-screen menu.
- When [AUTO CEILING FRONT] or [AUTO CEILING REAR] is set at [ORIENTATION] in the on-screen menu and this unit is mounted on the ceiling, auto keystone correction will not work.
- The USB-A terminal cannot be searched when [INPUT SEARCH] is set to [ON].

---

### 5-6-3. GEOMETRIC CORRECTION

When projecting onto a tilted or curved screen, the projected image will be distorted and extend beyond the screen.

In this case, use the unit's [GEOMETRIC CORRECTION] function to adjust the projected image so that it fits within the screen.

When [GEOMETRIC CORRECTION] is selected in the on-screen menu, the geometric correction menu appears.

This projector has the five types of geometric correction functions described below.

- H/V KEYSTONE
- CORNERSTONE
- VERTICAL CORNER
- PINCUSHION
- GRID IMAGE TUNE

• The geometric correction status is retained even after the projector's power is turned off. To reverse geometric correction, perform the resetting procedure.

• Some of the five correction functions cannot be combined for adjustment.

If you adjust any of the adjustments, the correction functions that cannot be combined will be grayed out and will not be selectable.

If you want to switch to a correction function that cannot be combined, perform [RESET].

#### Combining correction functions

	H/V KEYSTONE	CORNERSTONE	VERTICAL CORNER	PINCUSHION	GRID IMAGE TUNE
H/V KEYSTONE	-	No	No	No	No
CORNERSTONE	No	-	No	No	No
VERTICAL CORNER	No	No	-	Yes	Yes
PINCUSHION	No	No	Yes	-	Yes
GRID IMAGE TUNE	No	No	Yes	Yes	-

Yes : adjustable / No : non-adjustable

• Displaying the projector's built-in [CROSS HATCH] test pattern makes it easier to adjust. (→ page 65)





### CORRECTION

STORE	The geometric correction values are retained even after the projector is turned off.
RESET	When the projector is turned off, the geometric correction values are reset.

**H/V KEYSTONE**





Use the **▲▼◀▶** buttons to adjust for horizontal and vertical trapezoidal distortion.

For operating instructions, please refer to page 29.

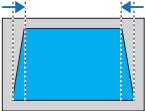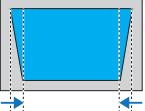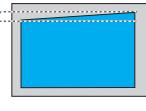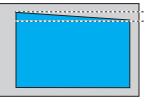Pressing the <b>▲</b> button reduces the width of the top edge.	Pressing the <b>▼</b> button reduces the width of the bottom edge.	Pressing the <b>◀</b> button reduces the width of the left edge.	Pressing the <b>▶</b> button reduces the width of the right edge.
			





**CORNERSTONE**

Adjust the trapezoidal distortion for the four corners of the projected image using the **▲▼◀▶** buttons.

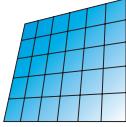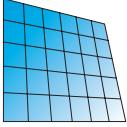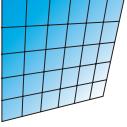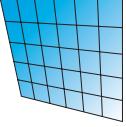UPPER LEFT	UPPER RIGHT	LOWER RIGHT	LOWER LEFT
			

**VERTICAL CORNER**

Use the **▲▼◀▶** buttons to adjust the trapezoidal distortion for a total of six points, consisting of the four corners of the projected image plus two points in the center of the upper and lower edges.

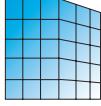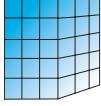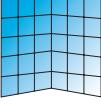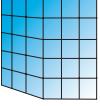UPPER LEFT	CENTER TOP	UPPER RIGHT	LOWER RIGHT	CENTER BOTTOM	LOWER LEFT
					






## PINCUSHION

Adjust the curved distortion when projecting images onto a curved surface.





Curved correction is divided into 3 modes. The mode switches when the ENTER button is pressed.








### 1. PINCUSHION X/Y GAIN

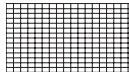
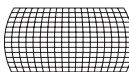
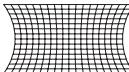
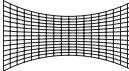
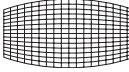
Before correction	Operation	After correction	Description
	◀ button		Expands left and right edges horizontally.
	▶ button		Reduces the left and right edges inwards.
	▲ button		Reduces the top and bottom edges inwards.
	▼ button		Expands the top and bottom edges vertically.




### 2. PINCUSHION X OFFSET

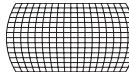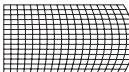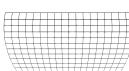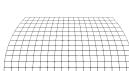Before correction	Operation	After correction	Description
	◀ button		Corrects the distortion on the left side. Expands the top and bottom of the left edge outwards while maintaining the distortion on the right side.
	▶ button		Corrects the distortion on the right side. Expands the top and bottom of the right edge outwards while maintaining the distortion on the left side.
	▲ button		Corrects the horizontal distortion. Expands the left and right of the top section outwards, and reduces the left and right of the bottom section inwards.
	▼ button		Corrects the horizontal distortion. Expands the left and right of the bottom section outwards, and reduces the left and right of the top section inwards.

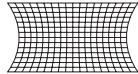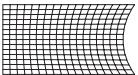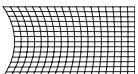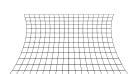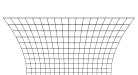	◀ button		Corrects the distortion on the left side. Expands the center of the left edge outwards while maintaining the distortion on the right side.
	▶ button		Corrects the distortion on the right side. Expands the center of the right edge outwards while maintaining the distortion on the left side.
	▲ button		Corrects the horizontal distortion. Expands the left and right of the top section inwards while maintaining the distortion of the bottom section.
	▼ button		Corrects the horizontal distortion. Reduces the left and right of the bottom section inwards while maintaining the distortion of the top section.


### 3. PINCUSHION Y OFFSET

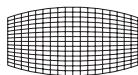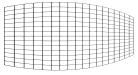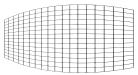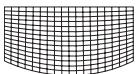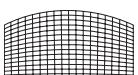Before correction	Operation	After correction	Description
	◀ button		Corrects the vertical distortion. Expands the top and bottom of the left edge outwards and reduces the top and bottom of the right edge inwards.
	▶ button		Corrects the vertical distortion. Expands the top and bottom of the right edge outwards and reduces the top and bottom of the left edge inwards.
	▲ button		Corrects the distortion on the top side. Expands the left and right of the top edge upwards while maintaining the distortion on the bottom side.
	▼ button		Corrects the distortion on the bottom side. Expands the left and right of the bottom edge downwards while maintaining the distortion on the top side.

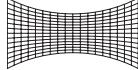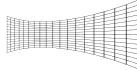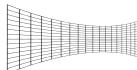	◀ button		Corrects the vertical distortion. Reduces the top and bottom of the left edge inwards while maintaining the distortion on the right side.
	▶ button		Corrects the vertical distortion. Reduces the top and bottom of the right edge inwards while maintaining the distortion on the left side.
	▲ button		Corrects the distortion on the top side. Expands the center of the top edge upwards while maintaining the distortion on the bottom side.
	▼ button		Corrects the distortion on the bottom side. Expands center of the bottom edge downwards while maintaining the distortion on the top side.

## GRID IMAGE TUNE

Select one of the multiple adjustment points displayed on the entire projection screen and use the ▲▼◀▶ buttons to adjust the distortion.

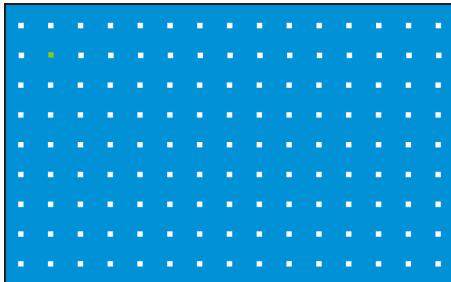

## RESET

This restores the adjusted image to its original state.

### NOTE:

- The maximum keystone correction range is  $\pm 30$  degrees vertically and horizontally. However, using maximum correction will reduce image quality and make focusing more difficult. Please use the minimum correction value for the projector.
- Keystone correction may affect the image's aspect ratio.

## 5-6-4. START-UP LOCK

You can prevent unauthorized use of the projector by setting a PIN code (a 3-digit number). If START-UP LOCK is enabled, the PIN CODE input screen will appear when the unit's power is turned on, and projection will not be possible without inputting the correct PIN code.


### Important

- The PIN code is not canceled even when you reset the factory defaults from the on-screen menu. Please write down and store the PIN code you have set in a safe place so you don't forget it.
- When you enter the PIN code, pay enough attention to people around for the PIN code abuse prevention.  
If you have anxiety the PIN code is cheated, change the PIN code immediately.

## PIN CODE LOCK

When you select [PIN CODE LOCK], the PIN code (a 3-digit number) input screen appears. Input the PIN code. The PIN code is set to "111" upon shipment from the factory.

OFF	The Pin Code Lock function cannot be used.
ON	When the projector's power is turned on, the PIN code input screen will appear.

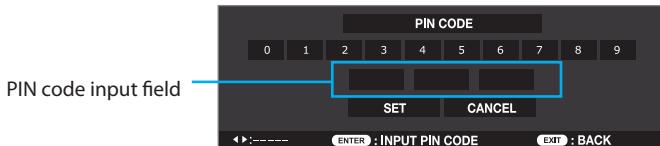

## How to input the PIN code

### 1. At the PIN code input screen, press the ENTER button.

The "0" frame and the left frame of the PIN code input field turns blue.

### 2. Press the ▶ button.

The color of the "1" frame turns blue.

### 3. Press the ENTER button.

"1" is input into the left frame of the PIN code input field, and the frame at its right turns blue.

The input "1" will change to "\*" after a short while.

### 4. Press the ENTER button.

"1" is input into the center frame of the PIN code input field, and the frame at its right turns blue.

### 5. Press the ENTER button.

"1" is input into the right frame of the PIN code input field, and [SET] turns orange.

### 6. Check that the cursor is set to [SET], then press the ENTER button.

The PIN code input screen disappears.

### PIN CODE CHANGE

You can change the factory default PIN code ("111") to any other number.

If you select "PIN CODE CHANGE", the PIN code input screen appears. Input the current PIN code. Next, the screen for inputting the new PIN code appears. Input the new PIN code.

TIP:

- If you forget your PIN code
  - If you can display the on-screen menu, go to [SETUP(2)] → [RESTORE FACTORY SETTINGS] to reset the PIN code. Using [RESTORE FACTORY SETTINGS] will return all settings to the factory default.
  - If you cannot display the on-screen menu, contact your dealer.

### 5-6-5. POWER MANAGEMENT

If no signal is input for longer than the set amount of time and the projector is not operated, the projector's light source automatically turns off or the power will turn off.

Set the modes (Ready, Shut Down, and Off) and the times.

READY	When the time set at [TIMER] below is reached, the projector switches to the Ready (standby) mode (with the light source off). When in the Ready mode, the POWER indicator is flashing green. If an input signal is detected or if a button (other than the power button) on the main unit's control panel or on the remote control is pressed while in the Ready mode, the light source turns back on.
SHUT DOWN	When the time set at [TIMER] below is reached, the projector's power turns off and the standby mode is set.
OFF	The power management function is disabled.

### TIMER

Set the time until the light source is turned off or until the projector is shut down. The time can be set from 1 to 30 minutes. The factory default setting is "5 minutes".

If the unit remains without a signal and no button is operated for 30 seconds, "NO INPUT" and the time remaining until the projector is switched to the Ready mode (light source off) or shuts down are displayed in the lower right corner of the screen.



### READY COUNTDOWN

This sets the time (0 to 30 minutes) after entering the Ready mode until the projector's power turns off and the standby mode is set. The factory default setting is "5 minutes". If set to "0 minutes", the projector stays in the Ready mode.

### 5-6-6. TEST PATTERN

This displays several types of test patterns built into the projector.


Display a test pattern when adjusting the focus or keystone correction of the projected image.

To return from the test pattern screen to the original screen, press the MENU button, select "TEST PATTERN" again, move the cursor to [OFF], then press the ENTER button.

## 5-6-7. NETWORK SETUP

When controlling the projector from a computer via a network, make the network settings so that the projector can be connected.

- Before making the network settings, connect the projector and router, etc., with a LAN cable. (→ page 72)
- For instructions on changing the IP address, subnet mask, gateway and DNS, refer to page 78.
- After changing the network settings, use the **▲/▼** buttons to move the cursor to [SET], then press the ENTER button.

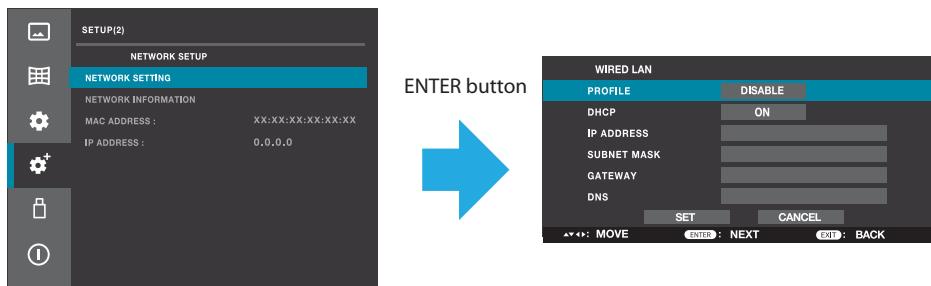

PROFILE	Set the cursor in place then press the ENTER button. Use the <b>▲/▼</b> buttons to switch to "DISABLE" or "ENABLE," then press the ENTER button.	
	DISABLE	Disables wired LAN.
	ENABLE	Enables wired LAN.
DHCP	Set the cursor in place then press the ENTER button. Use the <b>▲/▼</b> buttons to move the cursor to [ON] or [OFF], then press the ENTER button.	
	OFF	Manually set the IP address and subnet mask assigned by the network administrator.
	ON	The IP address, subnet mask and gateway are automatically assigned by the DHCP server.
IP ADDRESS	If "DHCP" was set to [OFF], set the projector's IP address on the network to which the projector is connected.	
SUBNET MASK	If "DHCP" is set to [OFF], set the projector's subnet mask on the network to which the projector is connected.	
GATEWAY	If "DHCP" is set to [OFF], set the projector's default gateway on the network to which the projector is connected.	
DNS	If "DHCP" was set to [OFF], set the IP address of the DNS server on the network to which the projector is connected.	

## 5-6-8. NETWORK SERVICE

Set whether or not to connect to the projector's HTTP server.

### HTTP SERVER

OFF	Connection to the HTTP server is not possible.
ON	Connection to the HTTP server is possible.

## 5-6-9. CONTROL ID

Multiple projectors can be operated individually by assigning IDs to them and switching IDs using a single remote control unit.

This function can also be used to set the same ID for multiple projectors and operate all the projectors at once with a single remote control unit.

CONTROL ID	OFF	The control ID function is disabled.
	ON	The control ID function is enabled.
CONTROL ID NUMBER	Select a number from 1 to 254 to assign to the projector. The factory default setting is "1".	

---

**NOTE:**


- When "CONTROL ID" is set to [ON], it is not possible to operate the projector(s) from remote control units that do not support the control ID function (the operation buttons on the projector can still be used).

## How to set and change IDs on the remote control

## 1. Turn on the projector's power.

2. Press the ID SET button on the remote control.

The control ID screen is displayed.

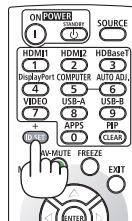

When "CONTROL ID" is set to [OFF]

**CONTROL ID (ACTIVE)**  
**CONTROL ID NUMBER**

At this time, if the current remote control ID can operate the projector, the "Active" screen is displayed; if not, the "Inactive" screen is displayed.

If you want to operate a projector for which "Inactive" is displayed, set the remote control to the same number as the projector's control ID number set in step 3.

When "CONTROL ID" is set to [ON], the control ID number is "1", and the remote control ID matches

**CONTROL ID (ACTIVE)**

When "CONTROL ID" is set to [ON], the control ID number is "1", and the remote control ID does not match

**CONTROL ID (INACTIVE)**  
**CONTROL ID NUMBER**


**3. Press and hold the ID SET button on the remote control, then press a number button to set the remote control's ID.**

For example, to change to the control ID to "3", press number 3.

To set no ID (and operate all the projectors at once), either input "000" or press the CLEAR button.

TIP:

- You can register remote control IDs from 1 to 254.

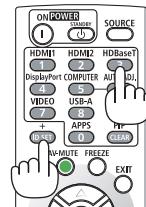

**4. Release the ID SET button.**

The control ID screen is displayed.

At this time, the active/inactive screen is updated with the changed remote control ID.

---

NOTE:

- The IDs may be cleared after a while if the remote control's battery is low or the battery is removed.
- Note that the set IDs will be cleared if any button is pressed while the remote control's battery is removed.

---

### 5-6-10. RESTORE FACTORY SETTINGS

This returns the adjusted values for all the adjustments and settings stored in the projector or for the currently displayed signal to the factory defaults.

## 5-7. USB-A

Display the viewer screen by following the steps in "4-2. Projecting images stored on USB flash drives (basic operation)". (→ page 40)

SET SLIDE	The images are displayed as slides according to the [EFFECT], "SORT ORDER", "ROTATE", "BEST FIT" and "REPEAT" settings. If you change any settings, be sure to set the cursor to [APPLY] and press the ENTER button.									
EFFECT	This sets the direction for switching slides. <table border="1" data-bbox="274 452 1023 531"> <tr> <td>SLIDE RIGHT</td><td>The slides switch from left to right.</td></tr> <tr> <td>SLIDE DOWN</td><td>The slides switch from top to bottom.</td></tr> </table>		SLIDE RIGHT	The slides switch from left to right.	SLIDE DOWN	The slides switch from top to bottom.				
SLIDE RIGHT	The slides switch from left to right.									
SLIDE DOWN	The slides switch from top to bottom.									
SORT ORDER	This sets the order for switching the slides. <table border="1" data-bbox="274 579 1023 738"> <tr> <td>NAME ORDER</td><td>The files or folders are sorted by name.</td></tr> <tr> <td>TIMER ORDER</td><td>The files or folders are sorted by time.</td></tr> <tr> <td>SIZE ORDER</td><td>The files or folders are sorted by size.</td></tr> <tr> <td>EXTEND ORDER</td><td>The files or folders are sorted by extension.</td></tr> </table>		NAME ORDER	The files or folders are sorted by name.	TIMER ORDER	The files or folders are sorted by time.	SIZE ORDER	The files or folders are sorted by size.	EXTEND ORDER	The files or folders are sorted by extension.
NAME ORDER	The files or folders are sorted by name.									
TIMER ORDER	The files or folders are sorted by time.									
SIZE ORDER	The files or folders are sorted by size.									
EXTEND ORDER	The files or folders are sorted by extension.									
ROTATE	This sets the direction of rotation of the images. <table border="1" data-bbox="274 786 1023 944"> <tr> <td>NO ROTATE</td><td>Rotation is disabled.</td></tr> <tr> <td>90 DEGREE</td><td>The images are rotated 90 degrees clockwise.</td></tr> <tr> <td>180 DEGREE</td><td>The images are rotated 180 degrees clockwise.</td></tr> <tr> <td>270 DEGREE</td><td>The images are rotated 270 degrees clockwise.</td></tr> </table>		NO ROTATE	Rotation is disabled.	90 DEGREE	The images are rotated 90 degrees clockwise.	180 DEGREE	The images are rotated 180 degrees clockwise.	270 DEGREE	The images are rotated 270 degrees clockwise.
NO ROTATE	Rotation is disabled.									
90 DEGREE	The images are rotated 90 degrees clockwise.									
180 DEGREE	The images are rotated 180 degrees clockwise.									
270 DEGREE	The images are rotated 270 degrees clockwise.									
BEST FIT	This sets the display size of the images. <table border="1" data-bbox="274 992 1023 1071"> <tr> <td>OFF</td><td>Displays the image at normal pixel resolution.</td></tr> <tr> <td>ON</td><td>Displays the image according to the screen aspect ratio.</td></tr> </table>		OFF	Displays the image at normal pixel resolution.	ON	Displays the image according to the screen aspect ratio.				
OFF	Displays the image at normal pixel resolution.									
ON	Displays the image according to the screen aspect ratio.									
REPEAT	This sets the action performed after the last slide is displayed. <table border="1" data-bbox="274 1119 1023 1246"> <tr> <td>OFF</td><td>After the last image is displayed, the image list screen reappears.</td></tr> <tr> <td>ON</td><td>After the last image is displayed, the slideshow starts over from the first image.</td></tr> </table>		OFF	After the last image is displayed, the image list screen reappears.	ON	After the last image is displayed, the slideshow starts over from the first image.				
OFF	After the last image is displayed, the image list screen reappears.									
ON	After the last image is displayed, the slideshow starts over from the first image.									
APPLY	This applies the settings for [EFFECT], [SORT ORDER], [ROTATE], [BEST FIT], and [REPEAT]. If you change any settings, be sure to set the cursor to [APPLY] and press the ENTER button.									

## 5-8. INFORMATION

This displays information about the projected signal, the projector, etc.

INPUT	This displays the terminal name selected with the input selector. Also, when set to COMPUTER, HDMI1, or HDMI2, the signal resolution is displayed.
HORIZONTAL FREQUENCY	This displays the input signal's horizontal synchronizing frequency in kHz. "--- kHz" is displayed when there is no signal.
VERTICAL FREQUENCY	This displays the input signal's vertical synchronizing frequency in Hz. "--- Hz" is displayed when there is no signal.
LIGHT HOURS USED	This displays the light source's usage time.
MODEL NAME	This displays the model name.
SERIAL NUMBER	This displays the projector's serial number.
FIRMWARE VERSION	This displays the projector's firmware version.
SUBCPU	This displays the projector's SUBCPU firmware version.


## 6. Making Connections

### NOTE:

- The connection cable is not enclosed with the projector. Please get ready a suitable cable for the connection.  
For HDMI, LAN, RS-232C and AUDIO, please use a shielded signal cable.  
Use of other cables and adapters may cause interference with radio and television reception.

### 6-1. Connecting to Computers and Video Devices

Below is an example of connections to external devices.

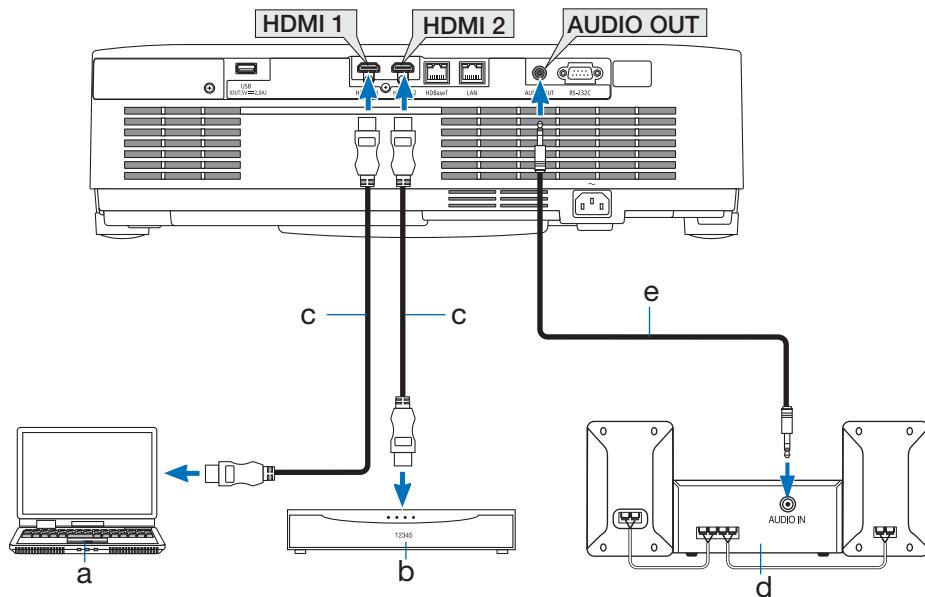

a: Computer, etc. / b: Blu-ray player, etc. /

c: HDMI cable (not supplied) (Use a Premium High Speed HDMI Cable.) /

d: Audio device, etc. / e: Stereo mini-plug audio cable (not supplied)

- The projector automatically detects whether the HDMI signal level is full range or limited range. If the HDMI input signal is not projected correctly, check the signal level of the device connected to the HDMI1 or HDMI2 input terminal and switch the [HDMI SETTINGS] in the on-screen menu. (→ page 56)


## 6-2. Connecting to a Wired LAN

When the projector is connected to a wired LAN, you can use the web browser on a computer to control the projector using the HTTP server function.

For more information, see "7. Connecting to a Network" (→ page 78).

### Example of LAN connection

Example of wired LAN connection

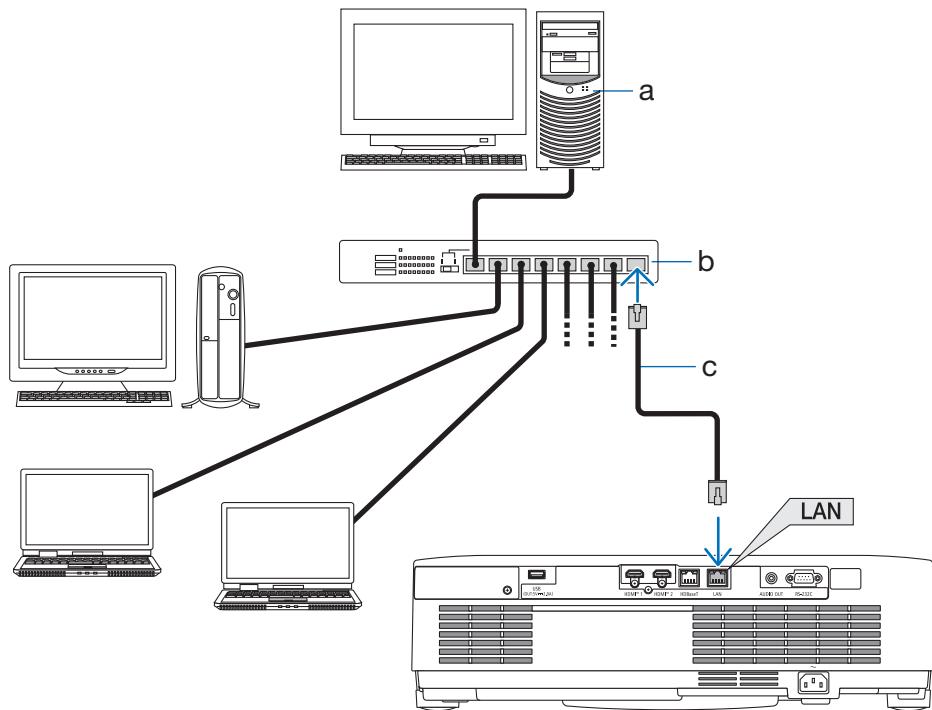

a: Server / b: Hub /

c: LAN cable (not supplied)

(Use a shielded twisted pair (STP) cable of Category 5e or higher for the LAN cable.)


### 6-3. Connecting to a HDBaseT transmission device (sold commercially)

HDBaseT is a connection standard for home appliances that is established by the HDBaseT Alliance. Use a LAN cable sold commercially to connect the HDBaseT port of the projector (RJ-45) to a HDBaseT transmission device sold commercially.

The HDBaseT port of the projector supports HDMI signals (HDCP) from transmission devices, and serial control from external devices.

- Refer to the owner's manual accompanied with your HDBaseT transmission for connecting with your external devices.

#### Connection example

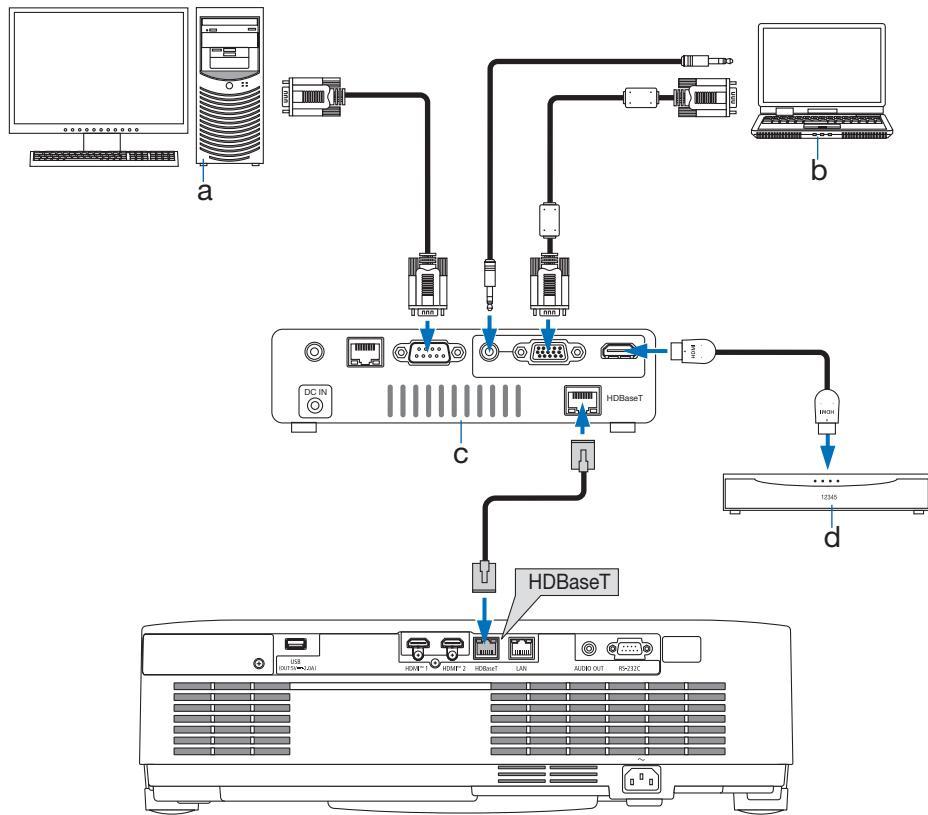

a: Computer (for control use) / b: Computer (for output use) / c: Example of a transmission device /  
d: HDMI output video device


**NOTE:**

- Please use a shielded twisted pair (STP) cable of Category 5e or higher for the LAN cable (sold commercially).
- The maximum transmission distance over the LAN cable is 100 m. (the maximum distance is 70 m for a 4K signal)
- Short cable such as 0.5 m is not applicable in HDBaseT Projector installations.
- Please do not use other transmission equipment between the projector and transmission equipment. The picture quality may be deteriorated as a result.
- This projector is not guaranteed to work with all HDBaseT transmission devices sold commercially.

---

## 6-4. Portrait projection (vertical orientation)

Portrait screens from a computer can be projected by installing the projector in a vertical orientation.

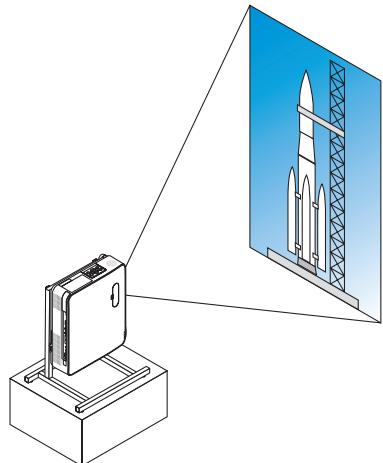

### Precautions during installation

- Please do not install the projector in a vertical orientation on top of the floor or table on its own. The intake vent or the exhaust vent may be obstructed, resulting in the projector getting warm and the possibility of fire and malfunction occurring.
- A stand for supporting the projector needs to be made for this purpose. In this case, the stand must be designed such that the center of gravity of the projector is located well within the legs of the stand. If not, the projector may fall over and result in injury, damage and malfunction.
- Take measures to prevent the projector from falling in anticipation of a malfunction occurring in the projector or stand.


**Design and manufacturing conditions for the stand**

Please engage an installation service provider for the design and manufacture of the customized stand to be used for portrait projection. Please ensure that the following are complied with when designing the stand.

1. When installing the projector with its exhaust vent facing downward, maintain a distance of at least 200 mm between the projector exhaust vent and the floor.  
Do not obstruct the intake vent at the rear of the projector.
2. Use the four screw holes on the bottom face of the projector to secure it to the stand.  
Screw hole center dimension: 200 x 250 mm  
Screw hole dimension on the projector: M4 with a maximum depth of 8 mm.
  - \* Please design the stand such that the rear legs on the bottom face of the projector do not contact the stand. The tilt foot can be turned and removed.
3. Horizontal adjustment mechanism (for example, bolts and nuts in four locations)
4. Please design the stand such that it does not topple over easily.

## Reference drawings

\* The drawing showing the dimensional requirements is not an actual stand design drawing.  
(Unit: mm)

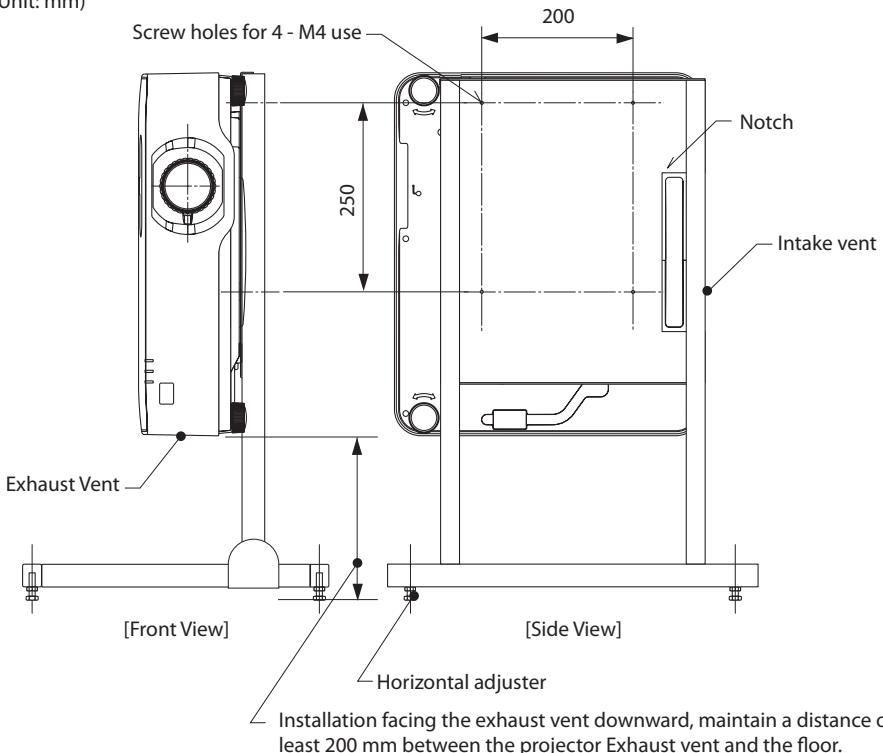

## 7. Connecting to a Network

### 7-1. What You Can Do by Connecting to a Network

- A web browser on a computer or tablet connected to the same network (via wireless or wired router) can be used to access the projector's HTTP server through its wired LAN connection. This allows the user to control the projector and configure network settings.
- The projector's HTTP server allows you to change the HTTP server login password, adjust images, adjust the screen, configure network settings, make the Crestron control settings, AMX settings, PJLink settings, and more.

### 7-2. Enabling the projector's wired LAN function

#### Preparation

- Connect a LAN cable to the projector. (→ page 72)


1. Press the MENU button to display the on-screen menu.

2. Use the ▼ / ▲ buttons to move the cursor to the [SETUP (2)] icon, then press the ▶ or ENTER button.

The cursor moves to the submenu.


3. Use the ▼/▲ buttons to select [NETWORK SETTING], then press the ENTER button.

The NETWORK SETTING menu is displayed.

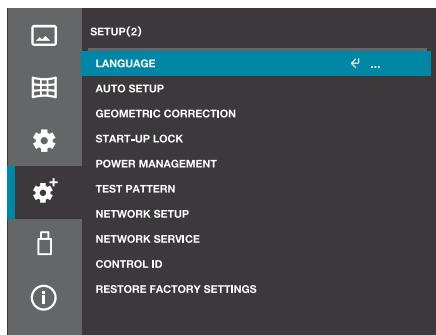


4. Check that the cursor is set to [NETWORK SETTING], then press the ENTER button.

The wired LAN settings screen is displayed.

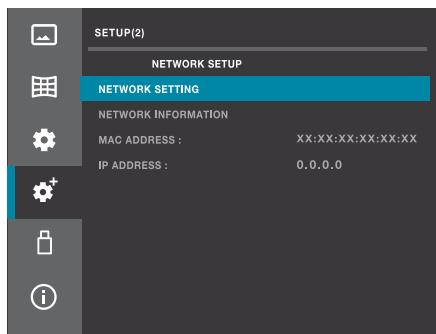

**5. Check that the cursor is set to [PROFILE], then press the ENTER button.**

The background of [DISABLE] in PROFILE changes to blue.

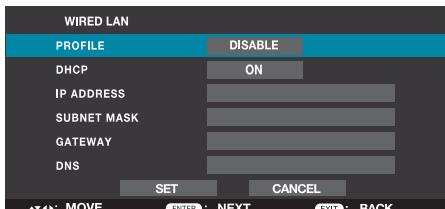

**6. Use the ▼/▲ buttons to select [ENABLE], then press the ENTER button.**

When PROFILE is set to [ENABLE], wired LAN is enabled.

- If you want to save the network settings in the projector while DHCP is [ON], proceed to **step 13**.
- To change to a desired IP address, proceed to **step 7**.


**Changing the IP address**

(Example: To set the projector's IP address to 192.168.1.100)

**7. Use the ▼/▲ buttons to select [DHCP], then press the ENTER button.**

**8. Use the ▼/▲ buttons to select [OFF], then press the ENTER button.**

The IP address can be changed when DHCP is turned off.

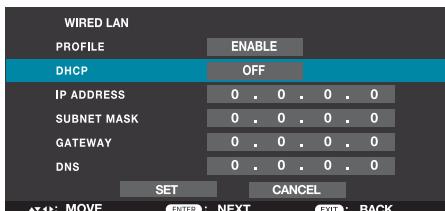

**9. Use the ▼/▲ buttons to select [IP ADDRESS], then press the ENTER button.**

The IP address' leftmost input field turns blue.



**10. Use the ▼/▲ button to change the value, then press the ENTER button.**

The next IP address input field to the right turns blue.

**11. Repeat step 10 to set the IP address.**

When you press the ENTER button at the right-most input field, the IP address row turns blue.

**12. Use this same procedure to set [SUBNET MASK], [GATEWAY], [DNS], etc.**

PROFILE	ENABLE
DHCP	OFF
IP ADDRESS	192 . 0 . 0 . 0
SUBNET MASK	0 . 0 . 0 . 0

**13. Use the ▼/▲ buttons to set the cursor to [SET], then press the ENTER button.**

The network settings are saved in the projector unit.

PROFILE	ENABLE
DHCP	OFF
IP ADDRESS	192 . 168 . 1 . 100
SUBNET MASK	0 . 0 . 0 . 0
GATEWAY	0 . 0 . 0 . 0


WIRED LAN	
PROFILE	ENABLE
DHCP	OFF
IP ADDRESS	192 . 168 . 1 . 100
SUBNET MASK	255 . 255 . 255 . 0
GATEWAY	192 . 168 . 1 . 1
DNS	192 . 168 . 1 . 1
SET	CANCEL
◀▶: MOVE	ENTER : NEXT
	EXIT : BACK

**7-3. Connecting to the projector's HTTP server****Preparation**

- Configure the projector's network settings. (→ page 78)

**1. Display and confirm the projector's IP address.**

• Select [SETUP(2)] → [NETWORK SETUP] from the projector's on-screen menu.

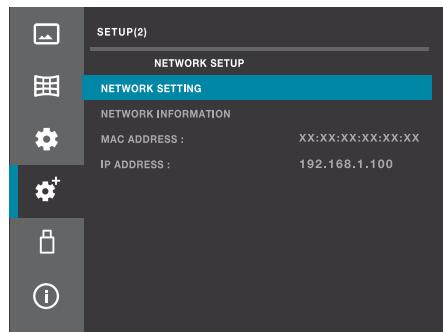
**2. Use the network settings on your computer or tablet.****3. Launch the web browser on your computer or tablet device.****Screen example**

**4. Input the projector's IP address as displayed on the network settings screen into the web browser's URL field as shown below.**

If the IP address displayed on the screen is "192.168.1.100"

Enter "http://192.168.1.100/index.html" into the URL input field.


After a moment, the HTTP server screen will be displayed on the web browser.

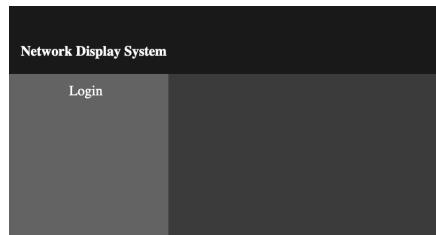

**5. Click the [Login] button in the upper left of the screen.**

The screen for setting the login password appears the first time you click the [Login] or after you have reset the factory defaults in the on-screen menu.

- Once the password has been set, the login password input screen will appear the next time you click the [Login] button.

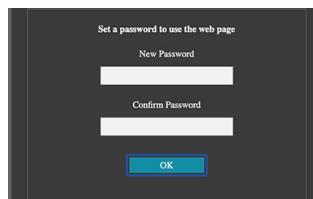

**6. Input your desired login password and the same password again, then click the [OK].**

The login password input screen is displayed.

- The password can be changed on the HTTP server screen under [General Setup].



**7. Input the password set in step 6, then click the [Login].**

The HTTP server screen is displayed.

Network Display System> System Status		
System Status	Model Name	XP-P701U
General Setup	Versions	
Picture Setup	Firmware Version	0.0.000
Image Setup	LAN Status	
Network Setup	IP Address	192.168.1.100
Logo	Subnet Mask	255.255.255.0
	Default Gateway	192.168.1.1
	Wire MAC Address	00-0E-0A-01-00-00

The settings on the HTTP server screen are as follows:

System Status	Model Name	Displays the device model name.	
	Versions	This displays the projector's firmware version.	
	LAN Status	This displays the LAN connection status.	
General Setup	Change Password for Webpage	The login password can be changed here.	
	Projector Name	Enter the device name when controlling it over the network.	
	Power & Input	This turns the power on and off and switches the signal.	
Picture Setup	Brightness	This adjusts the brightness of the projected image.	
	Contrast	This adjusts the contrast of the projected image.	
	Sharpness	This adjusts the sharpness of the projected image.	
	Color Temperature (Red/Green/Blue)	This adjusts the color temperature of the projected image.	
Image Setup	Aspect	This switches the projected image's aspect ratio.	
	Freeze	This switches screen freeze on and off.	
	V Keystone	This corrects for vertical keystone distortion.	
	H Keystone	This corrects for horizontal keystone distortion.	
	Corner correction	TopLeft_x	This corrects for distortion in the upper left corner.
		TopLeft_y	
		TopRight_x	This corrects for distortion in the upper right corner.
		TopRight_y	
		BottomLeft_x	This corrects for distortion in the lower left corner.
		BottomLeft_y	
		BottomRight_x	This corrects for distortion in the lower right corner.
		BottomRight_y	
Network Setup	LAN Setup	Obtain an IP address automatically	This select whether to enable or disable DHCP.
		Use the following IP address.	When DHCP is disabled, set the IP address, subnet mask, gateway, and DNS below.
		IP Address	Sets the IP address when DHCP is disabled.
		Subnet	Sets the subnet mask when DHCP is disabled.
		Gateway	Sets the gateway when DHCP is disabled.
		DNS	Sets the DNS when DHCP is disabled.

Network Setup	Crestron control	IP Address	Sets the options for Crestron control.
		IP ID	
		PORT	
	PJLink Setup	Password Enable	Select on or off for password setting.
		Password Disable	
		Input Password	Input the PJLink password.
		Confirm Password	Re-enter the PJLink password to confirm.
	Network Service	AMX Beacon	Select whether or not to send an AMX beacon. - Default: Off (not sent)
		PJLink	Select whether to enable or disable PJLink. - Default: On (enabled)
		Crestron	Select whether to enable or disable Crestron. - Default: On (enabled)
		PC Control	Select whether to enable or disable the projector's RS-232C terminal. - Default: On (enabled)
		Search	When turned on, the projector responds to search notifications used by compatible applications. When turned off, the projector does not respond to search notifications. - Default: On (responds)
Logo	Choose File	Select the image to be used as the logo.	
	Update	Sends the selected logo image to the projector.	

## NOTE:

- Always click [APPLY] after making a change to any General Setup or Network Setup setting.
- Any changes to the Network Service settings will be reflected the next time the projector is turned on.
- When you enter the password pay enough attention to people around for the password abuse prevention. If you have anxiety the password is cheated, change the password immediately.
- When using the projector in a network environment, always follow the network administrator's instructions to configure the settings.
- Depending on your network environment, the display speed or button response may be slow, or operations may not be accepted. In such cases, consult your network administrator.

Also, if you continue to operate the buttons, the projector may stop responding. In such cases, wait a while and then perform the operation again. If the projector still does not respond after waiting a while, turn the power off then back on.

- If the network settings screen does not appear in your web browser, press the Ctrl + F5 keys to refresh the web browser's display.
- The projector uses JavaScript and cookies, so configure your browser to enable these functions. The setting method varies depending on the firmware version. Refer to the help file or other explanations for the software.
- About Proxy Servers

Depending on the type and setting method of the proxy server, operation of the web browser via the proxy server may not be possible.


Depending on the type of proxy server, phenomena such as what was actually set not being displayed due to the effect of caching, or settings made from the web browser not being reflected, may occur. We recommend you avoid using a proxy server if possible.

TIP:

- If you forget your password, go to [SETUP(2)] → [RESTORE FACTORY SETTINGS] in the unit's on-screen menu to reset the password. Using [RESTORE FACTORY SETTINGS] will return all settings to the factory default.
- What is PJLink?  
PJLink is a standardization of protocol used for controlling projectors of different manufacturers. This standard protocol is established by Japan Business Machine and Information System Industries Association (JBMIA) in 2005.
- The CRESTRON settings are required only for use with CRESTRON ROOMVIEW.  
For more information, visit <https://www.crestron.com>

### 7-4. Registering the Background Logo

An image can be sent from a computer to the projector and registered as the background logo. On the projector's HTTP server screen, display the [Logo] tab, then click [Choose File]. Next, select the image file you want to display on the logo screen, then update the background logo.

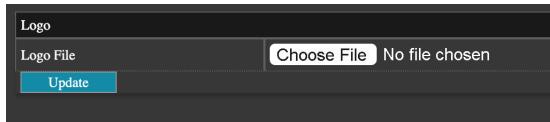

#### Conditions for logo images

- \* File size: Within 500 KB
- \* Image size: Within the projector's resolution (1920 × 1200 dots)
- \* File format: JPEG (full color)

Once registered, if [BACKGROUND] in the on-screen menu's [IMAGE OPTIONS] is set to [LOGO], the logo image will be displayed in the background when there is no signal.

If the logo image is smaller than the projector's resolution, the logo image is displayed in the center and the surrounding area is black.

NOTE:

- Make sure the projector is powered on before clicking "Update". The logo image cannot be transmitted if the projector is in Sleep or Standby mode.


## 8. Maintenance

### 8-1. Cleaning the Lens

#### **WARNING**

- Turn off the power, unplug the power plug from the socket and remove the lens for cleaning. If the unit turns on while cleaning the lens, the strong light from the lens could damage your eyes. It could also burn your fingers.
- Do not use a spray containing flammable gas to remove dust attached to the lens, etc. Doing so may result in fire.

- The projector has a plastic lens. Use a commercially available plastic lens cleaner.
- Do not scratch or mar the lens surface as a plastic lens is easily scratched.
- Never use alcohol or glass lens cleaner as doing so will cause damage to the plastic lens surface.

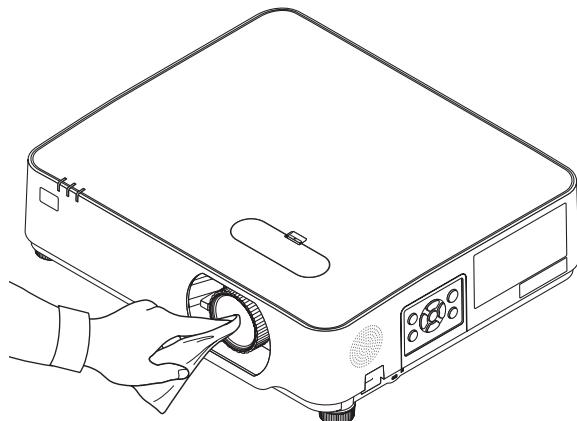


## 8-2. Cleaning the Cabinet

### **WARNING**

- Turn off the projector, and unplug the projector before cleaning.
- Please do not use a spray containing flammable gas to remove dust attached to the cabinet. Doing so may result in fires.

Turn off the projector, and unplug the projector before cleaning.

- Use a dry soft cloth to wipe dust off the cabinet. If heavily soiled, use a mild detergent.
- Never use strong detergents or solvents such as alcohol or thinner.
- When cleaning the ventilation slits or the speaker using a vacuum cleaner, do not force the brush of the vacuum cleaner into the slits of the cabinet.

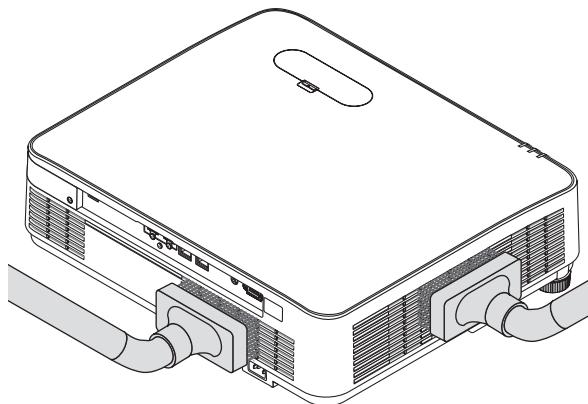

Vacuum the dust off the ventilation slits or the speaker.

- Poor ventilation caused by dust accumulation in ventilation openings can result in overheating and malfunction. These areas should be cleaned regularly.
- Do not scratch or hit the cabinet with your fingers or any hard objects
- Contact your dealer for cleaning the inside of the projector.

#### NOTE:


- Do not apply volatile agent such as insecticide on the cabinet, the lens, or the screen. Do not leave a rubber or vinyl product in prolonged contact with it. Otherwise the surface finish will be deteriorated or the coating may be stripped off.

## 9. Appendix

### 9-1. Setting Up the Screen and the Projector

Use this to get a general idea of what the screen size will be when set in a certain position, what size screen you will need, and what distance you will need to project images of the desired size.

The projection distance range at which focusing is possible is 0.68 m to 11.47 m. Install within this range.

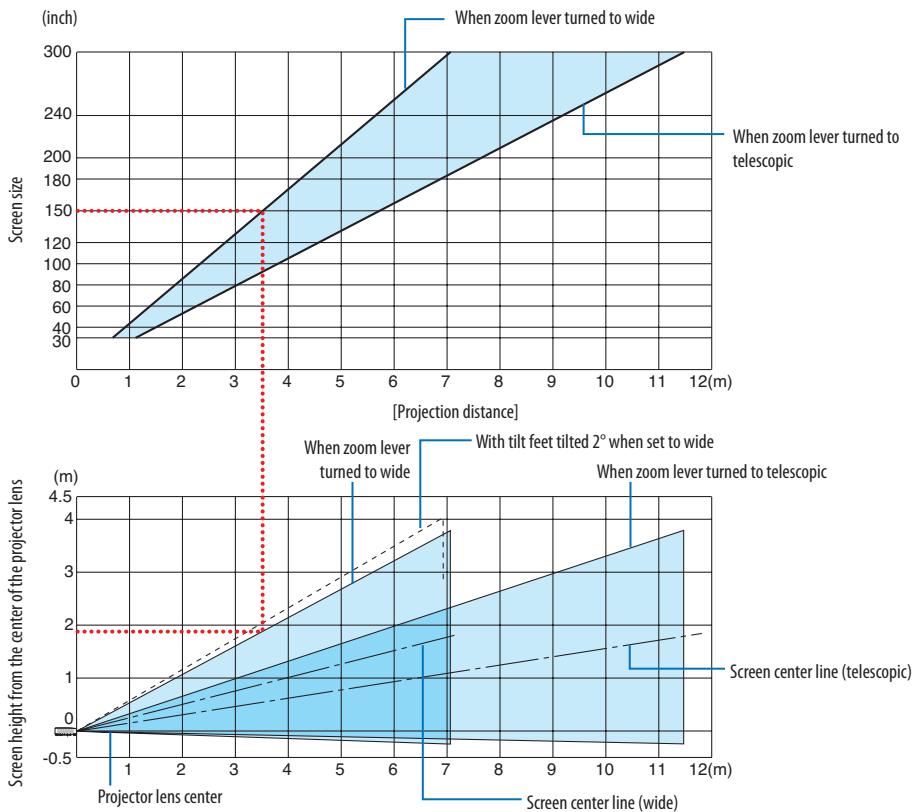


- \* The figures indicated for "height of screen from projector lens center" on the projection distance table are for a lens shift of 44% V.

#### Reading the Table

From the upper table on this page, to project wide images on a 150 screen, install at about 3.5 m from the front.

Also, from the lower table we can see that about 1.9 m are required from the projector's lens center to the upper edge of the screen. Use this to see whether or not enough height can be provided from the projector to the ceiling and for installing the screen. The diagram shows the projection distance when the projector is installed horizontally. The projected image can be moved up and down, left and right using the lens shift function. (→ page 24)

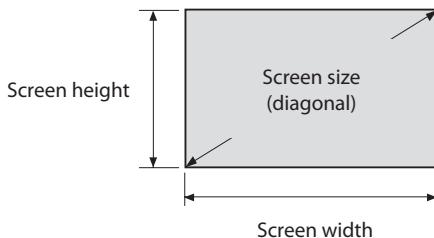**Tables of screen sizes and dimensions**


Size (inches)	Screen width		Screen height	
	(cm)	(inches)	(cm)	(inches)
30	64.6	25.4	40.4	15.9
40	86.2	33.9	53.8	21.2
60	129.2	50.9	80.8	31.8
80	172.3	67.8	107.7	42.4
90	193.9	76.3	121.2	47.7
100	215.4	84.8	134.6	53.0
120	258.5	101.8	161.5	63.6
150	323.1	127.2	201.9	79.5
180	387.7	152.6	242.3	95.4
200	430.8	169.6	269.2	106.0
240	516.9	203.5	323.1	127.2
250	538.5	212.0	336.5	132.5
270	581.6	229.0	363.5	143.1
300	646.2	254.4	403.9	159.0

## Example of installation on a desktop

The diagram below shows an example of when the projector is used on a desktop.

Horizontal projection position: Equal distance to the left and right from the center of the lens

Vertical projection position: (see table below)

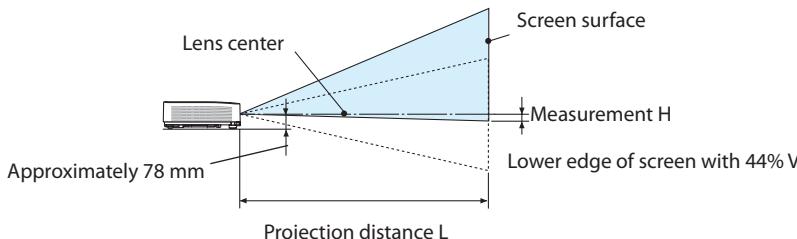

(NOTE) Height from lens center to lower edge of screen (with tilt feet screwed in)

Screen size (inches)	Throw distance L				Height H			
	(m)		(inches)		(cm)		(inches)	
	Wide	Tele	Wide	Tele	0%V	-44%V	0%V	-44%V
30	0.68	1.12	26.8	44.1	-20.2	-2.4	-7.9	-1.0
40	0.92	1.50	36.1	59.2	-26.9	-3.2	-10.6	-1.3
60	1.39	2.27	54.7	89.4	-40.4	-4.8	-15.9	-1.9
80	1.86	3.04	73.3	119.5	-53.8	-6.5	-21.2	-2.5
90	2.10	3.42	82.6	134.6	-60.6	-7.3	-23.8	-2.9
100	2.34	3.80	91.9	149.7	-67.3	-8.1	-26.5	-3.2
120	2.81	4.57	110.5	179.9	-80.8	-9.7	-31.8	-3.8
150	3.52	5.72	138.5	225.1	-101.0	-12.1	-39.7	-4.8
180	4.23	6.87	166.4	270.4	-121.2	-14.5	-47.7	-5.7
200	4.70	7.63	185.0	300.5	-134.6	-16.2	-53.0	-6.4
240	5.65	9.17	222.2	360.9	-161.5	-19.4	-63.6	-7.6
270	6.35	10.32	250.1	406.1	-181.7	-21.8	-71.5	-8.6
300	7.06	11.47	278.1	451.4	-201.9	-24.2	-79.5	-9.5

## Lens shifting range

This projector is equipped with a lens shift function (→ page 24) for adjusting the image position using dials. Lens shifting is possible within the range shown below.

### NOTE:

- In case lens shifted volume exceeds the below illustrated range, blur and shade may appear around ends of projected image.


Legend: V “Vertical” refers to the screen height and H “Horizontal” refers to the screen width. The lens shift range is expressed as a ratio of height and width, respectively.

Lens shifting range:


Vertical direction: +44%, -0%

Horizontal direction: ±20%

## DESKTOP FRONT, DESKTOP REAR

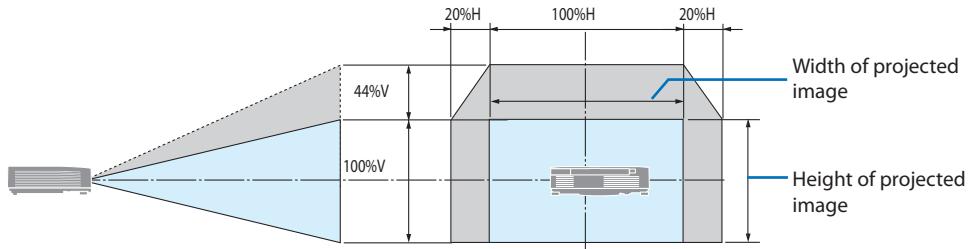

## CEILING FRONT, CEILING REAR

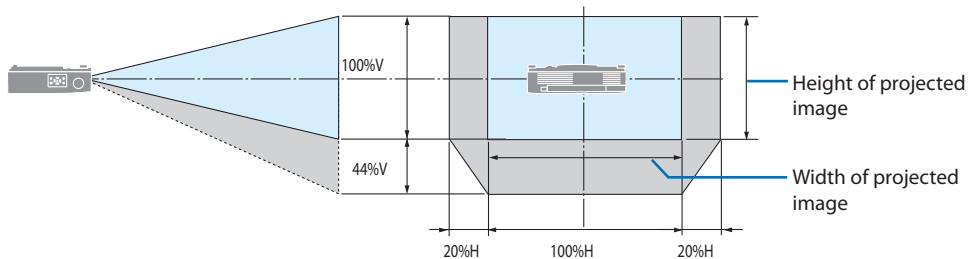

(Example) When using to project on a 150" screen

According to the “Table of screen sizes and dimensions” (→ page 88), H = 127.2"/323.1 cm, V = 79.5"/201.9 cm.

Adjustment range in the vertical direction: the projected image can be moved upwards  $0.44 \times 79.5" / 201.9 \text{ cm} \approx 35.0" / 89 \text{ cm}$  (when the lens is at the center position).

Adjustment range in the horizontal direction: the projected image can be moved to the left  $0.20 \times 127.2" / 323.1 \text{ cm} \approx 25.4" / 65 \text{ cm}$ , to the right approximately  $25.4" / 65 \text{ cm}$ .

\* Figures differ by several % because the calculation is approximate.

## 9-2. Compatible Input Signal List

Signal name	Resolution ( dots )	Aspect ratio	Refresh Rate ( Hz )
VGA	640 × 480	4 : 3	60
SVGA	800 × 600	4 : 3	60
XGA	1024 × 768	4 : 3	60
HD	1280 × 720	16 : 9	60
WXGA	1280 × 768	15 : 9	60
	1280 × 800	16 : 10	60
	1366 × 768	16 : 9	60
Quad-VGA	1280 × 960	4 : 3	60
SXGA	1280 × 1024	5 : 4	60
SXGA+	1400 × 1050	4 : 3	60
WXGA+	1440 × 900	16 : 10	60
WXGA++	1600 × 900	16 : 9	60
WSXGA+	1680 × 1050	16 : 10	60
Full HD	1920 × 1080	16 : 9	60*1
WUXGA	1920 × 1200	16 : 10	60*1
UWFHD	2560 × 1080	21 : 9	60
4K UHD	3840 × 2160	16 : 9	30
HDTV(1080p)	1920 × 1080	16 : 9	24/50/60
HDTV(1080i)	1920 × 1080	16 : 9	50/60
HDTV (720p)	1280 × 720	16 : 9	50/60
SDTV (480p)	720 × 480	4:3 / 16:9	60
SDTV (576p)	720 × 576	4:3 / 16:9	50
SDTV (480i)	720 × 480	4:3 / 16:9	60
SDTV (576i)	720 × 576	4:3 / 16:9	50

\*1Native resolution

If a signal except "Native Resolution" is input, the scaling may cause uneven thickness of characters and ruled lines, and blurred colors.

## 9-3. Specifications

This section provides technical information about projector's performance.

Model name	P701U-W	P621U-W
Method	Three primary color liquid crystal shutter projection method	
Specifications of main parts		
Liquid crystal panel		
Size	0.64" x 3 (aspect ratio: 16:10)	
Pixels (*1)	2,304,000 (1920 dots x 1200 lines)	
Projection lens		$F = 1.58 - 2.02, f = 15.3 - 24.6 \text{ mm, Zoom Ratio} = 1.6$
Zoom	Manual	
Focus	Manual	
Lens shifting	Manual (H: ±20%, V: +44%, -0%)	
Light source		Laser diode with Phosphor
Optical device		Optical isolation by dichroic mirror, combining by dichroic prism
Light output (*2)	7000 lm (*3) 7400 lm (Center)	6200 lm (*3) 6500 lm (Center)
Screen size (throw distance)	30 to 300 inches (0.7–11.5 m)	
Color reproducibility	10-bit color processing (approx. 1.07 billion colors)	
Scanning frequency		
Horizontal		15 to 100 kHz
Vertical		50 to 120 Hz
Input/output terminals		
HDMI	Video input	Type A x 2 Deep Color, LipSync, HDCP (*4)
	Audio input	Sampling frequency: 32/44.1/48 kHz Sampling bit: 16/20/24 bit
HDBaseT	Video input	RJ-45 x 1, Deep Color, LipSync, HDCP (*4)
	Audio input	Sampling frequency: 32/44.1/48 kHz Sampling bit: 16/20/24 bit
Audio output		Stereo mini jack x 1 (Common to all signals)
USB	USB type A x 1, 5.0 V/2.0 A power supply	
LAN	RJ-45 x 1, 10BASE-T/100BASE-TX	
Control Terminals		
RS-232C	D-Sub 9-pin x 1	
Built-in Speaker	16 W (monaural)	
Usage environment (*5)	Operating temperature: 0 to 45°C / 32 to 113°F Operating humidity: 20 to 80% (with no condensation)	
	Storage temperature: -10 to 50°C / 14 to 122°F Storage humidity: 20 to 80% (with no condensation)	
	Operating altitude: 0 to 2600 m/8500 feet (1600 to 2600 m/5500 to 8500 feet: Set [FAN MODE] to [HIGH ALTITUDE])	
Power supply	100–240 VAC, 50/60 Hz	

Model name	P701U-W	P621U-W
Power consumption	375 W (100–130 VAC) 365 W (200–240 VAC)	315 W (100–130 VAC) 310 W (200–240 VAC)
Power consumption (Standby state)		
STANDBY MODE	NORMAL	0.31 W (100–130 VAC) / 0.38 W (200–240 VAC)
	NETWORK STANDBY	0.8 W (100–130 VAC) / 1.0 W (200–240 VAC)
Rated input current	5.0 A (100 -130 VAC) - 2.0 A (200 -240 VAC)	3.8 A (100 -130 VAC) - 1.6 A (200 -240 VAC)
Power cord specification	10 A or higher	
External dimensions	18.9" (width) x 4.8" (height) x 16" (depth)/ 480 (width) x 122 (height) x 407 (depth) mm (not including protrusions)	
	18.9" (width) x 5.6" (height) x 16" (depth)/ 480 (width) x 142.5 (height) x 407 (depth) mm (including protrusions)	
Weight	21.2 lbs / 9.6 kg	20.7 lbs / 9.4 kg

\*1 Effective pixels are more than 99.99%.

\*2 Brightness when PICTURE MANAGEMENT is set to [HIGH-BRIGHT] and LIGHT MODE is set to [NORMAL: 100%].

The brightness will decrease slightly if any other mode is selected.

\*3 Compliance with ISO 21118-2020

\*4 If you are unable to view material via the HDMI input, this does not necessarily mean the projector is not functioning properly. With the implementation of HDCP, there may be cases in which certain content is protected with HDCP and might not be displayed due to the decision/intention of the HDCP community (Digital Content Protection, LLC).

Video: Deep Color, 8/10/12-bit, Lip Sync.

Audio: LPCM; up to 2 ch, sample rate 32/44.1/48 KHz, sample bit; 16/20/24-bit

HDMI: Supports HDCP 1.4

HDBaseT: Supports HDCP 1.4

\*5 If the ambient temperature is high, the light source luminance (brightness) may automatically decrease due to the projector's protection function.

(This is typically around 33°C, but this varies depending on the operating environment.)

- These specifications and the product's design are subject to change without notice.

For additional information visit:


US: <https://business.sharpusa.com/>

Europe: <https://www.sharpnecdisplays.eu>

Global: <https://www.sharp-nec-displays.com/global/>


For information on our optional accessories, visit our website or see our brochure.

## 9-4. Cabinet Dimensions

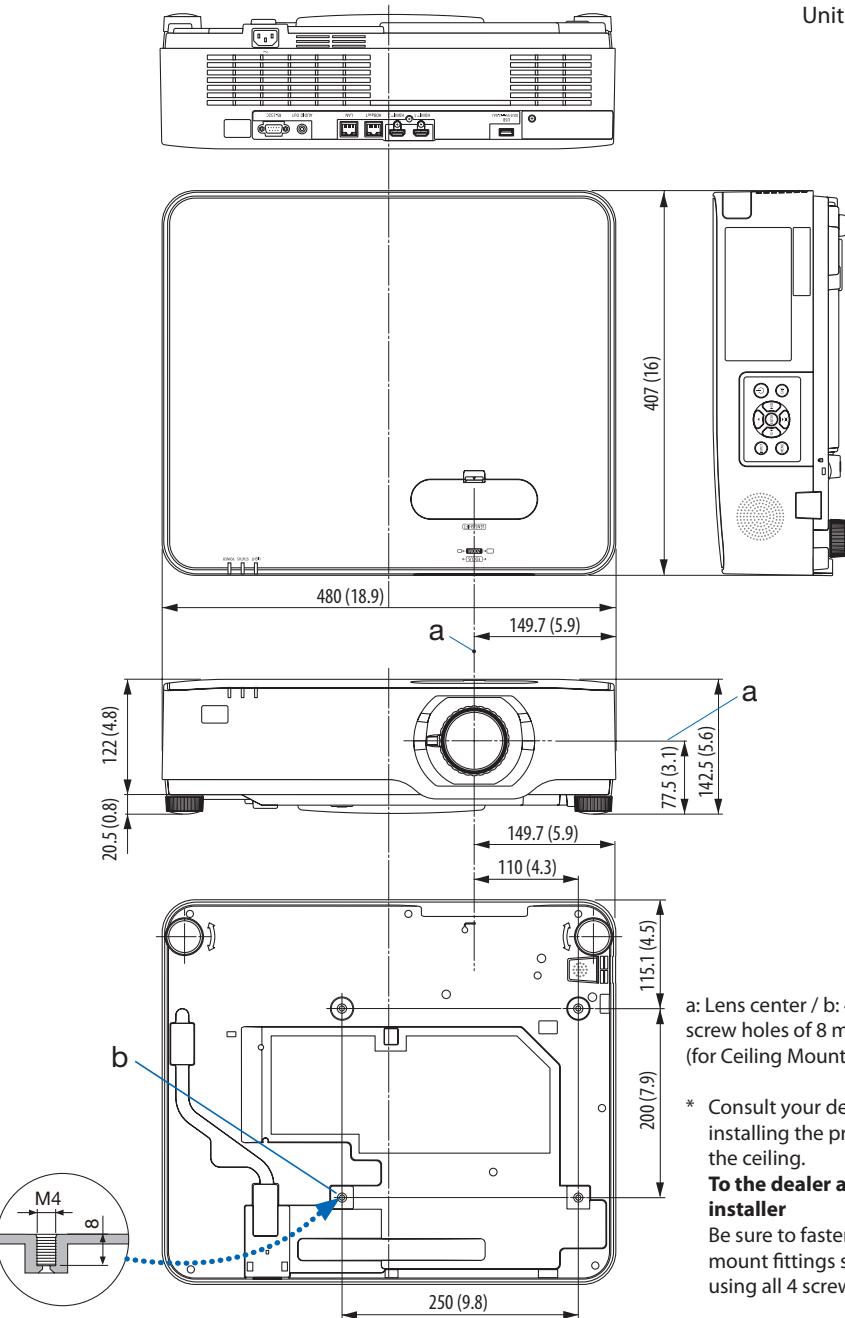


## 9-5. Pin assignments and signal names of main terminals

### HDMI 1/HDMI 2 Terminal (Type A)

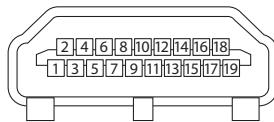


Pin No.	Signal
1	TMDS Data 2+
2	TMDS Data 2 Shield
3	TMDS Data 2-
4	TMDS Data 1+
5	TMDS Data 1 Shield
6	TMDS Data 1-
7	TMDS Data 0+
8	TMDS Data 0 Shield
9	TMDS Data 0-
10	TMDS Clock +
11	TMDS Clock Shield
12	TMDS Clock -
13	CEC
14	Disconnection
15	SCL
16	SDA
17	DDC/CEC grounding
18	+5 V power supply
19	Hot plug detection

### HDBaseT/LAN Port (RJ-45)

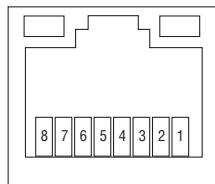


Pin No.	Signal
1	TxD+/HDBT0+
2	TxD-/HDBT0-
3	RxD+/HDBT1+
4	Disconnection/HDBT2+
5	Disconnection/HDBT2-
6	RxD-/HDBT1-
7	Disconnection/HDBT3+
8	Disconnection/HDBT3-

### USB Port (Type A)

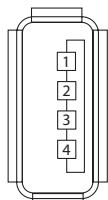

Pin No.	Signal
1	$V_{BUS}$
2	D-
3	D+
4	Grounding

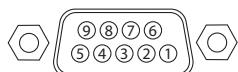**RS-232C Port (D-Sub 9 Pin)**

Pin No.	Signal
1	Unused
2	RxD reception data
3	TxD transmission data
4	Unused
5	Grounding
6	Unused
7	RTS transmission request
8	CTS transmission allowed
9	Unused

## 9-6. PC Control Codes and Cable Connection

### PC Control Codes

#### Command Format - A

Function	Code Data							
POWER ON	02H	00H	00H	00H	00H	02H		
POWER OFF	02H	01H	00H	00H	00H	03H		
INPUT SELECT HDMI1	02H	03H	00H	00H	02H	01H	A1H	A9H
INPUT SELECT HDMI2	02H	03H	00H	00H	02H	01H	A2H	AAH
INPUT SELECT HDBaseT	02H	03H	00H	00H	02H	01H	BFH	C7H
INPUT SELECT USB-A	02H	03H	00H	00H	02H	01H	1FH	27H
PICTURE MUTE ON	02H	10H	00H	00H	00H	12H		
PICTURE MUTE OFF	02H	11H	00H	00H	00H	13H		
SOUND MUTE ON	02H	12H	00H	00H	00H	14H		
SOUND MUTE OFF	02H	13H	00H	00H	00H	15H		

#### Command Format - B

Function	Code Data								
POWER ON	P	O	W	R	<SP>	<SP>	<SP>	1	<CR>
POWER OFF	P	O	W	R	<SP>	<SP>	<SP>	0	<CR>
INPUT SELECT HDMI1	I	R	G	B	<SP>	<SP>	3	1	<CR>
INPUT SELECT HDMI2	I	R	G	B	<SP>	<SP>	3	2	<CR>
INPUT SELECT HDBaseT	I	N	E	T	<SP>	<SP>	5	1	<CR>
INPUT SELECT USB-A	I	U	S	B	<SP>	<SP>	4	1	<CR>
AV MUTE OFF	I	M	B	K	<SP>	<SP>	<SP>	0	<CR>
AV MUTE ON	I	M	B	K	<SP>	<SP>	<SP>	1	<CR>
SOUND MUTE OFF	M	U	T	E	<SP>	<SP>	<SP>	0	<CR>
SOUND MUTE ON	M	U	T	E	<SP>	<SP>	<SP>	1	<CR>

#### NOTE:

- Command formats A and B are identified automatically.
- <SP> in Parameter area means "20H" in ASCII code.
- <CR> in Parameter area means "0DH" in ASCII code.
- Contact your local dealer for a full list of the PC Control Codes if needed.

## Cable Connection


### Communication Protocol

Baud rate	38400 bps
Data length	8 bits
Parity	No parity
Stop bit	One bit
X on/off	None
Communications procedure	Full duplex

NOTE:

- Depending on the equipment, a lower baud rate may be recommended for long cable runs.

## RS232C Terminal (D-Sub 9P)

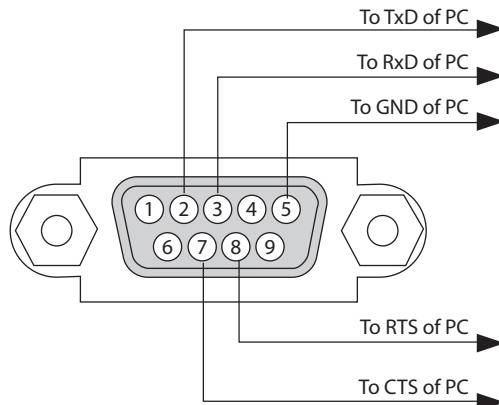

NOTE:

- Pins 1, 4, 6 and 9 are no used.
- Jumper "Request to Send" and "Clear to Send" together on both ends of the cable to simplify cable connection.
- For long cable runs it is recommended to set communication speed within projector menus to 9600 bps.

## 9-7. About the ASCII Control Command

This device supports the common ASCII Control Command for controlling our projector and monitor. Please visit our web site for detailed information about the command.

[https://www.sharp-nec-displays.com/dl/en/pj\\_manual/lineup.html](https://www.sharp-nec-displays.com/dl/en/pj_manual/lineup.html)

### How to connect with an external device

There are two methods to connect the projector with an external device such as a computer.

1. Connection thru the serial port.

Connects the projector to a computer by a serial cable (a cross cable).

2. Connection via network (LAN)

Connects the projector to a computer by a LAN cable.

Concerning to the type of LAN cable, please ask to your network administrator.

### Connection interface

1. Connection thru the serial port.

Communication Protocol

Item	Information
Baud rate	38400/19200/9600/4800 bps
Data length	8 bits
Parity bit	No parity
Stop bit	1 bit
Flow control	None
Communications procedure	Full duplex

2. Connection via network

Communication Protocol (Connection via LAN)

Item	Information
Communication speed	Set automatically (10/100 Mbps)
Supported standard	IEEE802.3 (10BASE-T) IEEE802.3u (100BASE-TX, Auto-Negotiation)

Use the TCP port number 7142 for transmitting and receiving command.

### Parameters for this device

#### Input command

Input terminal	Response	Parameter
HDMI1	hdmi1	hdmi1 or hdmi
HDMI2	hdmi2	hdmi2
HDBaseT	hdbaset	hdbaset
USB-A	usb-a	usb-a

**Status command**

Response	Error Status
error:temp	Temperature error
error:fan	Fan trouble
error:light	Light source trouble
error:system	System trouble

## 9-8. Troubleshooting

This section helps you resolve problems you may encounter while setting up or using the projector.

### Common Problems & Solutions


Problem	Check These Items
Does not turn on or shut down	<ul style="list-style-type: none"> <li>Check that the power cord is plugged in and that the power button on the projector cabinet or the remote control is on. (→ pages 18, 20)</li> <li>Check to see if the projector has overheated. If there is insufficient ventilation around the projector or if the room where you are presenting is particularly warm, move the projector to a cooler location.</li> <li>The light module may fail to light. Wait a full minute and then turn on the power again.</li> <li>Set [FAN MODE] to [HIGH ALTITUDE] when using the projector at altitudes approximately 5500 feet/1600 meters or higher. Using the projector at altitudes approximately 5500 feet/1600 meters or higher without setting to [HIGH ALTITUDE] can cause the projector to overheat and the projector could shut down. If this happens, wait a couple minutes and turn on the projector. (→ page 54) If you turn on the projector immediately after the light module is turned off, the fans run without displaying an image for some time and then the projector will display the image. Wait for a moment.</li> <li>In case it's hard to think the trouble is not caused on the above mentioned conditions, unplug the power cord from the outlet. Then wait 5 minutes before plugging it in again. (→ page 33)</li> </ul>
Will turn off	<ul style="list-style-type: none"> <li>Have you set the time in [POWER MANAGEMENT] on the on-screen menu? (→ page 64)</li> </ul>
No picture	<ul style="list-style-type: none"> <li>Check if the appropriate input is selected. (→ page 22) If there is still no picture, press the SOURCE button or one of the source buttons again.</li> <li>Ensure your cables are connected properly.</li> <li>Use menus to adjust the brightness and contrast. (→ page 48)</li> <li>Check that the AV-MUTE (image off) buttons are not pressed.</li> <li>Reset the settings or adjustments to factory preset levels using the [RESTORE FACTORY SETTINGS] in the Menu. (→ page 68)</li> <li>If the HDMI 1 IN or the HDMI 2 IN signal cannot be displayed, try the following. <ul style="list-style-type: none"> <li>Reinstall your driver for the graphics card built in your computer, or use the updated driver. For reinstalling or updating your driver, refer to the user guide accompanied with your computer or graphics card, or contact the support center for your computer manufacturer. Install the updated driver or OS on your own responsibility. We are not liable for any trouble and failure caused by this installation.</li> </ul> </li> <li>Signals may not be supported depending on the HDBaseT transmission device. RS-232C cannot be used in certain cases as well.</li> <li>Be sure to connect the projector and notebook PC while the projector is in standby mode and before turning on the power to the notebook PC. In most cases the output signal from the notebook PC is not turned on unless connected to the projector before being powered up. <ul style="list-style-type: none"> <li>If the screen goes blank while using your remote control, it may be the result of the computer's screen-saver or power management software.</li> </ul> </li> </ul>
Picture suddenly becomes dark	<ul style="list-style-type: none"> <li>A hot room may trigger the projector's protection functions, which can result in a temporary reduction in luminance (brightness). Reduce the temperature in the room.</li> <li>When the DYNAMIC CONTRAST function is enabled, the brightness may decrease depending on the image being displayed. (→ page 48)</li> </ul>
Image isn't square to the screen	<ul style="list-style-type: none"> <li>Reposition the projector to improve its angle to the screen. (→ page 23)</li> <li>Use the Keystone correction function to correct the trapezoid distortion. (→ page 29)</li> </ul>

Problem	Check These Items
Picture is blurred	<ul style="list-style-type: none"> <li>• Adjust the focus. (→ page 26)</li> <li>• Reposition the projector to improve its angle to the screen. (→ page 23)</li> <li>• Ensure that the distance between the projector and screen is within the adjustment range of the lens. (→ page 87)</li> <li>• Has the lens been shifted by an amount exceeding the guaranteed range? (→ page 25)</li> <li>• Condensation may form on the lens if the projector is cold, brought into a warm place and is then turned on. Should this happen, let the projector stand until there is no condensation on the lens.</li> </ul>
The HDMI input signal is not projected correctly	<ul style="list-style-type: none"> <li>• The HDMI signal level may not be detected correctly. Check the signal level of the device connected to either the HDMI 1 or HDMI 2 input terminal and try changing the setting in [HDMI SETTINGS] in the on-screen menu under [SETUP(1)]. (→ page 56)</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• Is the volume turned down? (→ page 32) Or, is the [MUTE] function in the on-screen menu set to [ON]? (→ page 56)</li> </ul>
Remote control does not work	<ul style="list-style-type: none"> <li>• Aim the remote control's infrared transmitter towards the projector's remote control receiver. (→ page 16)</li> <li>• Install new batteries. (→ page 15)</li> <li>• Make sure there are no obstacles between you and the projector.</li> <li>• Stand within 23 feet (7 m) of the projector. (→ page 16)</li> <li>• If a [CONTROL ID] has been set, check whether the ID number for the remote control matches the ID number for the projector. (→ page 67)</li> </ul>
Indicator is lit or blinking	<ul style="list-style-type: none"> <li>• See the POWER/STATUS/LIGHT Indicator. (→ page 104)</li> </ul>

For more information contact your dealer.

## 9-9. Indicator Message

### Feature of each indicator

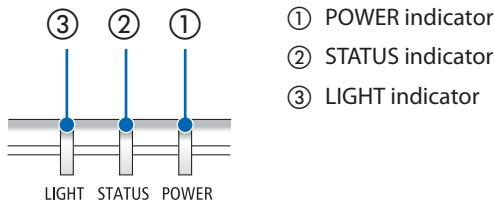

### Normal indicator display

POWER	STATUS	LIGHT	Projector status
			Power is off
			Standby ([NORMAL] standby mode)
			Standby ([NETWORK STANDBY] standby mode)
			Standby ([SLEEP] standby mode)
			Power is on ([NORMAL] light mode)
			Power is on ([SILENT] or [LONG LIFE] light mode)
			Projector is cooling down
			Ready mode (→ page 64)

## Indicator display when there is an abnormality

POWER	STATUS	LIGHT	Projector status
 Blue (Lit)	 Orange (Lit)	Other statuses	When a button on the projector is pressed while the control panel keys are locked
			When the ID numbers of the projector and remote control do not match
 Red (Quick flashing)	 Off	 Off	A temperature error was detected. Check if the air intake and exhaust vents are blocked.
 Red (Lit)	Other statuses	Other statuses	Hardware error. Please contact your dealer.
 Red (Quick flashing)	Other statuses	Other statuses	

### **When the thermal protector is activated:**

When inside temperature of the projector becomes too high or low, the POWER indicator start to red blink in a short cycle. After this happened, the thermal protector will activate and the projector may be turned off.

In this case, please take the below measures:

- Pull out the power plug from the wall inlet.
- Place the projector in cool place if it has been placed in high ambient temperature.
- Clean the exhaust vent if dust has accumulated on.
- Leave the projector for about one hour until inside temperature gets lower.

## 9-10. Troubleshooting Check List

Before contacting your dealer or service personnel, check the following list to be sure repairs are needed also by referring to the "Troubleshooting" section in your user's manual. This checklist below will help us solve your problem more efficiently.

\* Print this page and the next page for your check.

### Frequency of occurrence:

always  sometimes (How often? \_\_\_\_\_)  other (\_\_\_\_\_)

### Power

- No power (POWER indicator does not light blue). See also "Status Indicator (STATUS)".
- Power cord's plug is fully inserted into the wall outlet.
- Main power switch is pressed to the ON position.
- No power even though you press and hold the POWER button.

- Shut down during operation.
- Power cord's plug is fully inserted into the wall outlet.
- [POWER MANAGEMENT] is turned off (only models with the [POWER MANAGEMENT] function).

### Video and Audio

- No image is displayed from your PC or video equipment to the projector.
- Still no image even though you connect the projector to the PC first, then start the PC.
- Enabling your notebook PC's signal output to the projector.
  - A combination of function keys will enable/disable the external display. Usually, the combination of the "Fn" key along with one of the 12 function keys turns the external display on or off.
- No image (blue or black background, no display).
- Still no image even though you carry out [RESET] in the projector's menu.
- Signal cable's plug is fully inserted into the input terminal
- A message appears on the screen.  
( \_\_\_\_\_ )
- The source connected to the projector is active and available.
- Still no image even though you adjust the brightness and/or the contrast.
- Input source's resolution and frequency are supported by the projector.
- Image is too dark.
- Remains unchanged even though you adjust the brightness and/or the contrast.
- Image is distorted.
- Image appears to be trapezoidal (unchanged even though you carry out the [KEYSTONE] adjustment).

- Parts of the image are lost.
  - Still unchanged even though you carry out [RESET] in the projector's menu.
- Image is shifted in the vertical or horizontal direction.
  - Input source's resolution and frequency are supported by the projector.
  - Some pixels are lost.
- Image is flickering.
  - Still unchanged even though you carry out [RESET] in the projector's menu.
  - Image shows flickering or color drift on a computer signal.
  - Still unchanged even though you change [FAN MODE] from [HIGH ALTITUDE] to [AUTO].
- Image appears blurry or out of focus.
  - Still unchanged even though you checked the signal's resolution on PC and changed it to projector's native resolution.
  - Still unchanged even though you adjusted the focus.
- No sound.
  - Audio cable is correctly connected to the audio input of the projector.
  - Still unchanged even though you adjusted the volume level.
  - AUDIO OUT is connected to your audio equipment (only models with the AUDIO OUT terminal).

### Other

- Remote control does not work.
  - No obstacles between the sensor of the projector and the remote control.
  - Projector is placed near a fluorescent light that can disturb the infrared remote controls.
  - ID for the projector and for the remote are same.

- Buttons on the projector cabinet do not work (only models with the [CONTROL PANEL LOCK] function)
  - [CONTROL PANEL LOCK] is not turned on or is disabled in the menu.

In the space below please describe your problem in detail.

### Information on application and environment where your projector is used

#### Projector

Model number:

Serial No.:

Date of purchase:

Light module operating time (hours):

LIGHT MODE:  NORMAL  SILENT  
 LONG LIFE

Information on input signal:

Horizontal synch frequency [      ] kHz

Vertical synch frequency [      ] Hz


Synch polarity H  (+)  (−)  
V  (+)  (−)

Indicator:

Steady light [      ]

Flashing light [      ] cycles

Remote control model number:

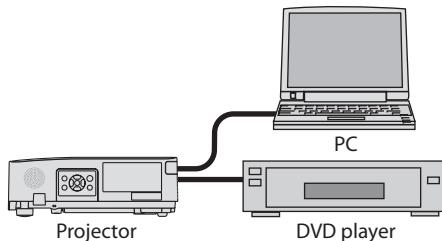

#### Signal cable

SHARP standard or other manufacturer's cable?

Model number: Length: inch/m

Distribution amplifier

Model number:

Switcher

Model number:

Adapter

Model number:

#### Installation environment

Screen size: inch

Screen type:  White matte  Beads  Polarization  
 Wide angle  High contrast

Throw distance: feet/inch/m

Orientation:  Ceiling mount  Desktop

Power outlet connection:

- Connected directly to wall outlet
- Connected to power cord extender or other (the number of connected equipment \_\_\_\_\_)
- Connected to a power cord reel or other (the number of connected equipment \_\_\_\_\_)

#### Computer

Manufacturer:

Model number:

Notebook PC  / Desktop

Native resolution:

Refresh rate:

Video adapter:

Other:

#### Video equipment

VCR, DVD player, Video camera, Video game or other

Manufacturer:

Model number:

**SHARP**  
SHARP CORPORATION